

PARTS CATALOGUE

MODEL YEAR 1999

WR400FL (5GS1)

Color Code	Color Name	Abbreviation
583	DEEP PURPLISH BLUE SOLID E	DPBSE

OWNERS/SERVICE: LIT-11626-12-58

ASSEMBLY: LIT-11666-12-58

FOREWORD

-INTRODUCTION- To The Yamaha Parts Fiche

This parts fiche lists parts and sub-assemblies for the WR400FL. When preparing a parts order, please refer to the most recently updated microfiche for this model.

THE YAMAHA PARTS FICHE

SYMBOLS

[]	Inactive, no longer available
U.R.	Use size (thickness) and/or number as required
U.N.	Use as many as you need
T	Number of teeth in a gear
V	Voltage for light bulbs
S	"S" type oil seal or "S" type circlip
SD,SO,SW	"SD", "SO", or "SW" type oil seal
E,R	"E" or "R" type circlip
F/No.	Frame No. (Applicable Machine No.)
L.M.	Locally made
O.L.	Obtain locally
AP	Alternate Part

SUPERSEDED PART NUMBERS

If part 'A' has been superseded by part 'B', the superseding part number "B" will appear in the part number listing with the superseded part number "A" appearing in parentheses immediately following the description.

EXAMPLE:

Ref. No.	Part No.	Description	Qty.
	(Part 'B')	(Part 'A')	
8	123-45678-00-00	CYLINDER (111-12345-00-00)	1

A part that has been superseded to a kit may be identified by a 99999-00000-00 part number appearing in the part number column. The old superseded part number will appear in parentheses immediately following the description. Listed directly below the 99999 part number will be those parts making up the kit. The description of the parts making up the kit will be preceded by a small black dot (.) and the description will be indented one letter space.

EXAMPLE:

Ref. No.	Part No.	Description	Qty.
8	99999-12345-00	CYLINDER (111-12345-00-00)	1
	234-56789-00-00	• HEAD, CYLINDER	1
	345-67890-00-00	• GASKET, CYLINDER	1

SIZES

Except for steel balls (ball sizes are indicated in inches), all parts sizes are indicated in millimeters as in the following examples:

Hose (Rubber or Vinyl)	Inside Diameter - Length
O-Ring	Section Area - Inside Diameter
Washer, Shim, Collar	Inside Diameter - Outside Diameter Thickness (Length)

ASSEMBLIES AND COMPONENT PARTS

Assemblies and their component parts, are identified by an indentation of one letter space, and the description is preceded by a dot (.). If two main assemblies are listed, and have the same basic description (i.e.: left and right sides of the same assembly), one will immediately follow the other. If each of these main assemblies is made up of almost the same components, these component parts will be listed immediately under the second main assembly line and will be indicated, as noted above.

 
If the component is the same for both main assemblies, the quantity indicated will be the total required. If the component is not the same for both main assemblies, the quantity for each separate item will be listed separately.

EXAMPLE:


Description	Qty
CARBURETOR ASSY, LEFT	1
CARBURETOR ASSY, RIGHT	1
. JET, PILOT	2
. NOZZLE, MAIN	2
. LEVER, STARTER, LEFT	1
. LEVER, STARTER, RIGHT	1

APPLICABLE SERIAL NO.

(1) Engine Serial No.

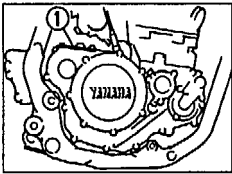

 (2) Frame Serial No.

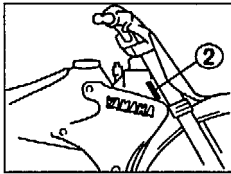


FOREWORD

THE YAMAHA PART NUMBER

The Yamaha part number consists of 12 digits. Each number represents a specific piece of information relating to a replacement part. The following is a guide for reading and interpreting the Yamaha part number.

 BASIC PART NUMBER CONFIGURATION:

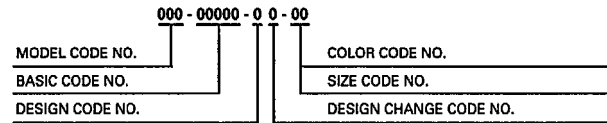

MODEL CODE NUMBER

FIRST THREE DIGITS . . . 000-00000-00-00

 
Every model in each Yamaha product line is assigned a model number to identify that particular model. All component parts are given the model code number relating to the model on which they were first used.

Example: 4DU-00000-00-00 identifies the XJ600SE.
3FA-00000-00-00 identifies the YFA1E.

BASIC CODE NUMBER


MIDDLE FIVE DIGITS . . . 000-00000-00-00

These "Middle Five Digits" indicate the type of part i.e., piston, rings, lower units, etc. The five digits are broken down as follows:



The "Major Classification" indicates the section to which the parts belong, i.e., engine, electrical etc. The "Intermediate" and "Minor Classifications" indicate more specific details.

 Example:



DESIGN CODE NUMBER: 000-00000-00-00

The design code distinguishes like component parts from one another when specification differences are involved. For example, distinguishing a standard size piston ring from an oversized piston ring.

Example:

4BR-11610-0 0 0-00 Standard Piston Ring Set for XJ600SE
4BR-11610-2 2 0-00 Oversize Piston Ring Set for XJ600SE

DESIGN CHANGE CODE NUMBER: 000-00000-00-00

This code number is used to identify a difference between a new component part and old one when a new part is created by changing the old one.

Example: YFZ350E

2GU-11610-0 0 0-00 PISTON RING SET, STD. - ORIGINAL
2GU-11610-0 1 0-00 PISTON RING SET, STD. - FIRST DESIGN CHANGE

 
Only major changes to performance, durability, quality, appearance, cost or interchangeability will affect a part number change.

COLOR CODE & SIZE CODE NUMBER: 000-00000-00-00

When applicable, the last two digits of the part number identify:

1. Color Code: The painted color or type of plating or surface treatment used on certain parts.
2. Size Code: The last two digits are also used to show the size of parts (mm). Such as the thickness of shims or the size of pistons.

HARDWARE (Fastener) PART NUMBER CONFIGURATION:

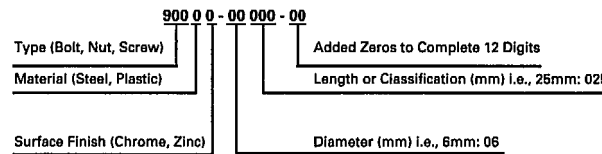

TYPE:

A fastener part number always begins with the number "9" followed by either a 0, 1, 2, 3, 4, 5, 6, 7 or 8 designating one of eight major divisions within this group.

 
FOREWORD

Example:

- 9 0 000-00000-00 "0" designates various types.
- 9 1 000-00000-00 "1" designates bolts, cotter pins, etc.
- 9 2 000-00000-00 "2" designates screw, nuts, etc.
- 9 3 000-00000-00 "3" designates oil seals, o-rings, bearings, etc.
- 9 4 000-00000-00 "4" designates spark plugs.
- 9 5 000-00000-00 "5" designates bolts and nuts.
- 9 7 000-00000-00 "7" designates ISO bolts.
- 9 8 000-00000-00 "8" designates ISO screws and nuts.

The only major divisions which the mechanic should become familiar with are those related to the general hardware (nuts, bolts, and washers), since these are the most commonly used and most often replaced items. By knowing how to interpret the part number, the dimensions of a piece of hardware can be determined. This can be very helpful during major engine repair, and general parts replacement.


BOLT EXAMPLE:



EXCEPTION:

It is NOT possible to identify the LENGTH of bolts having a 901 prefix. Only the bolt diameter can be identified with this number.

 
NUT AND WASHER EXAMPLE:

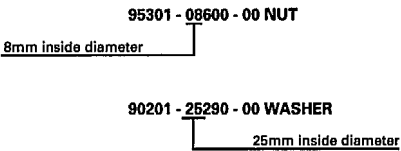


-MODEL LABEL-

A label called "Model Label" is affixed in the location as indicated in (3) below. When using this parts catalogue, please be sure to cross-reference the "model code - production code No." in the catalogue to the "model code - production code No." indicated on the Model Label affixed onto the product concerned.

 "MODEL LABEL" INDICATION




MODEL LABEL AFFIXING LOCATION

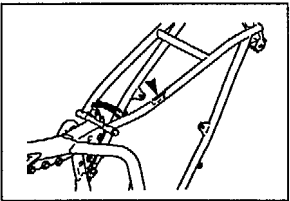 

MODEL CODE - PRODUCTION CODE NUMBER OF MODEL LISTED IN THIS PARTS CATALOG

Model Code	Production Code No.	Country (destination)
5GS1	010	USA

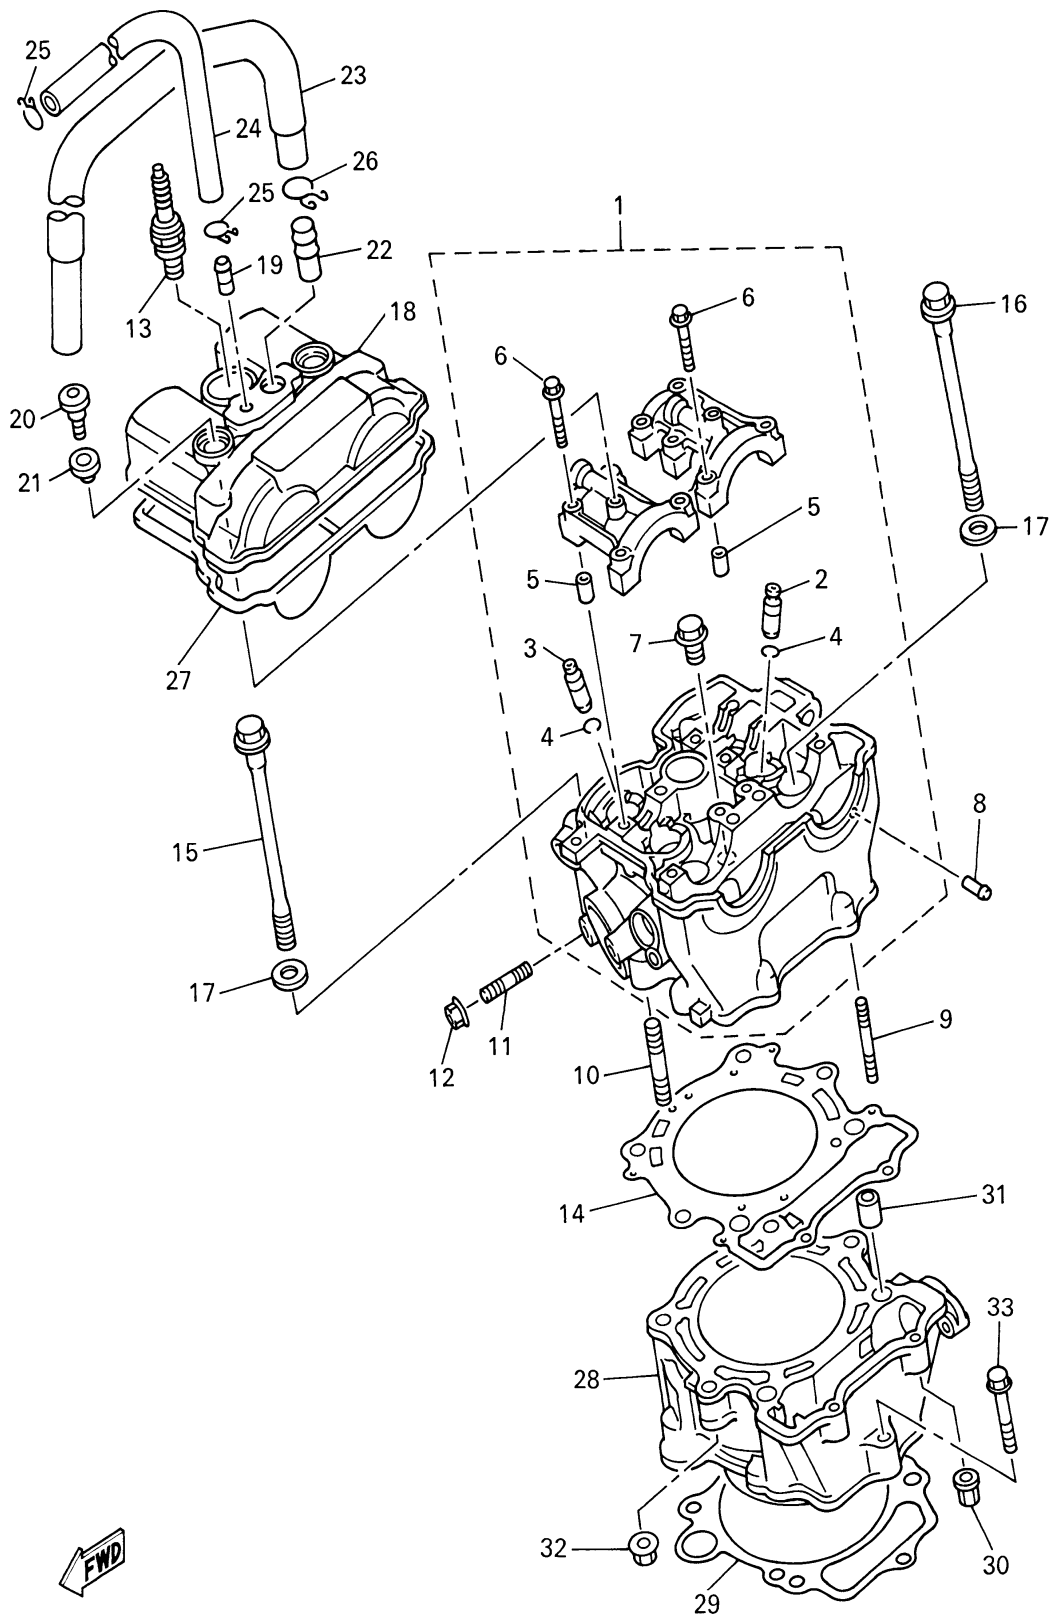 


CYLINDER

Ref. No.	Part Number	Description	Qty	Remarks
1	5BE-11102-10-00	CYLINDER HEAD ASSEMBLY .	1	
2	5BE-11133-10-00	. GUIDE, INTAKE VALVE	3	
3	5BE-11134-10-00	. GUIDE, EXHAUST VALVE . . .	2	
4	93440-10153-00	. CIRCLIP	5	
5	91808-16023-00	. PIN, DOWEL	4	
6	90105-067A6-00	. BOLT, WASHER BASED	10	
7	90340-12112-00	. PLUG, STRAIGHT SCREW . . .	1	
8	5BE-13582-00-00	PIPE	1	
9	95617-06635-00	BOLT, STUD	2	
10	95617-08635-00	BOLT, STUD	2	
11	95617-08620-00	BOLT, STUD	1	
12	95707-08500-00	NUT, FLANGE	1	
13	NGK-CR8E0-00-00	PLUG, SPARK (NGK-R CR8E) .	1	UR
14	5GR-11181-00-00	GASKET, CYLINDER HEAD 1 .	1	
15	90105-104A7-00	BOLT, WASHER BASED	2	
16	90105-106A3-00	BOLT, WASHER BASED	2	
17	90201-101A4-00	WASHER, PLATE	4	
18	5BE-11191-00-00	COVER, CYLINDER HEAD 1 . .	1	
19	5BE-11167-00-00	PIPE, BREATHER 2	1	
20	90109-066F0-00	BOLT	2	
21	4KG-1111G-00-00	RUBBER, MOUNT 1	2	
22	371-11167-01-00	PIPE, BREATHER 2	1	
23	5BE-11166-00-00	PIPE, BREATHER 1	1	
24	90445-112K0-00	HOSE	1	
25	90467-11106-00	CLIP	2	
26	90467-14015-00	CLIP	1	
27	5BE-11193-00-00	GASKET, HEAD COVER 1	1	
28	5BE-11311-10-00	CYLINDER 1	1	
29	5BF-11351-00-00	GASKET, CYLINDER	1	

CONTINUED ON NEXT FRAME ►



 5BE100-8010

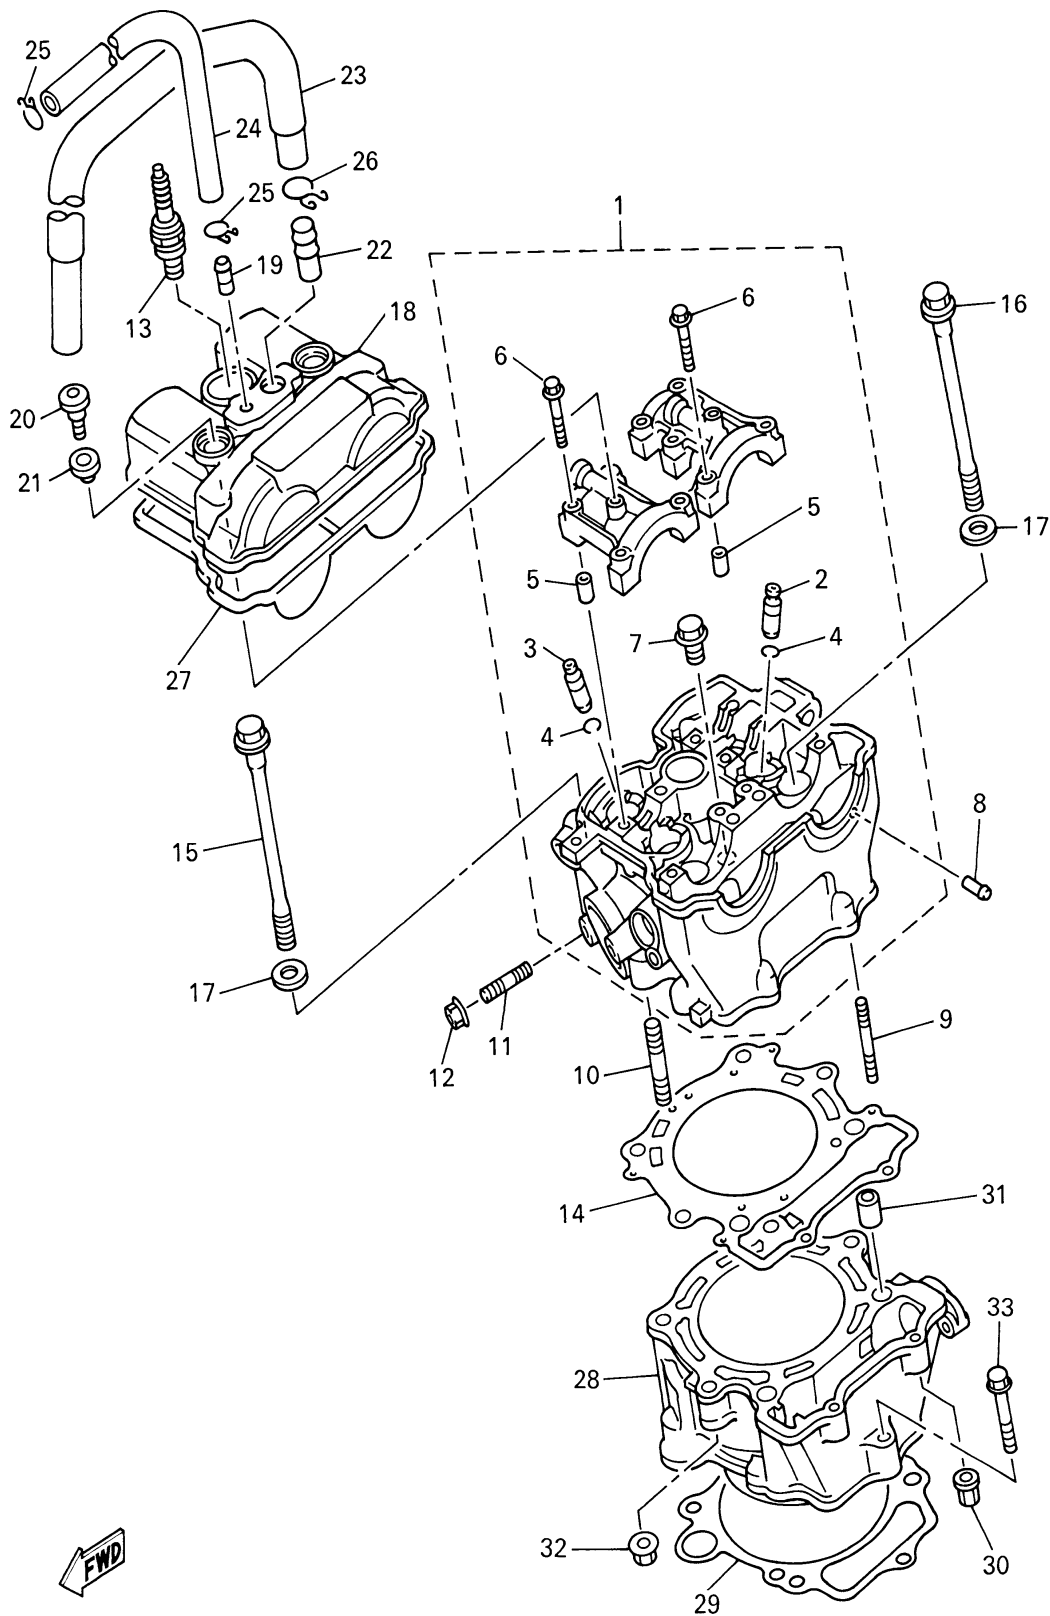


5BE100-8010

CYLINDER

Ref. No.	Part Number	Description	Qty	Remarks
30	90179-06500-00	NUT	2	
31	93612-16254-00	PIN, DOWEL	2	
32	90179-08270-00	NUT	2	
33	95027-06040-00	BOLT, FLANGE	1	

 
CRANKSHAFT - PISTON

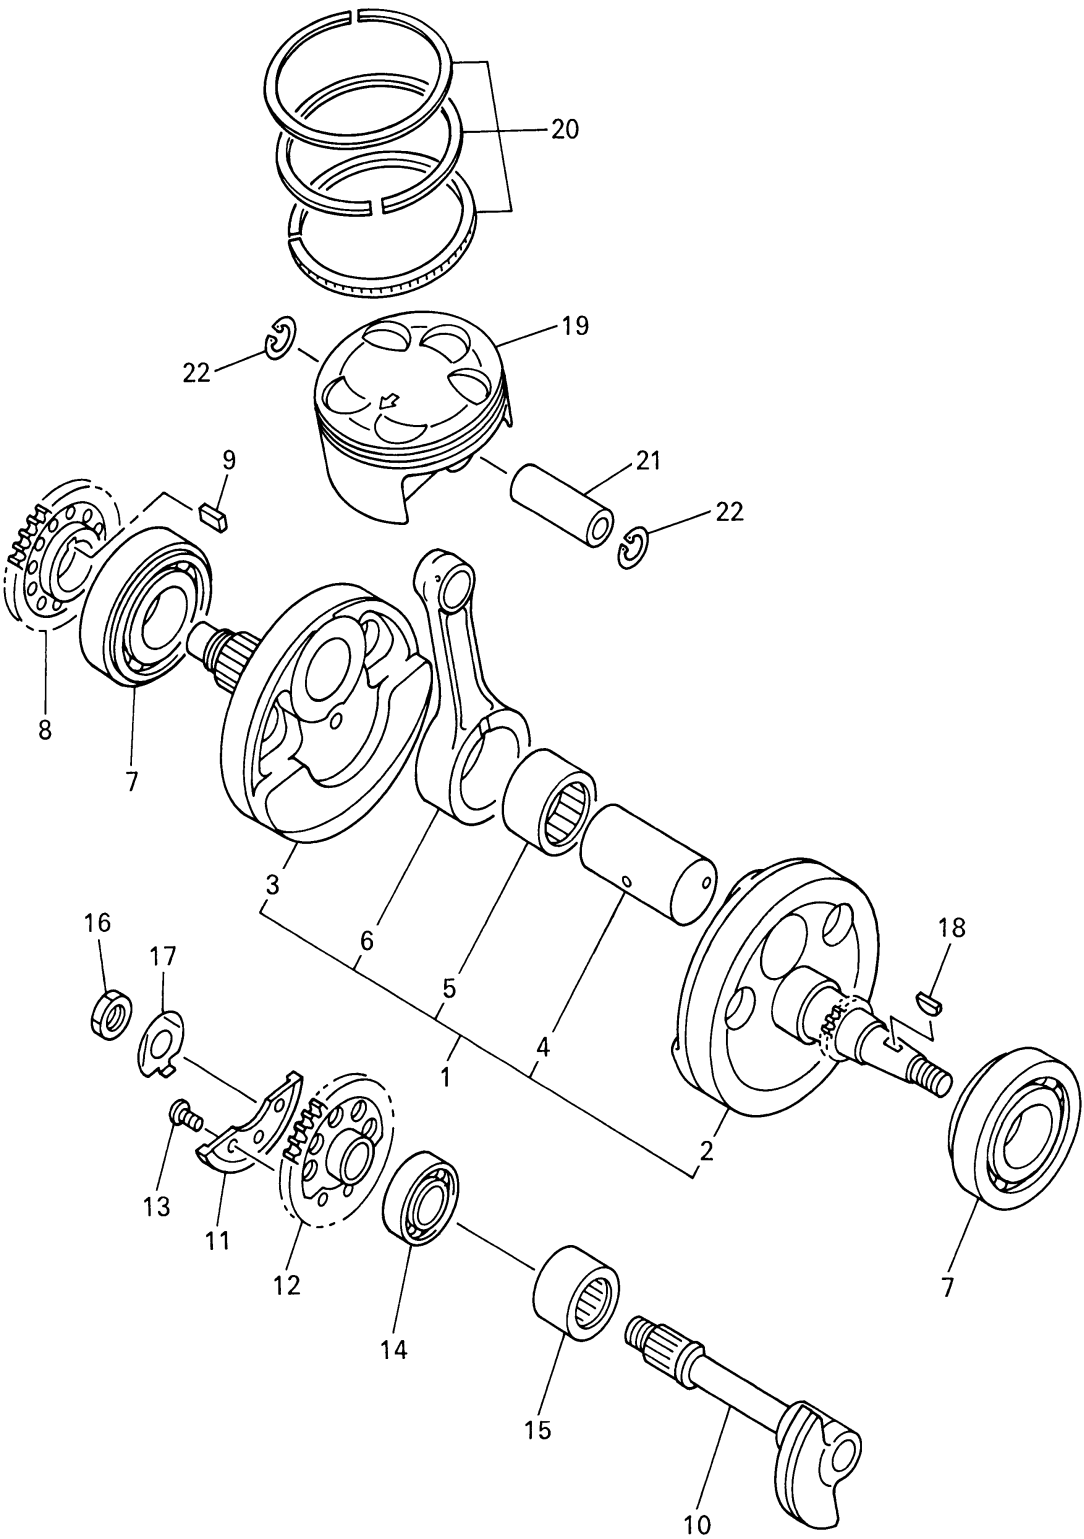

Ref. No.	Part Number	Description	Qty	Remarks
1	5GR-11400-00-00	CRANKSHAFT ASSEMBLY ...	1	
2	5GR-11412-00-00	. CRANK 1	1	
3	5GR-11422-00-00	. CRANK 2	1	
4	5BE-11681-00-00	. PIN, CRANK 1	1	
5	93310-6340H-00	. BEARING	1	
6	5BE-11651-00-00	. ROD, CONNECTING	1	
7	93306-30633-00	BEARING	2	
8	5BE-11536-00-00	GEAR, DRIVE	1	
9	90282-05034-00	KEY, STRAIGHT	1	
10	5BE-11455-00-00	SHAFT 1	1	
11	5BE-11454-00-00	WEIGHT 1	1	
12	5BE-11531-00-00	GEAR, BALANCE WT	1	
13	90149-06250-00	SCREW	3	
14	93306-20335-00	BEARING	1	
15	93311-62574-00	BEARING	1	
16	90170-14171-00	NUT	1	
17	90215-14204-00	WASHER, LOCK	1	
18	90280-03045-00	KEY, WOODRUFF	1	
19	5GR-11631-00-00	PISTON (STD)	1	
20	5BE-11603-00-00	PISTON RING SET (STD)	1	
21	5GR-11633-00-00	PIN, PISTON	1	
22	93420-18082-00	CIRCLIP	2	



 5BE100-8020

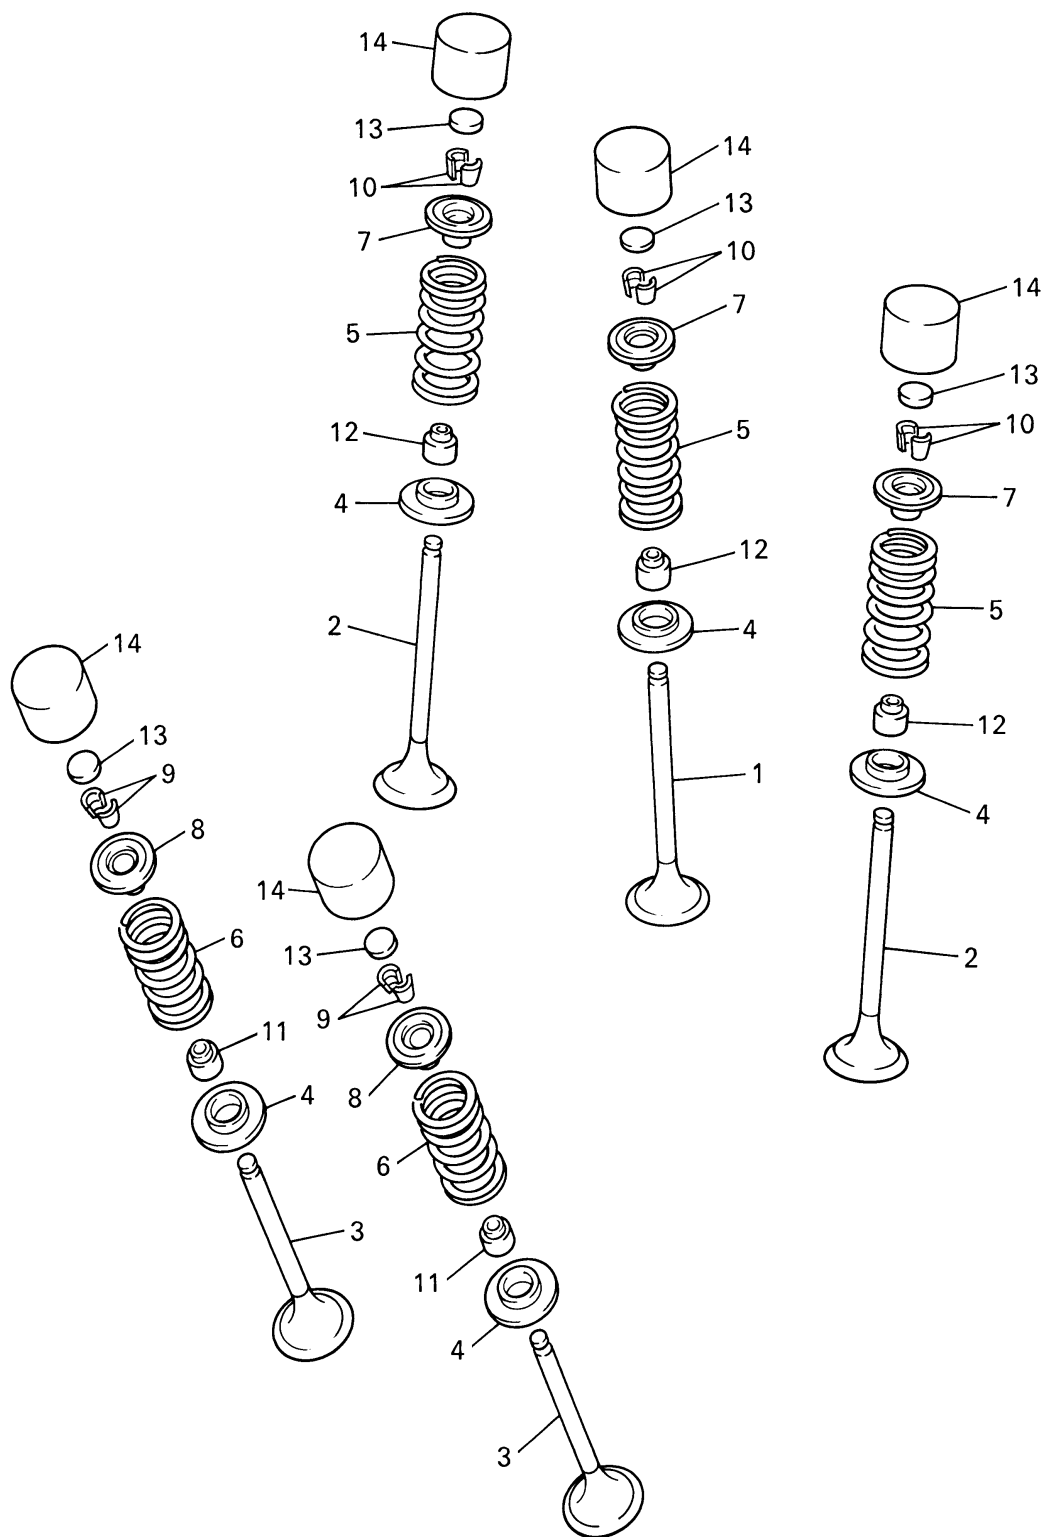

VALVE

Ref. No.	Part Number	Description	Qty	Remarks
1	5BE-12111-00-00	VALVE, INTAKE	1	
2	5BE-12112-00-00	VALVE, INTAKE 2	2	
3	5BE-12121-00-00	VALVE, EXHAUST	2	
4	3GM-12126-00-00	SEAT, VALVE SPRING 2	5	
5	5BE-12113-00-00	SPRING, VALVE INNER	3	
6	5GR-12114-00-00	SPRING, VALVE OUTER	2	
7	5BE-12117-00-00	RETAINER, VALVE SPRING ..	3	
8	4GY-12117-00-00	RETAINER, VALVE SPRING ..	2	
9	1AA-12118-00-00	COTTER, VALVE	4	
10	1WG-12118-00-00	COTTER, VALVE	6	
11	33M-12119-00-00	SEAL, VALVE STEM	2	
12	4SV-12119-00-00	SEAL, VALVE STEM	3	
13	3LD-12168-00-00	PAD, ADJUSTING (1.20)	5	UR
	3LD-12168-20-00	PAD, ADJUSTING (1.25)	5	UR
	3LD-12168-40-00	PAD, ADJUSTING (1.30)	5	UR
	3LD-12168-60-00	PAD, ADJUSTING (1.35)	5	UR
	3LD-12168-80-00	PAD, ADJUSTING (1.40)	5	UR
	3LD-12168-A0-00	PAD, ADJUSTING (1.45)	5	UR
	3LD-12168-F0-00	PAD, ADJUSTING (1.50)	5	UR
	3LD-12168-H1-00	PAD, ADJUSTING (1.55)	5	UR
	3LD-12168-K1-00	PAD, ADJUSTING (1.60)	5	UR
	3LD-12168-M1-00	PAD, ADJUSTING (1.65)	5	UR
	3LD-12168-R1-00	PAD, ADJUSTING (1.70)	5	UR
	3LD-12168-U1-00	PAD, ADJUSTING (1.75)	5	UR
	3LD-12168-W1-00	PAD, ADJUSTING (1.80)	5	UR
	3LD-12168-Y1-00	PAD, ADJUSTING (1.85)	5	UR
	3LD-12169-11-00	PAD, ADJUSTING (1.90)	5	UR
	3LD-12169-31-00	PAD, ADJUSTING (1.95)	5	UR
	3LD-12169-50-00	PAD, ADJUSTING (2.00)	5	UR

CONTINUED ON NEXT FRAME ➤




5BE100-8030



WR400FL

Ref. No.	Part Number	Description	Qty	Remarks
13	3LD-12169-70-00	PAD, ADJUSTING (2.05)	5	UR
	3LD-12169-90-00	PAD, ADJUSTING (2.10)	5	UR
	3LD-12169-E0-00	PAD, ADJUSTING (2.15)	5	UR
	3LD-12169-G0-00	PAD, ADJUSTING (2.20)	5	UR
	3LD-12169-J0-00	PAD, ADJUSTING (2.25)	5	UR
	3LD-12169-L0-00	PAD, ADJUSTING (2.30)	5	UR
	3LD-12169-N0-00	PAD, ADJUSTING (2.35)	5	UR
	3LD-12169-T0-00	PAD, ADJUSTING (2.40)	5	UR
14	3FV-12153-00-00	LIFTER, VALVE	5	UR BLACK
	3FV-12153-10-00	LIFTER, VALVE	5	UR YELLOW
	3FV-12153-20-00	LIFTER, VALVE	5	UR BLUE

 CAMSHAFT - CHAIN

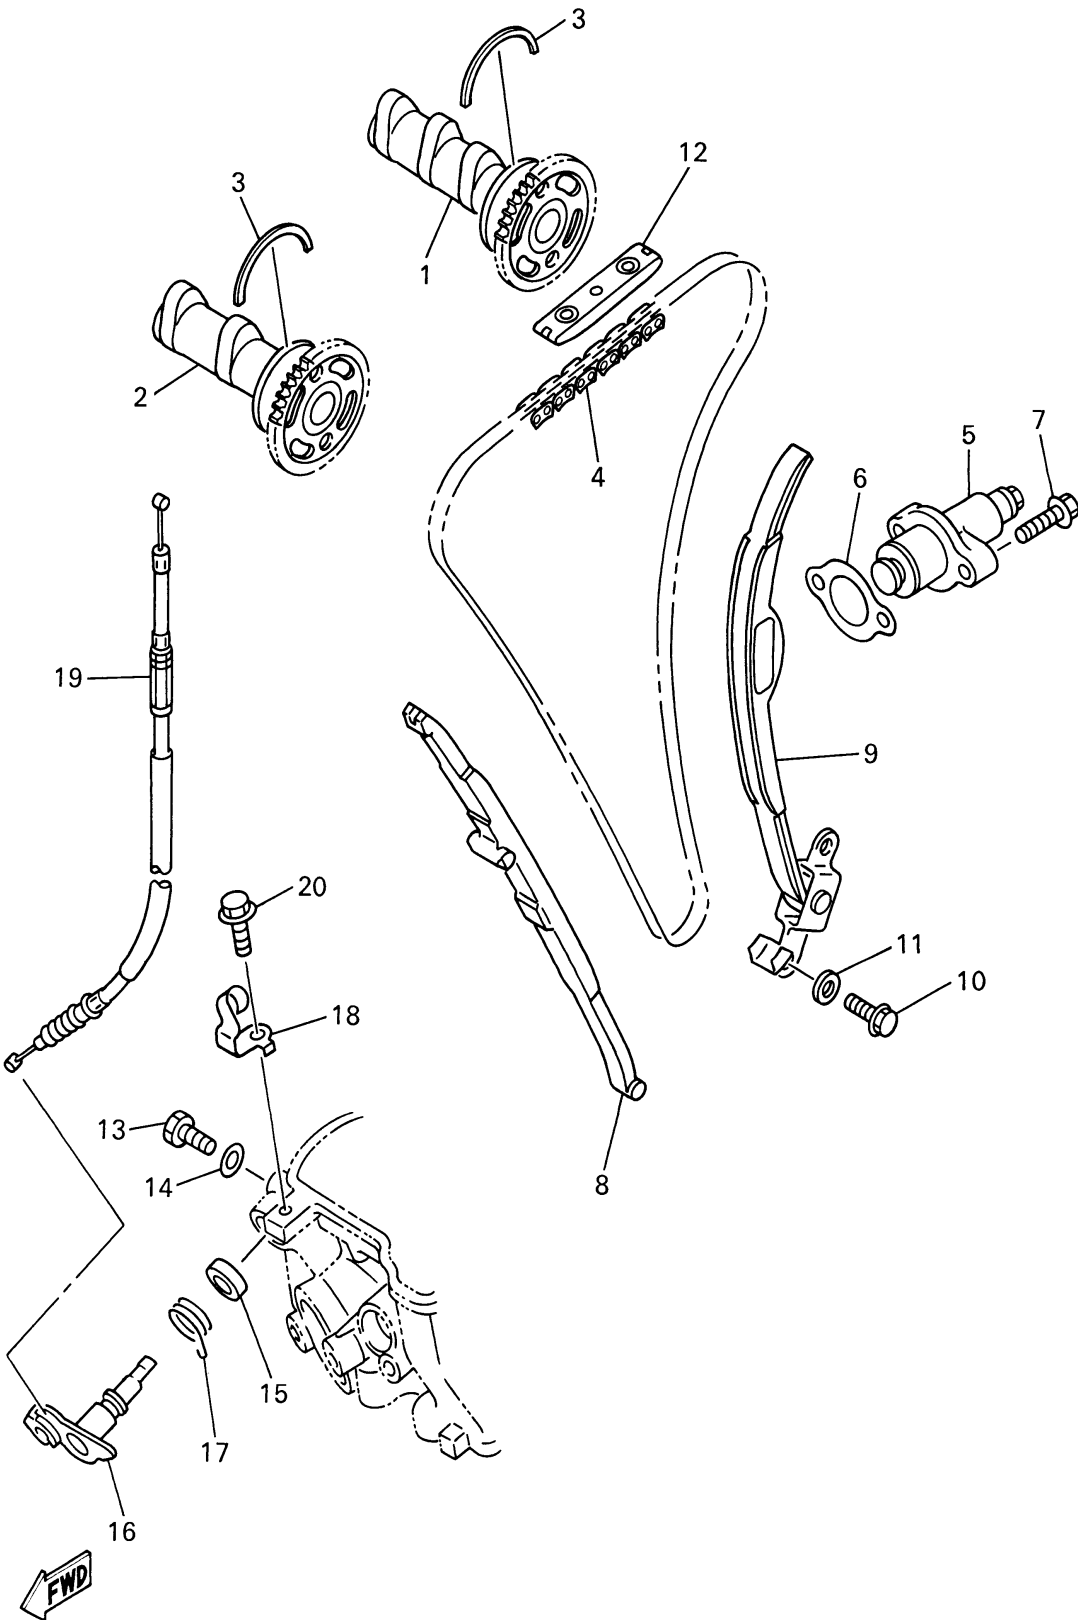


5GR100-9040

Ref. No.	Part Number	Description	Qty	Remarks
1	5BF-12170-00-00	CAMSHAFT ASSEMBLY 1	1	
2	5BF-12180-00-00	CAMSHAFT ASSEMBLY 2	1	
3	93440-41178-00	CIRCLIP	2	
4	94591-50120-00	CHAIN	1	
5	5BE-12210-00-00	TENSIONER ASSEMBLY, CAM CHAIN	1	
6	4FM-12213-00-00	GASKET, TENSIONER CASE . .	1	
7	95027-06025-00	BOLT, FLANGE	2	
8	5BE-12251-00-00	DAMPER, CHAIN 1	1	
9	5BE-12252-00-00	DAMPER, CHAIN 2	1	
10	97027-06016-00	BOLT	2	
11	92907-06600-00	WASHER, PLATE	2	
12	5BE-12241-00-00	GUIDE, STOPPER 2	1	
13	90109-06418-00	BOLT	1	
14	90430-06014-00	GASKET	1	
15	93102-12224-00	OIL SEAL	1	
16	5BE-12280-10-00	DECOMPRESSION ASSEMBLY	1	
17	90508-162B2-00	SPRING, TORSION	1	
18	5BE-12283-00-00	BRACKET, DECOMPRESSION .	1	
19	5BE-12292-00-00	CABLE, DECOMPRESSION ...	1	
20	95827-06014-00	BOLT, FLANGE	1	


WATER PUMP

Ref. No.	Part Number	Description	Qty	Remarks
1	5GR-12458-00-00	SHAFT, IMPELLER	1	
2	5DJ-12451-00-00	IMPELLER, WATER PUMP	1	
3	90201-08512-00	WASHER, PLATE	1	
4	93109-11073-00	OIL SEAL	1	
5	93102-12106-00	OIL SEAL (SD 12-22-5 HS)	1	
6	93306-00105-00	BEARING (B6001)	1	
7	5BE-12422-10-00	COVER, HOUSING	1	
8	5BE-12439-00-00	O-RING	1	
9	93604-10011-00	PIN, DOWEL	2	
10	90430-06014-00	GASKET	1	
11	95027-06025-00	BOLT, FLANGE	4	
12	5BE-12564-00-00	PIPE, WATER	2	
13	93210-19758-00	O-RING	2	

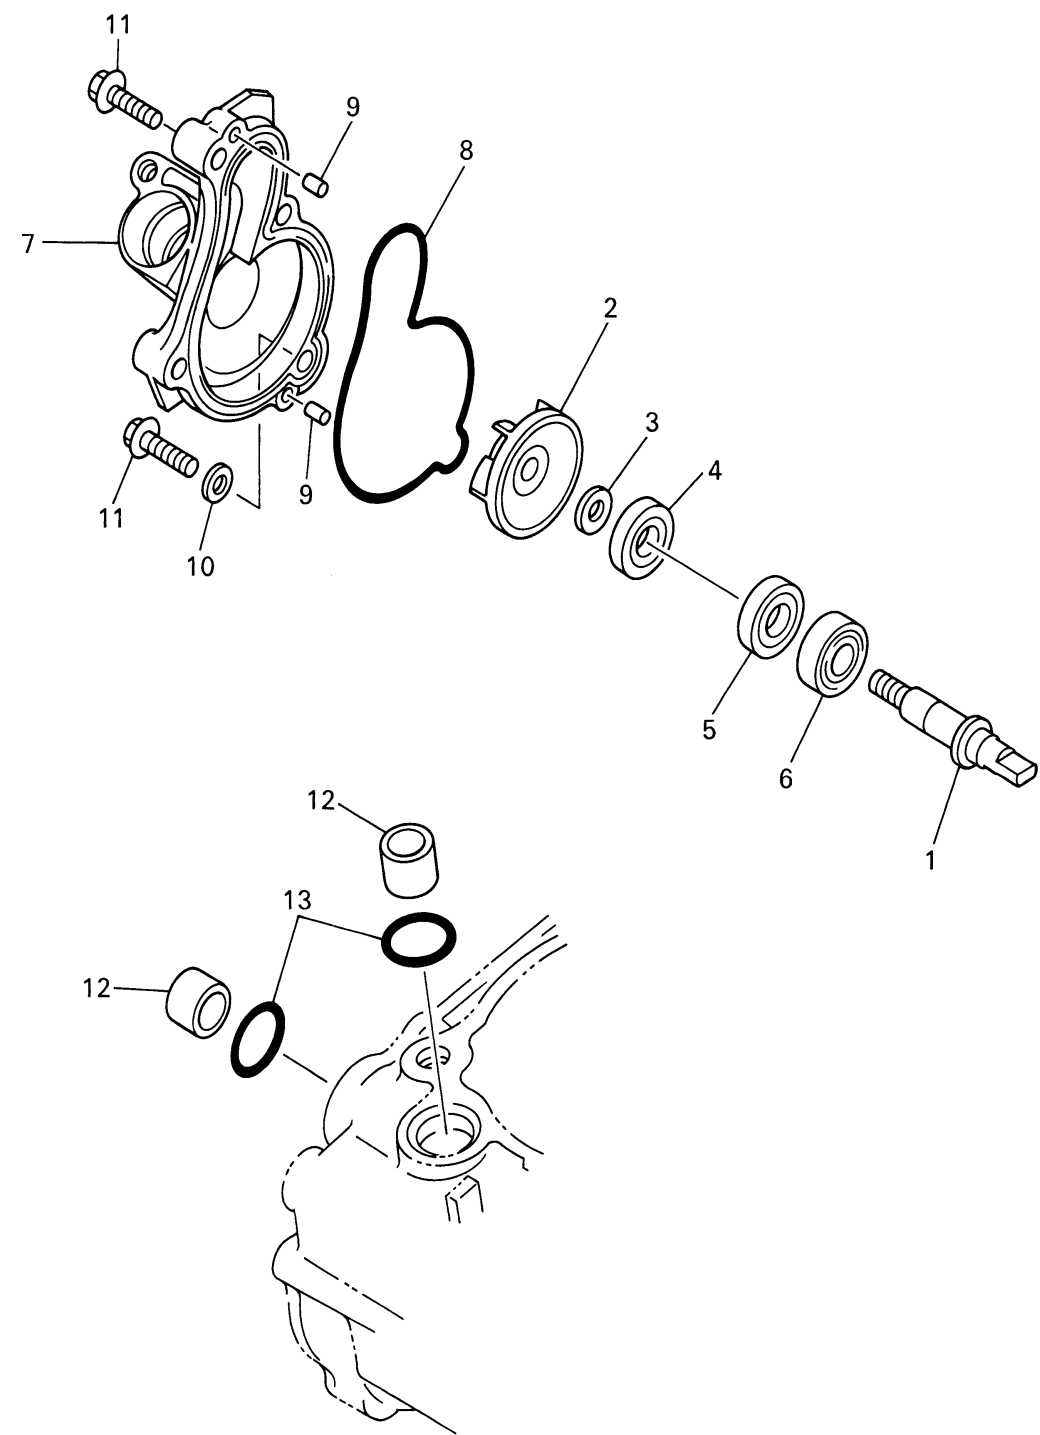 

5BE100-8050

 RADIATOR - HOSE

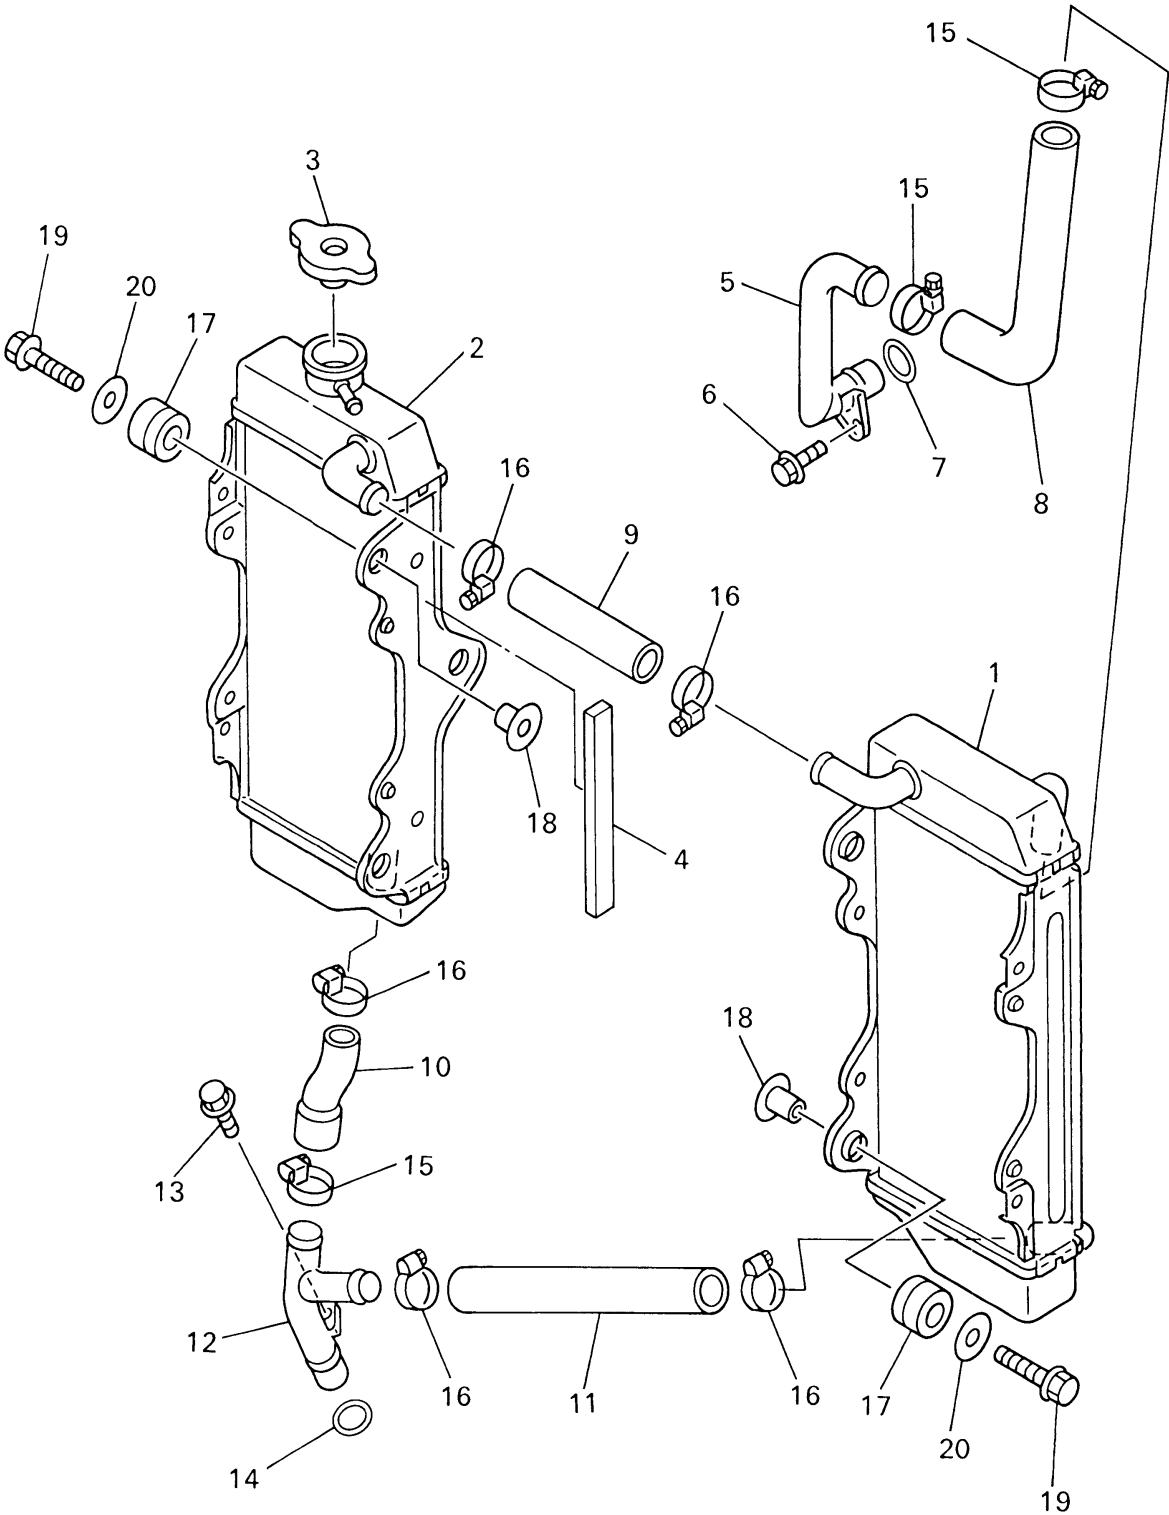


Ref. No.	Part Number	Description	Qty	Remarks
1	5BF-1240A-00-00	RADIATOR ASSEMBLY	1	
2	5BF-12461-00-00	RADIATOR ASSEMBLY	1	
3	22W-12462-00-00	CAP, RADIATOR	1	
4	3GD-24181-00-00	DAMPER, LOCATING 1	1	
5	5BE-12481-00-00	PIPE 1	1	
6	95027-06012-00	BOLT, FLANGE	1	
7	93210-16500-00	O-RING	1	
8	5BE-12576-00-00	HOSE 1	1	
9	5BE-12577-00-00	HOSE 2	1	
10	5BE-12578-00-00	HOSE 3	1	
11	5BE-12579-00-00	HOSE 4	1	
12	5BE-12482-00-00	PIPE 2	1	
13	95027-06012-00	BOLT, FLANGE	1	
14	93210-16500-00	O-RING	1	
15	90450-28014-00	HOSE CLAMP ASSEMBLY ...	3	
16	90450-25037-00	HOSE CLAMP ASSEMBLY ...	5	
17	90480-15528-00	GROMMET	6	
18	90387-0614M-00	COLLAR	6	
19	95027-06025-00	BOLT, FLANGE	6	
20	90201-06071-00	WASHER, PLATE	6	



5BF100-8060

OIL PUMP


Ref. No.	Part Number	Description	Qty	Remarks
1	5BE-13300-00-00	OIL PUMP ASSEMBLY	1	
2	1HX-13310-00-00	ROTOR ASSEMBLY 1	1	
3	93603-17070-00	PIN, DOWEL	1	
4	93440-10085-00	CIRCLIP	1	
5	93210-10197-00	O-RING	1	
6	99530-10114-00	PIN, DOWEL	1	
7	99530-08012-00	PIN, DOWEL	1	
8	91317-06025-00	BOLT	2	
9	91314-06030-00	BOLT	1	
10	99001-08600-00	CIRCLIP	1	
11	5BE-13341-00-00	GEAR, OIL PUMP IDLE	1	
12	5BE-13342-00-00	SHAFT, IDLE GEAR	1	
13	99009-12400-00	CIRCLIP	1	
14	90201-12166-00	WASHER, PLATE	1	
15	5BE-13412-00-00	HOUSING, STRAINER	1	
16	95027-06025-00	BOLT, FLANGE	2	
17	5BE-13411-00-00	STRAINER, OIL	1	
18	5BE-13464-00-00	HOSE, OIL 1	1	
19	93210-10197-00	O-RING	1	
20	99530-10114-00	PIN, DOWEL	1	
21	95027-06025-00	BOLT, FLANGE	1	
22	90450-22017-00	HOSE CLAMP ASSEMBLY ...	1	
23	5BE-13416-00-00	PIPE, OIL 1	1	
24	5BE-13465-00-00	HOSE, OIL 2	1	
25	90450-22017-00	HOSE CLAMP ASSEMBLY ...	1	
26	93210-10197-00	O-RING	2	
27	99530-10114-00	PIN, DOWEL	2	
28	95027-06025-00	BOLT, FLANGE	1	
29	95024-06020-00	BOLT, FLANGE	1	

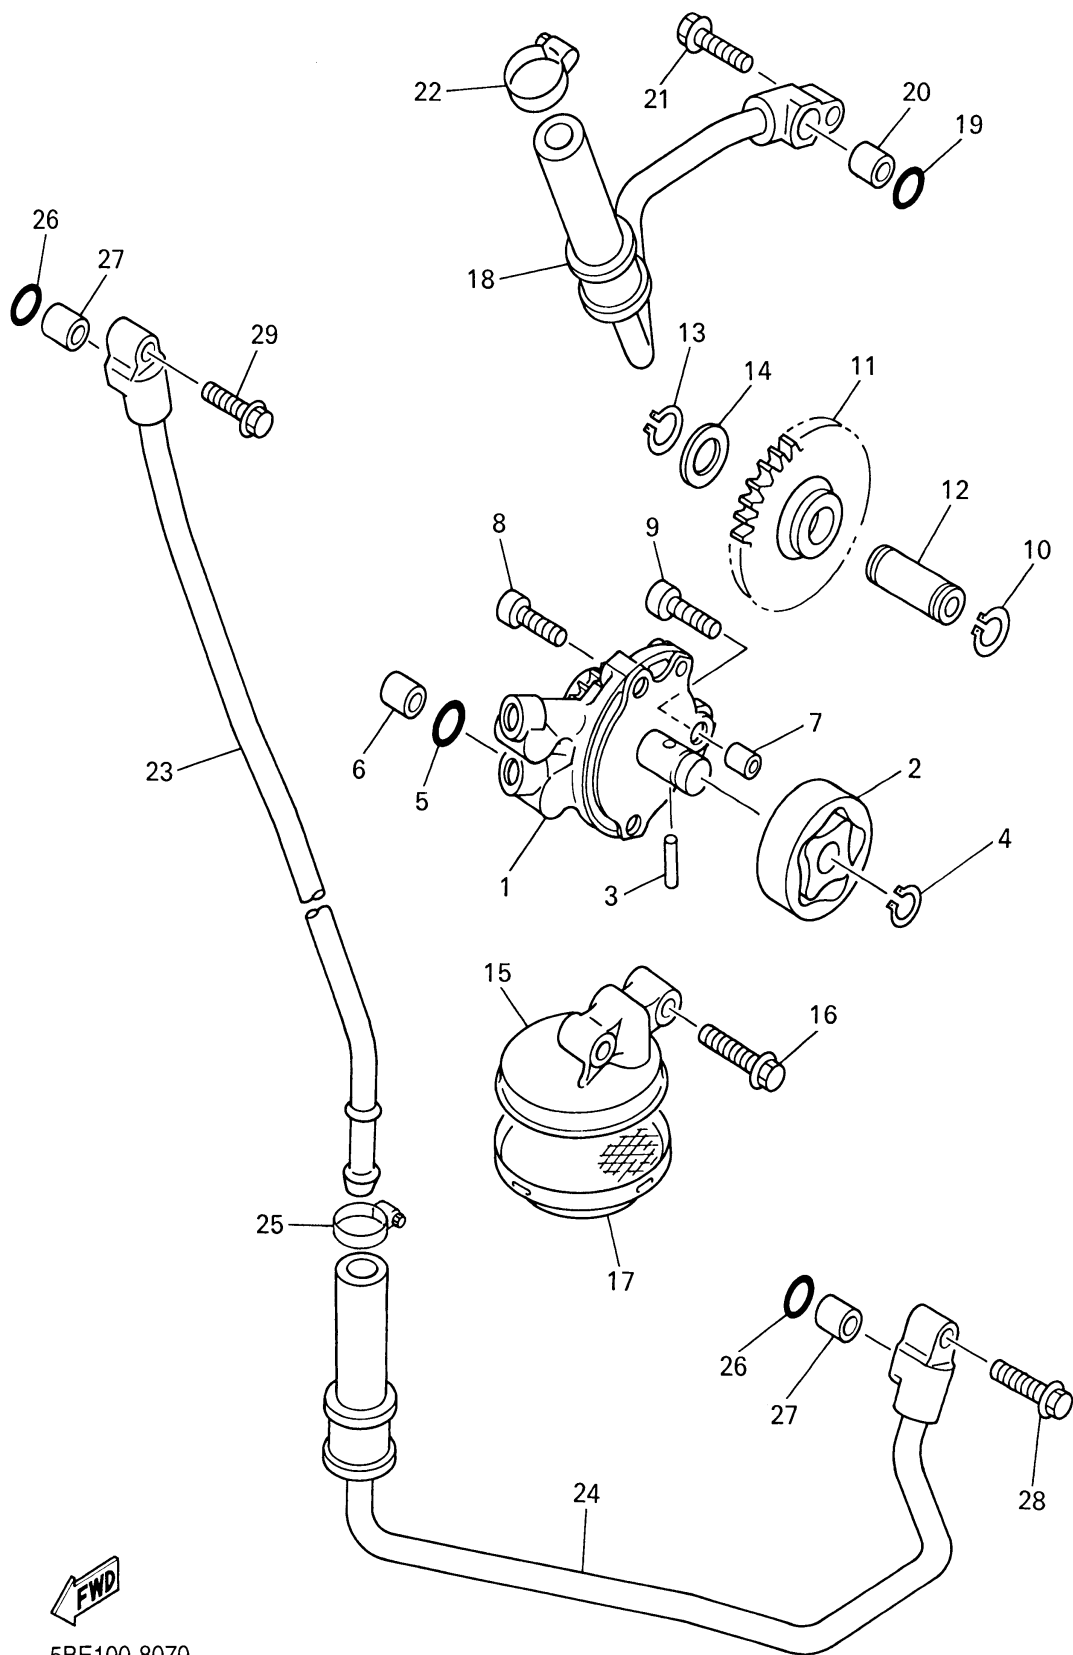 


5BE100-8070

OIL CLEANER

Ref. No.	Part Number	Description	Qty	Remarks
1	1UY-13440-02-00	ELEMENT ASSEMBLY, OIL CLEANER	1	
2	5BE-13447-00-00	COVER, OIL ELEMENT	1	
3	93210-50553-00	O-RING	1	
4	93210-07135-00	O-RING	3	
5	90109-065G2-00	BOLT	1	
6	95027-06065-00	BOLT, FLANGE	1	
7	95027-06020-00	BOLT, FLANGE	1	
8	5BE-13161-01-00	PIPE, DELIVERY 1	1	
9	90401-10159-00	BOLT, UNION	1	
10	90430-10188-00	GASKET	2	
11	90401-08038-00	BOLT, UNION	2	
12	90430-08119-00	GASKET	4	
13	5BE-13171-00-00	PIPE, DELIVERY 2	1	
14	93210-07003-00	O-RING	1	
15	93210-09008-00	O-RING	1	
16	93210-12759-00	O-RING	1	
17	95027-06012-00	BOLT, FLANGE	1	

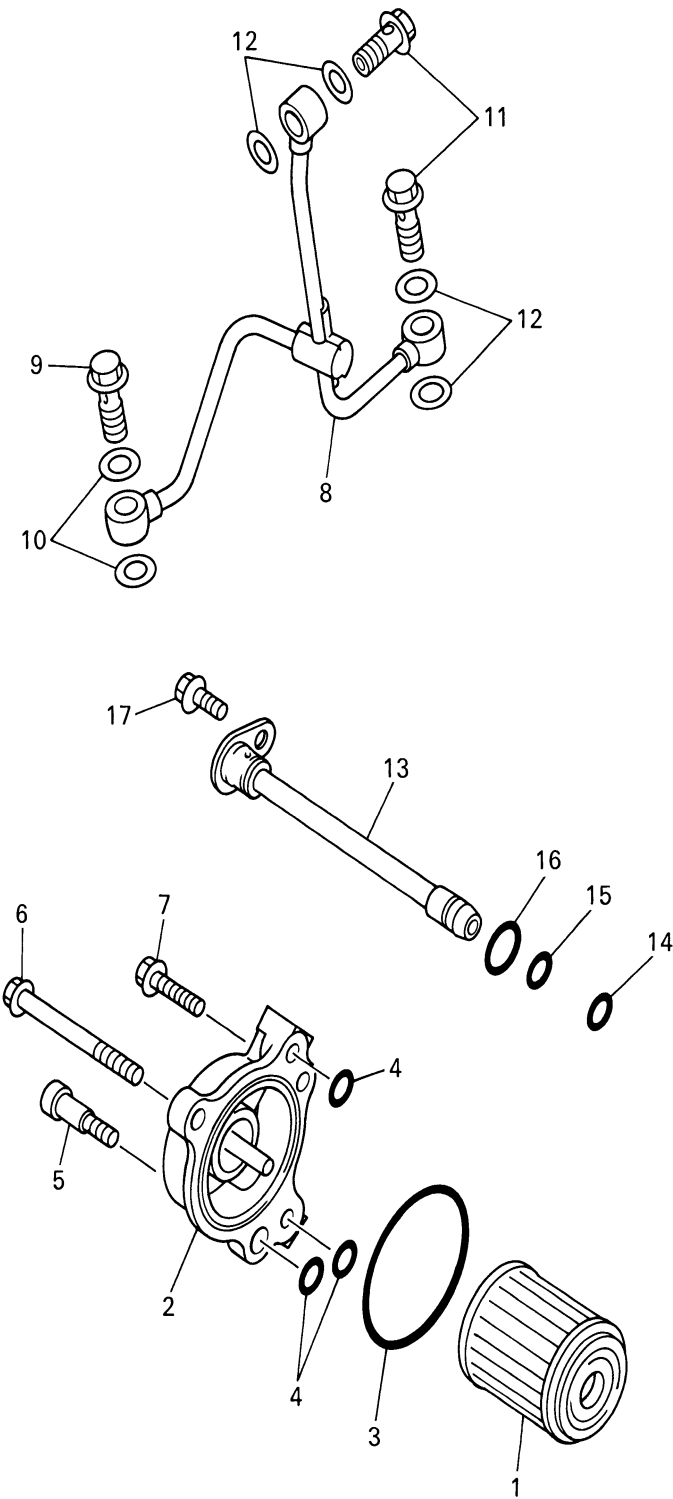 


5BE100-8080

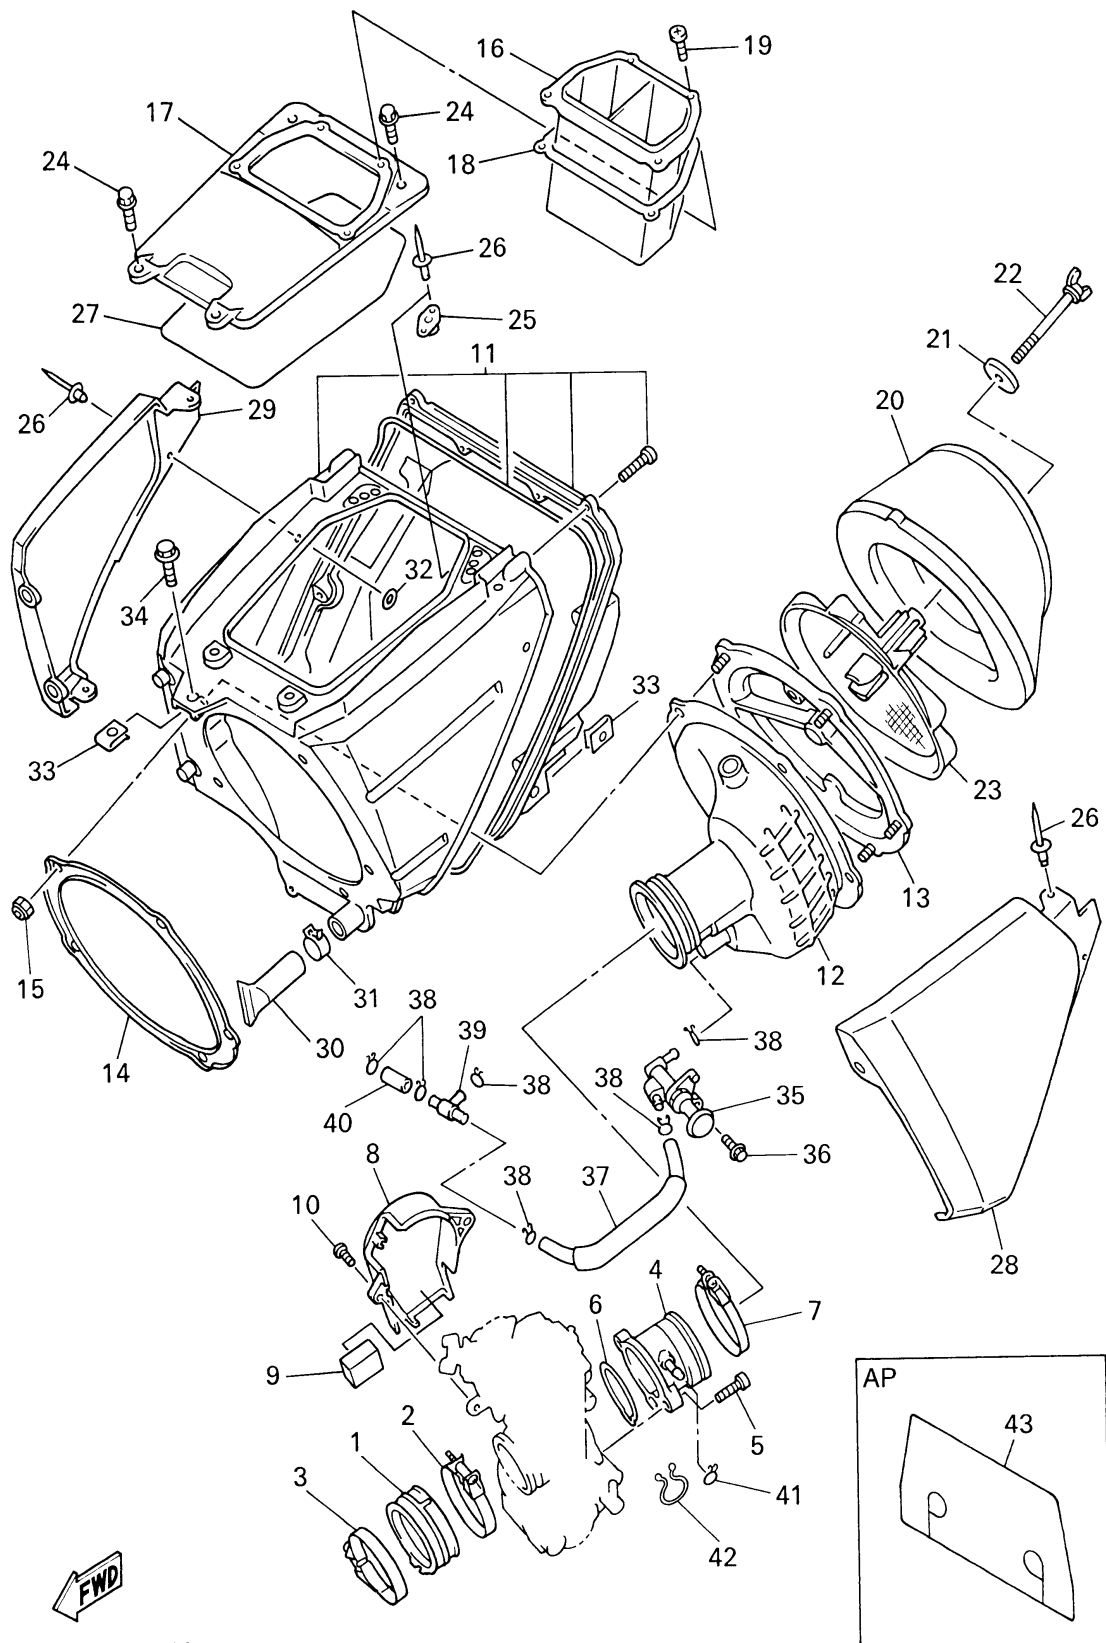 

INTAKE

Ref. No.	Part Number	Description	Qty	Remarks
1	5BE-13597-01-00	JOINT, CARBURETOR 3	1	
2	90450-57092-00	HOSE CLAMP ASSEMBLY	1	
3	90450-59091-00	HOSE CLAMP ASSEMBLY	1	
4	5BF-1440F-00-00	JOINT, AIR FILTER 1	1	
5	91317-05014-00	BOLT	2	
6	4FN-14561-00-00	O-RING	1	
7	90460-61162-00	CLAMP, HOSE	1	
8	5BE-14293-00-00	COVER 1	1	
9	5BF-14409-00-00	DAMPER	1	
10	90111-06017-00	BOLT	2	
11	5BE-14401-00-00	AIR CLEANER CASE ASSEMBLY	1	
12	5BE-14453-00-00	JOINT, AIR CLEANER 1	1	
13	3JD-14459-01-00	HOLDER, GUIDE	1	
14	3JD-14477-00-00	PLATE	1	
15	95607-05100-00	NUT, U	5	
16	5BF-14437-00-00	DUCT	1	
17	5BF-1441A-00-00	COVER, CLEANER CASE 1	1	
18	5BF-14452-00-00	SEAL	1	
19	97707-50012-00	SCREW, TAPPING	4	
20	4XM-14451-00-00	ELEMENT, AIR CLEANER	1	
21	90209-06096-00	WASHER	1	
22	90122-06035-00	BOLT, WING	1	
23	5BE-14458-00-00	GUIDE	1	
24	90146-06014-00	SCREW, OVAL FILLISTER	4	
25	5BF-14493-00-00	STAY 1	2	
26	90267-32070-00	RIVET, BLIND	9	
27	5BF-14457-00-00	SEAL	1	
28	5BE-1441A-00-00	COVER, CLEANER CASE 1	1	

 CONTINUED ON NEXT FRAME ►

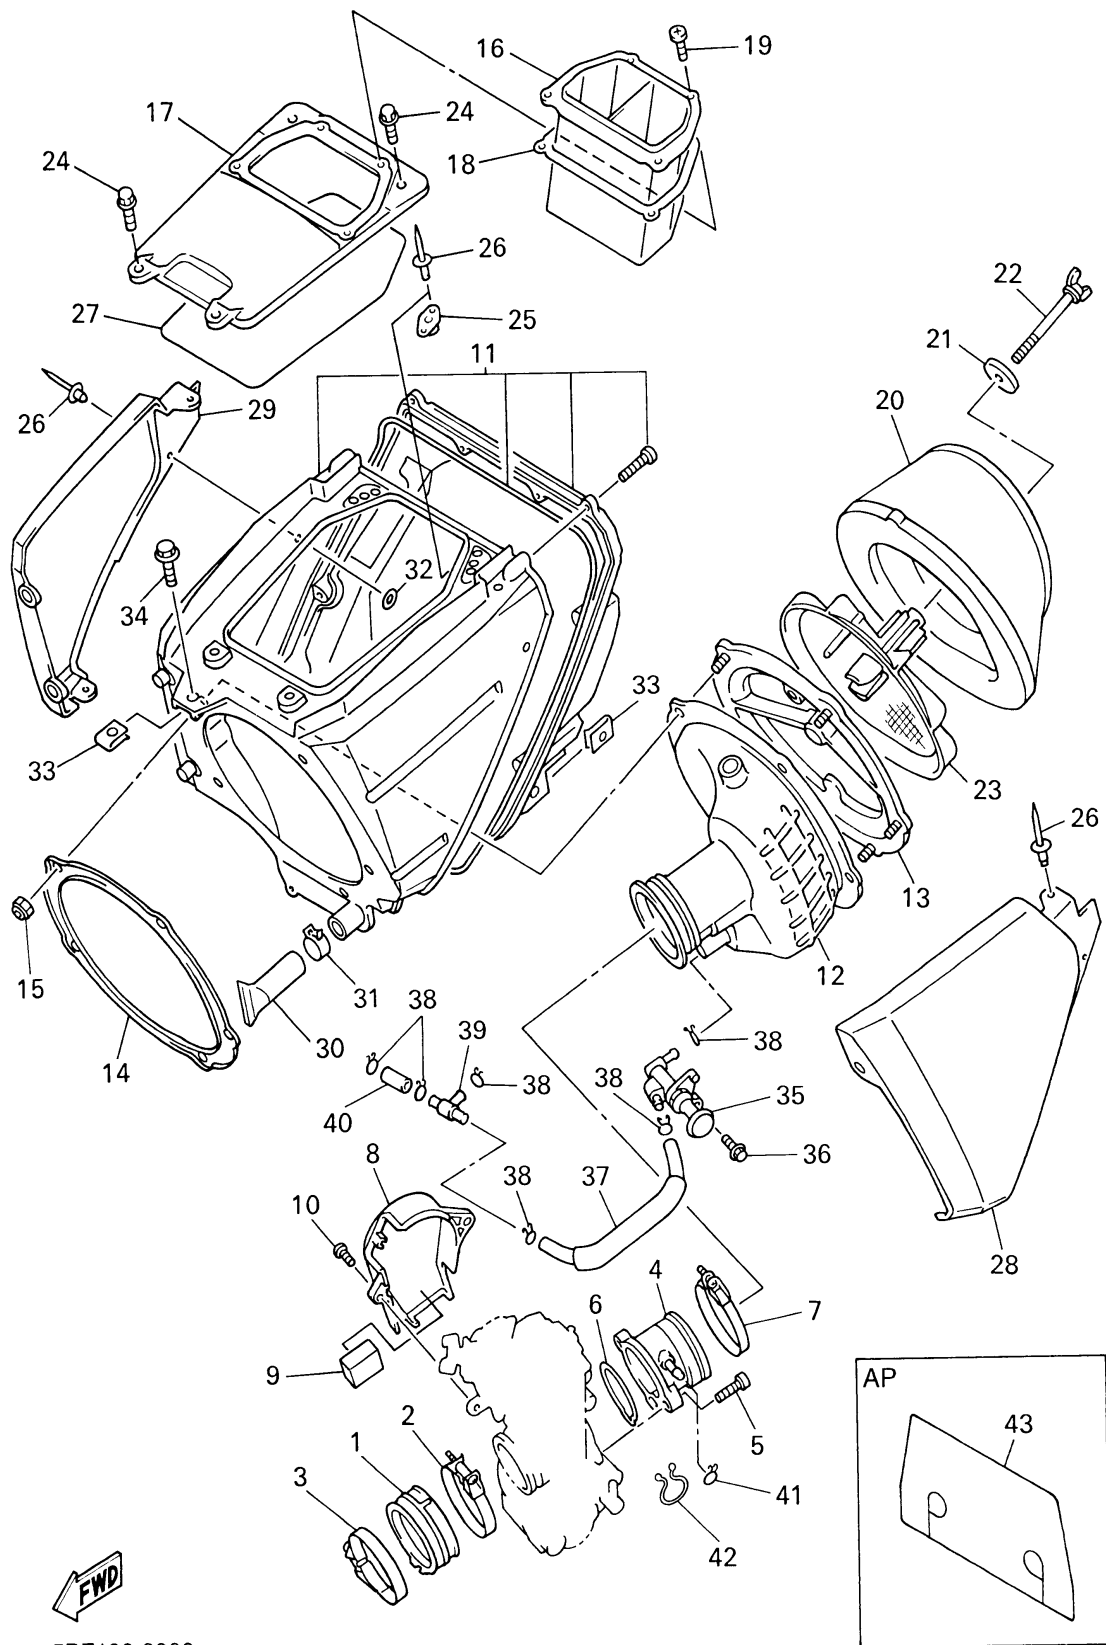


5BF100-8090

INTAKE

Ref. No.	Part Number	Description	Qty	Remarks
29	5BE-1441E-00-00	COVER, CLEANER CASE 2 ...	1	
30	5BF-1443E-00-00	PIPE, DRAIN	1	
31	90467-17089-00	CLIP	1	
32	90201-03313-00	WASHER, PLATE	5	
33	90183-06023-00	NUT, SPRING	2	
34	95027-06012-00	BOLT, FLANGE	1	
35	5GR-14340-00-00	VALVE ASSEMBLY	1	
36	95027-06016-00	BOLT, FLANGE	1	
37	5BF-14349-00-00	PIPE	1	
38	90467-09103-00	CLIP	6	
39	90413-06031-00	WAY 3	1	
40	90445-095K0-00	HOSE	1	
41	90467-08017-00	CLIP	1	
42	90464-16039-00	CLAMP	1	
43	5BE-14417-00-00	COVER 1	1	AP

 
CARBURETORä

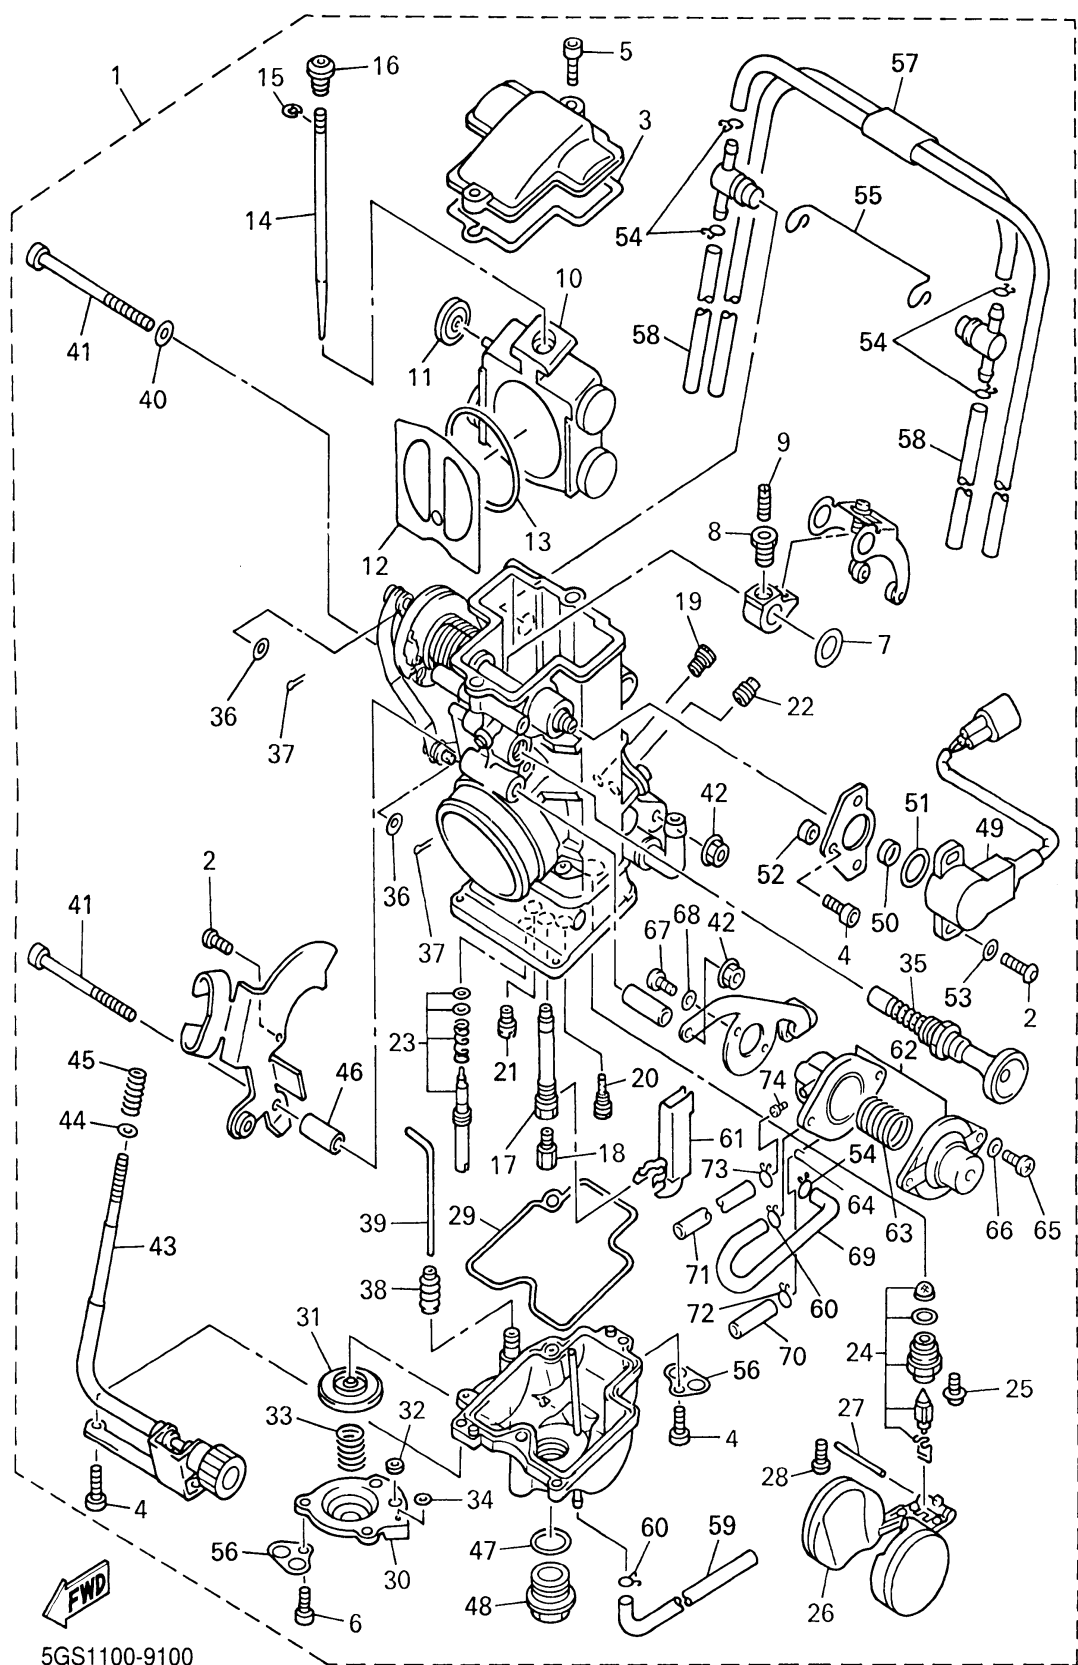

Ref. No.	Part Number	Description	Qty	Remarks
1	5GS-14101-00-00	CARBURETOR ASSEMBLY 1	1	
2	3TJ-14496-40-00	. BOLT	5	
3	5BE-14959-00-00	. GASKET	1	
4	91316-04012-00	. BOLT	4	
5	91316-04012-00	. BOLT	2	
6	91316-04008-00	. BOLT	3	
7	90202-08045-00	. WASHER, PLATE	1	
8	3TJ-14393-40-00	. NUT, CROWN	1	
9	3TJ-14522-40-00	. SCREW, ADJUST	1	
10	5BE-14388-00-00	. VALVE ASSEMBLY	1	
11	3TJ-14267-40-00	. ROLLER	1	
12	4FN-14546-00-00	. VALVE, NEEDLE	1	
13	4FN-14997-00-00	. SEAL	1	
14	5BF-14916-D1-00	. NEEDLE (#DTQ)	1	AP
	5BF-14916-DJ-00	. NEEDLE (#DTJ)	1	AP
	5BF-14916-DK-00	. NEEDLE (#DTK)	1	AP
	5BF-14916-DL-00	. NEEDLE (#DTL)	1	AP
	5BF-14916-DM-00	. NEEDLE (#DTM)	1	STD
	5BF-14916-DN-00	. NEEDLE (#DTN)	1	AP
	5BF-14916-DP-00	. NEEDLE (#DTP)	1	AP
15	3TJ-14159-40-00	. CLIP	1	
16	5BE-14521-00-00	. SCREW, ADJUST	1	
17	5BE-14947-00-00	. JET, NEEDLE	1	
18	4MX-14943-39-00	. JET, MAIN (#160)	1	AP
	4MX-14943-40-00	. JET, MAIN (#165)	1	AP
	4MX-14943-41-00	. JET, MAIN (#170)	1	AP
	4MX-14943-42-00	. JET, MAIN (#175)	1	AP
	4MX-14943-43-00	. JET, MAIN (#180)	1	AP
	4MX-14943-89-00	. JET, MAIN (#158)	1	AP

CONTINUED ON NEXT FRAME ➤

 
CARBURETORä

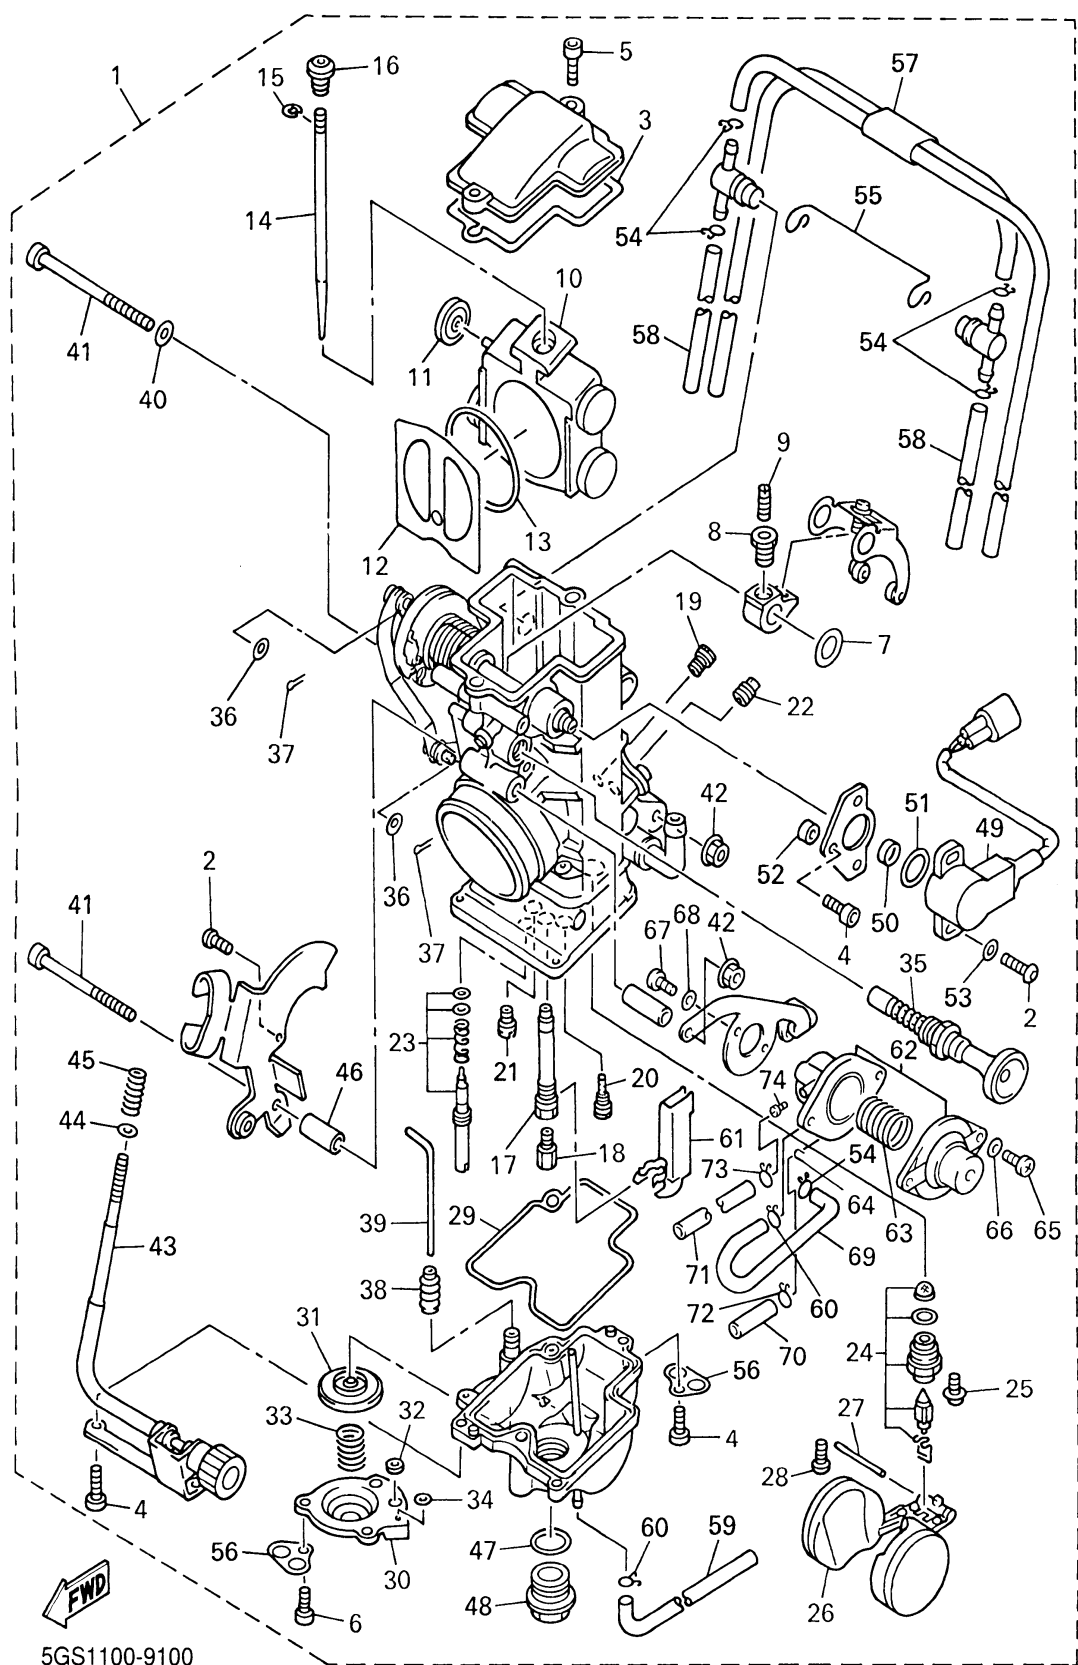

Ref. No.	Part Number	Description	Qty	Remarks
18	4MX-14943-90-00	. JET, MAIN (#162)	1	AP
	4MX-14943-91-00	. JET, MAIN (#168)	1	STD
	4MX-14943-92-00	. JET, MAIN (#172)	1	AP
	4MX-14943-93-00	. JET, MAIN (#178)	1	AP
19	3TJ-14943-47-00	. JET (#200)	1	
20	3TJ-14948-03-00	. JET (#40)	1	AP
	3TJ-14948-04-00	. JET (#42)	1	AP
	3TJ-14948-05-00	. JET (#45)	1	STD
	3TJ-14948-06-00	. JET (#48)	1	AP
	3TJ-14948-07-00	. JET (#50)	1	AP
21	3TJ-1494F-09-00	. JET (#55)	1	AP
	3TJ-1494F-10-00	. JET (#58)	1	STD
	3TJ-1494F-11-00	. JET (#60)	1	AP
	3TJ-1494F-12-00	. JET (#62)	1	AP
	3TJ-1494F-13-00	. JET (#65)	1	AP
	3TJ-1494F-14-00	. JET (#68)	1	AP
22	7A9-14943-17-00	. JET, MAIN (#75)	1	
23	3TJ-14105-40-00	. PILOT SCREW SET	1	
24	5BE-14107-00-00	. NEEDLE VALVE SET	1	
25	5BE-14216-00-00	. SCREW	1	
26	5BE-14985-00-00	. FLOAT	1	
27	676-14548-00-00	. PIN, FLOAT ARM	1	
28	688-14592-00-00	. SCREW	1	
29	3TJ-14984-40-00	. GASKET, FLOAT CHAMBER .	1	
30	3TJ-14293-40-00	. COVER 1	1	
31	5BE-14940-17-00	. DIAPHRAGM ASSEMBLY ...	1	AP
	5BE-14940-18-00	. DIAPHRAGM ASSEMBLY ...	1	STD
	5BE-14940-19-00	. DIAPHRAGM ASSEMBLY ...	1	AP
32	3TJ-14536-40-00	. GASKET	1	

CONTINUED ON NEXT FRAME ➤

 CARBURETORä

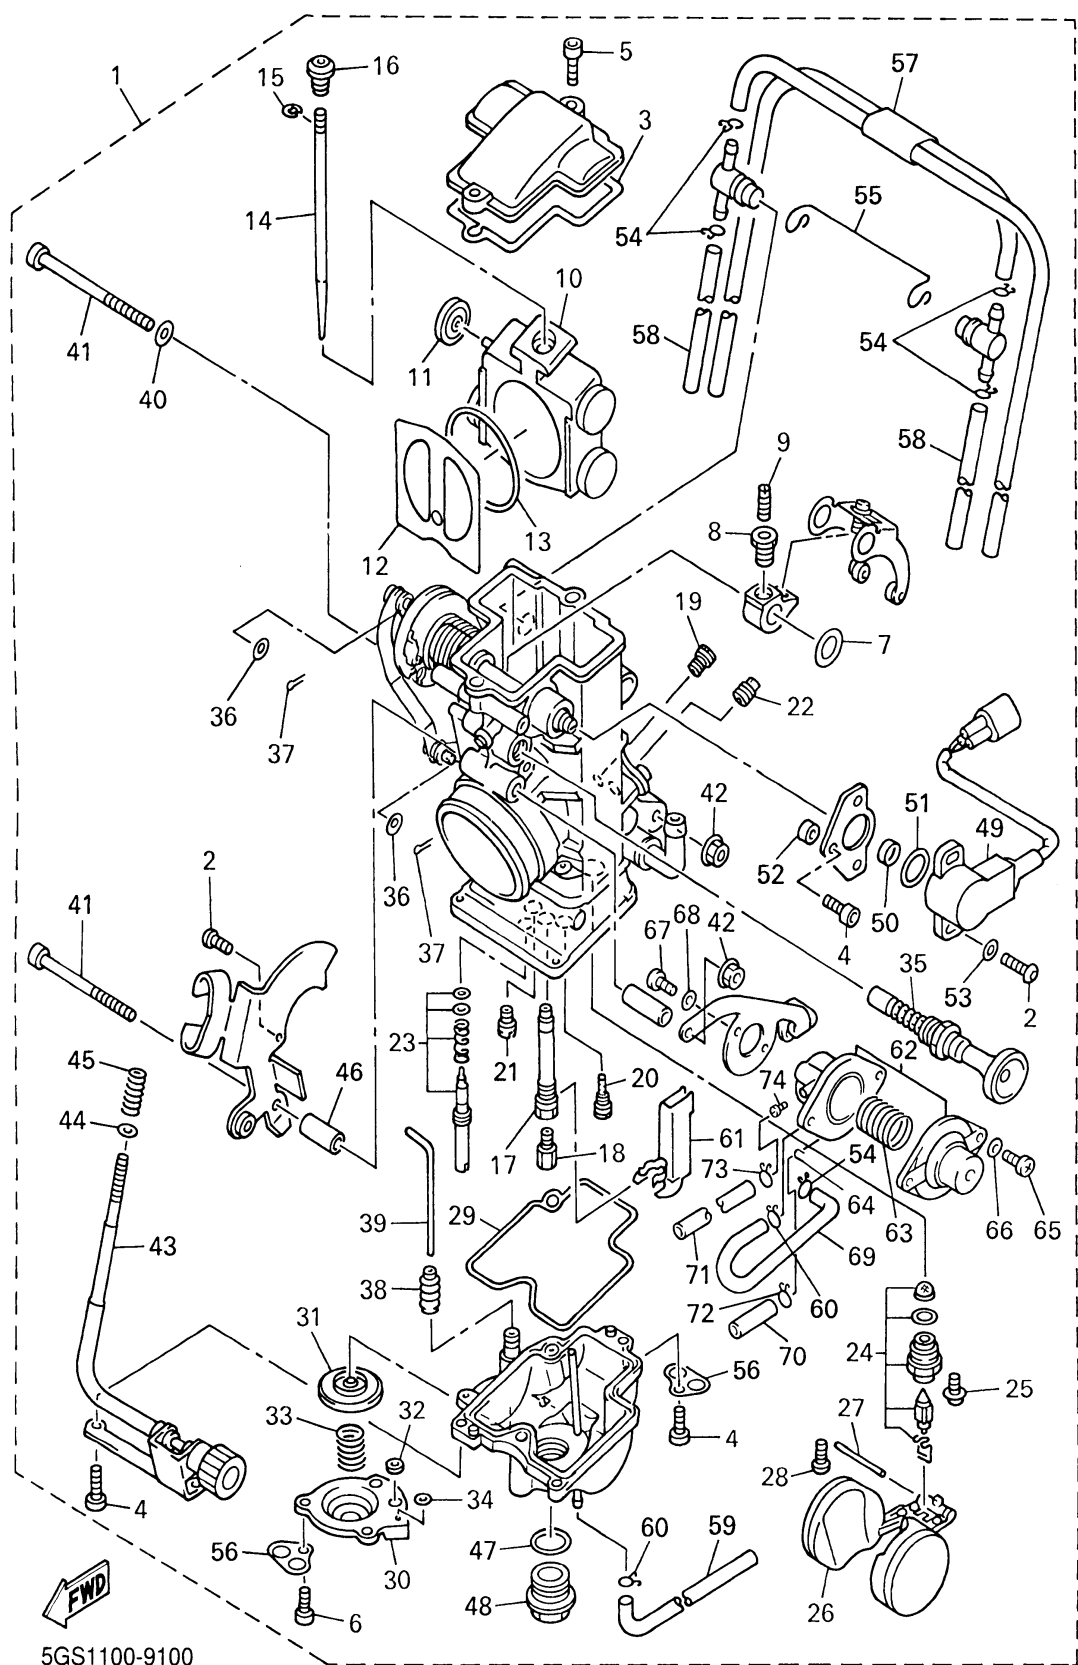


5GS1100-9100

Ref. No.	Part Number	Description	Qty	Remarks
33	3TJ-14933-40-00	. SPRING, DIAPHRAGM	1	
34	6H4-14561-00-00	. O-RING	1	
35	5BE-14171-00-00	. PLUNGER, STARTER	1	
36	90202-03052-00	. WASHER, PLATE	2	
37	3TJ-14365-40-00	. PIN, CLEVIS	2	
38	5BE-14968-00-00	. CAP	1	
39	5BE-14379-00-00	. ROD, STARTER	1	
40	5BE-14557-00-00	. WASHER	1	
41	5BE-14162-00-00	. BOLT, HOLDING	2	
42	95704-05500-00	. NUT, FLANGE	2	
43	5BE-14922-01-00	. SCREW, THROTTLE	1	
44	90201-08410-00	. WASHER, PLATE	1	
45	4FN-14934-00-00	. SPRING, THROTTLE STOP ..	1	
46	5BE-14535-00-00	. COLLAR	1	
47	5BE-14561-00-00	. O-RING	1	
48	5BE-14115-00-00	. PLUG, SCREW	1	
49	5BE-85885-00-00	. THROTTLE SENSOR ASSEMBLY	1	
50	5BE-14449-00-00	. COLLAR	1	
51	5BE-14562-00-00	. O-RING	1	
52	5BE-14265-00-00	. COLLAR	1	
53	5BE-14596-00-00	. WASHER	2	
54	3TJ-14137-40-00	. CLIP	5	
55	5BE-14137-00-00	. CLIP	1	
56	5BE-14146-00-00	. PLATE	2	
57	5BE-14197-00-00	. PIPE	1	
58	5BE-14148-00-00	. PIPE	2	
59	5BE-14987-00-00	. HOSE	1	
60	5BE-14937-00-00	. CLIP	2	


CONTINUED ON NEXT FRAME ➤

 CARBURETORä

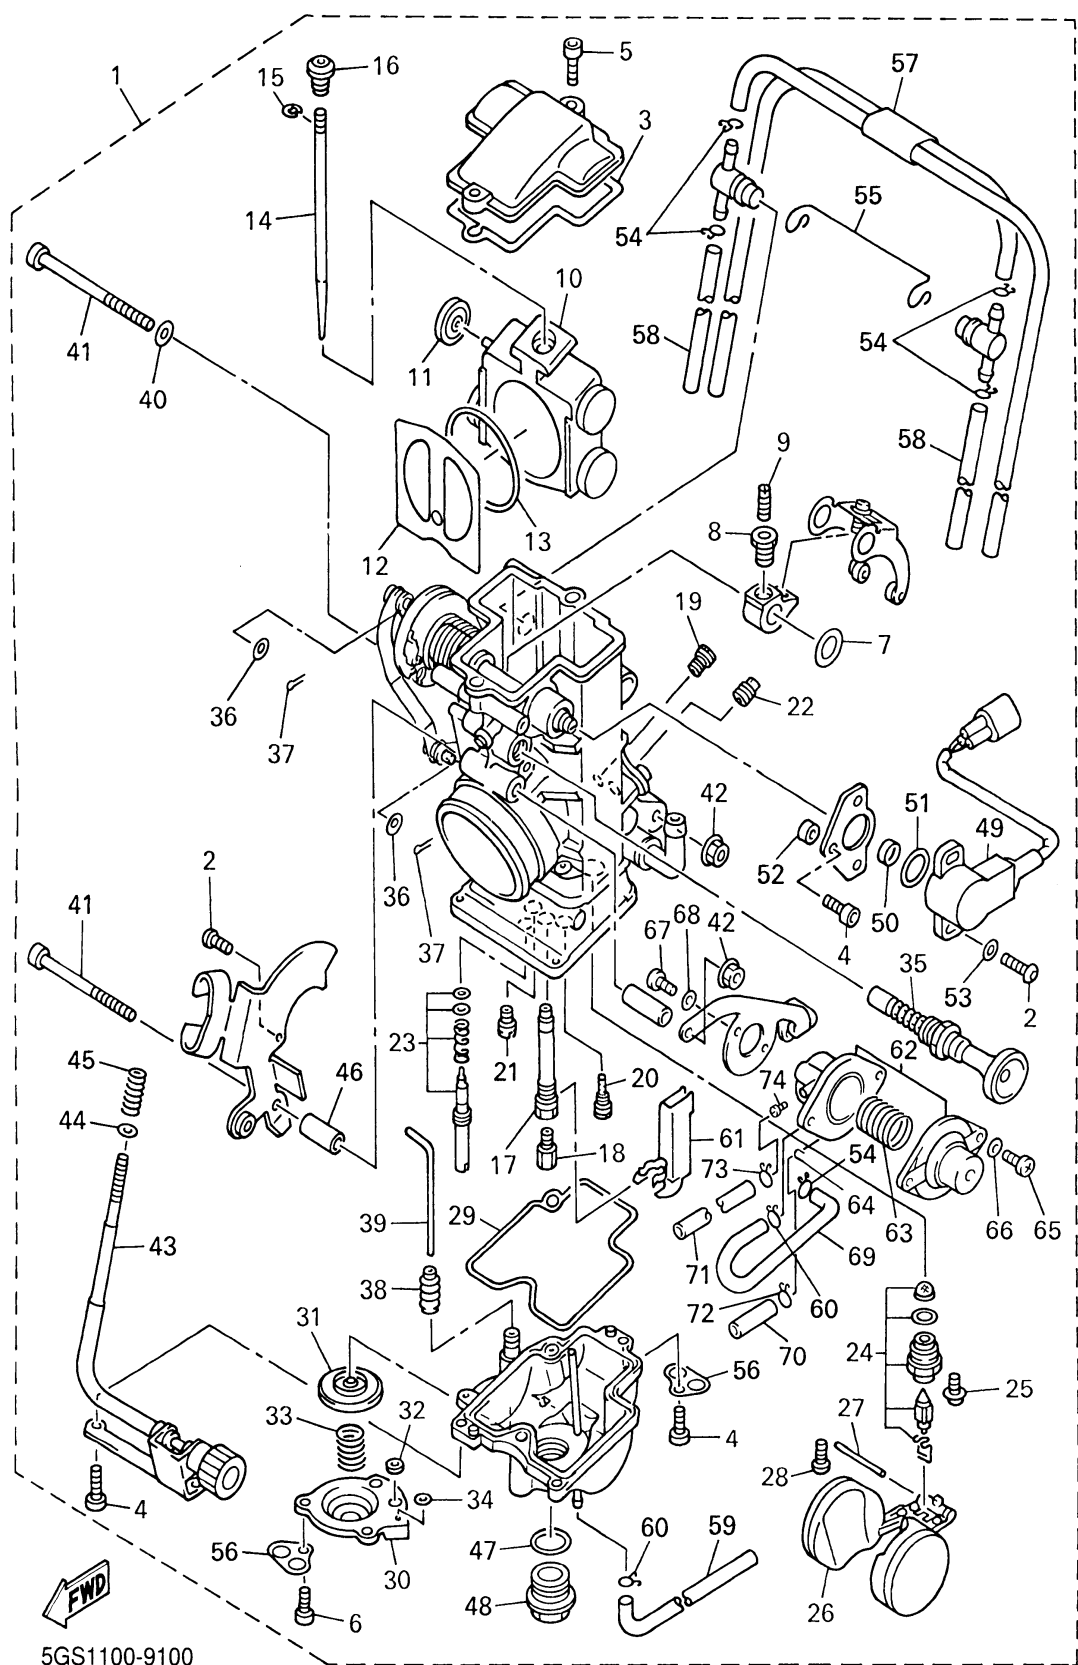

5GS1100-9100

Ref. No.	Part Number	Description	Qty	Remarks
61	5BE-14346-00-00	. PLATE	1	
62	5BF-14940-00-00	. DIAPHRAGM ASSEMBLY ...	1	
63	5BF-14933-00-00	. SPRING, DIAPHRAGM	1	
64	5BF-14854-00-00	. U-RING	1	
65	98502-04010-00	. SCREW, PAN HEAD	2	
66	92902-04100-00	. WASHER, SPRING	2	
67	98502-04008-00	. SCREW, PAN HEAD	2	
68	92902-04100-00	. WASHER, SPRING	2	
69	5BF-14871-00-00	. PIPE 1	1	
70	5BF-14872-00-00	. PIPE 2	1	
71	5BF-14873-00-00	. PIPE 3	1	
72	5BF-14937-00-00	. CLIP	1	
73	5BF-14919-00-00	. CLIP	1	
74	5BF-14347-23-00	. JET, AIR SLOW (#90)	1	STD
	5BF-14347-27-00	. JET, AIR SLOW (#100)	1	AP

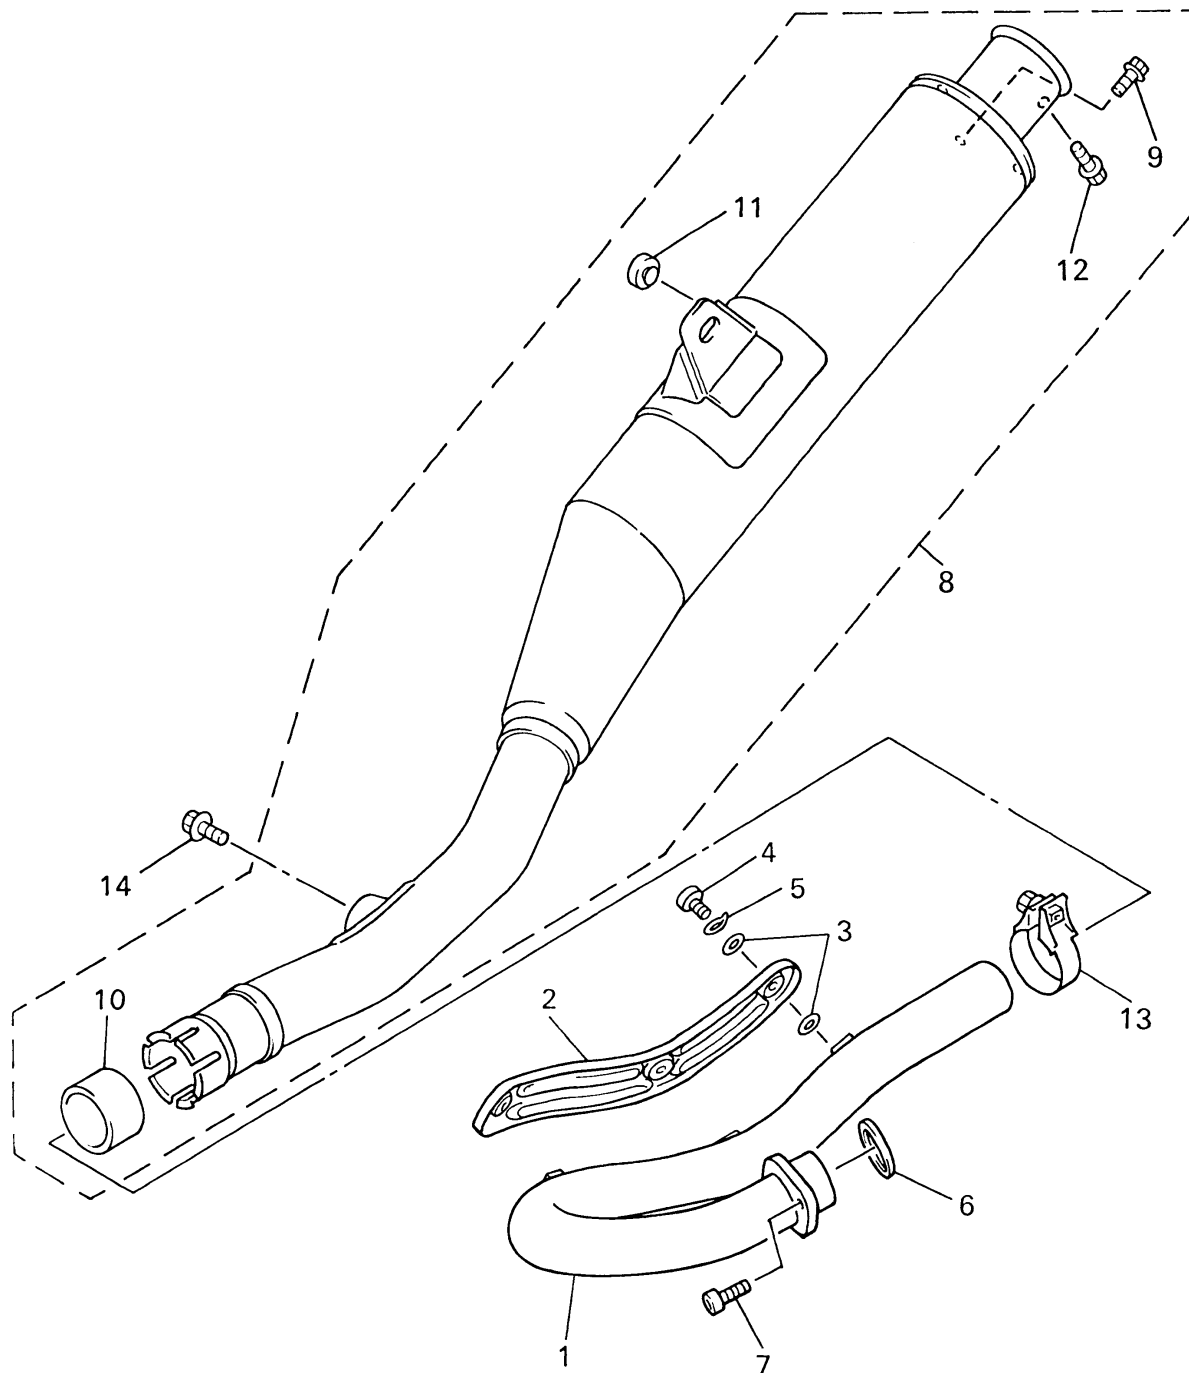 


EXHAUST

Ref. No.	Part Number	Description	Qty	Remarks
1	5BE-14611-00-00	PIPE, EXHAUST 1	1	
2	5BE-14628-00-00	PROTECTOR, EXHAUST PIPE .	1	
3	4BD-14766-00-00	WASHER, PROTECTOR	6	
4	98980-06008-00	SCREW, BIND	3	
5	90206-06090-00	WASHER, WAVE	3	
6	3VD-14613-00-00	GASKET, EXHAUST PIPE	1	
7	91317-08020-00	BOLT	1	
8	5BF-14710-00-00	MUFFLER ASSEMBLY 1	1	
9	95804-06010-00	. BOLT, FLANGE	3	
10	3GW-14714-00-00	. GASKET, MUFFLER	1	
11	22W-24181-00-00	. DAMPER, LOCATING 1	1	
12	95804-06016-00	. BOLT, FLANGE	1	
13	5BE-14788-00-00	BAND, SILENCER	1	
14	95817-08012-00	BOLT, FLANGE	2	



 5GS1110-9110

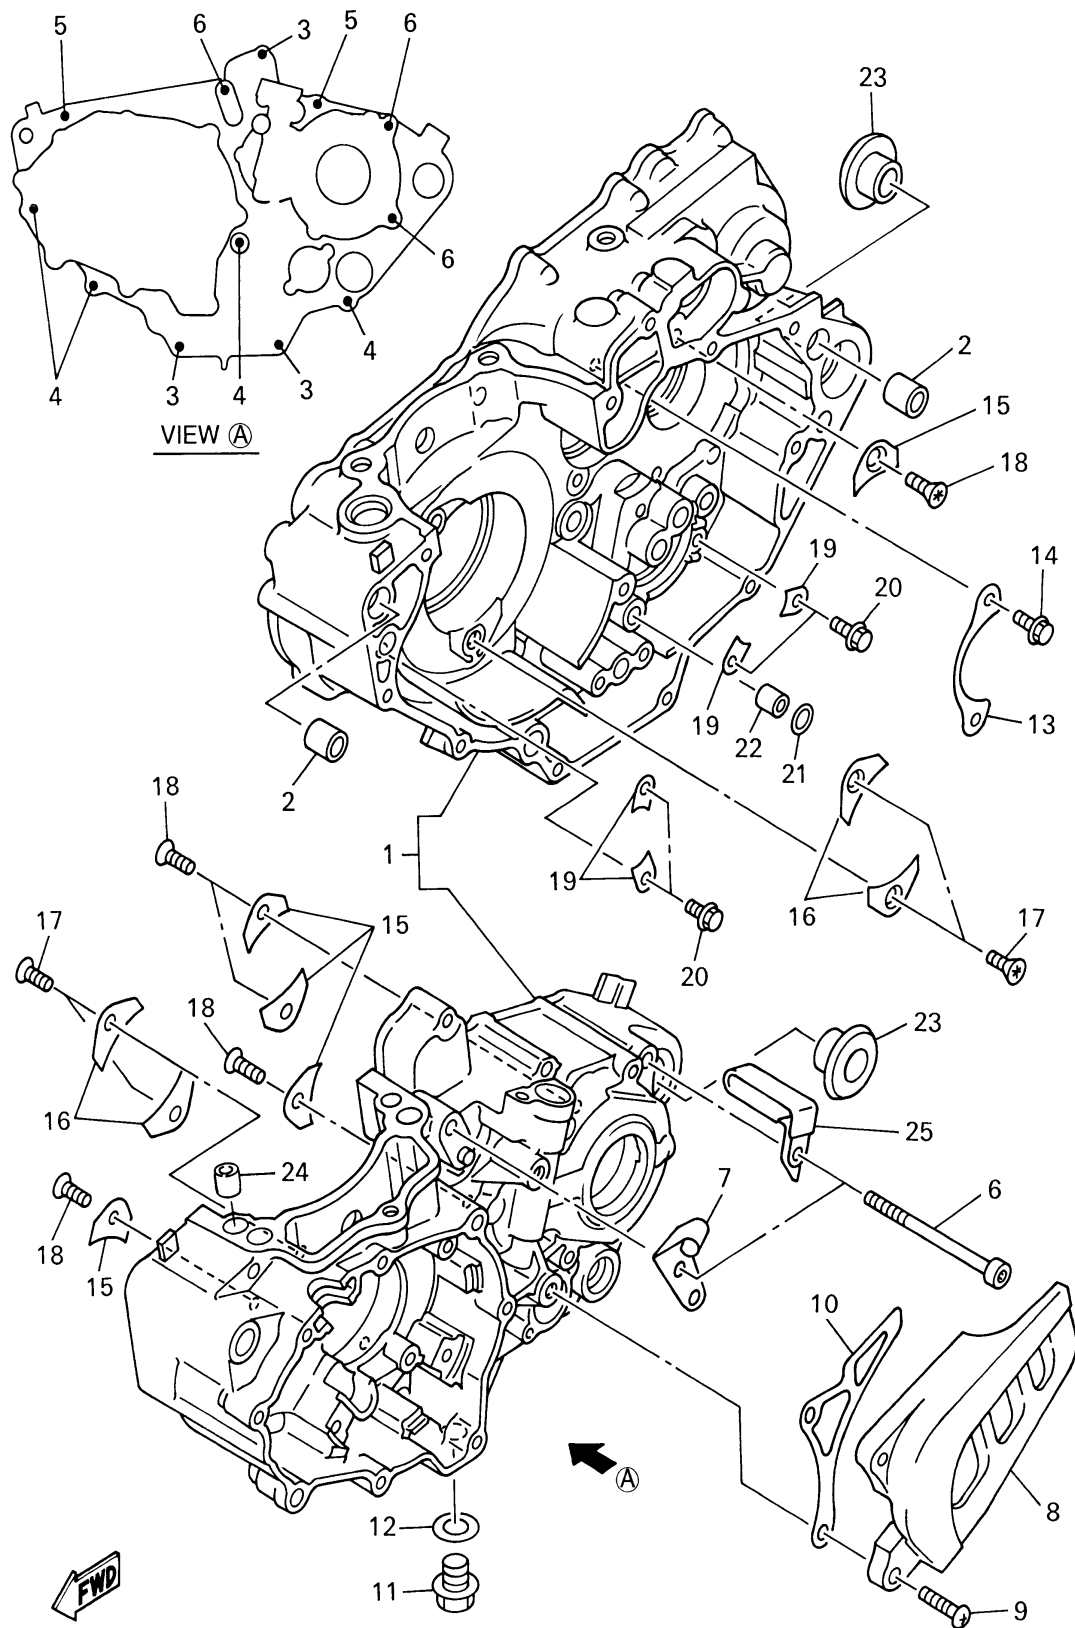


5BE100-8120

CRANKCASE

Ref. No.	Part Number	Description	Qty	Remarks
1	5BE-15150-02-00	CRANKCASE ASSEMBLY	1	
2	99530-14016-00	PIN, DOWEL	2	
3	91317-06040-00	BOLT	3	
4	91317-06050-00	BOLT	4	
5	91317-06060-00	BOLT	2	
6	91317-06075-00	BOLT	3	
7	5BE-15441-00-00	HOLDER, CLUTCH CABLE	1	
8	5BE-15421-00-00	COVER, CRANKCASE 2	1	
9	98507-06025-00	SCREW, PAN HEAD	2	
10	5BE-17466-10-00	GUIDE, CHAIN	1	
11	90340-12059-00	PLUG, STRAIGHT SCREW	1	
12	90430-12213-00	GASKET	1	
13	4L0-17471-00-00	PLATE, COVER	1	
14	90105-06553-00	BOLT, WASHER BASED	2	
15	4JT-15381-01-00	PLATE, BEARING COVER	5	
16	5BE-15383-00-00	PLATE, BEARING COVER	4	
17	90149-06286-00	SCREW	4	
18	90149-06326-00	SCREW	5	
19	5DH-18562-00-00	PLATE, STOPPER 2	4	
20	90105-06553-00	BOLT, WASHER BASED	4	
21	93210-10197-00	O-RING	1	
22	99530-10114-00	PIN, DOWEL	1	
23	90387-1712Y-00	COLLAR	2	
24	99530-10116-00	PIN, DOWEL	2	
25	90461-10136-00	CLAMP	1	

 
CRANKCASE COVER 1

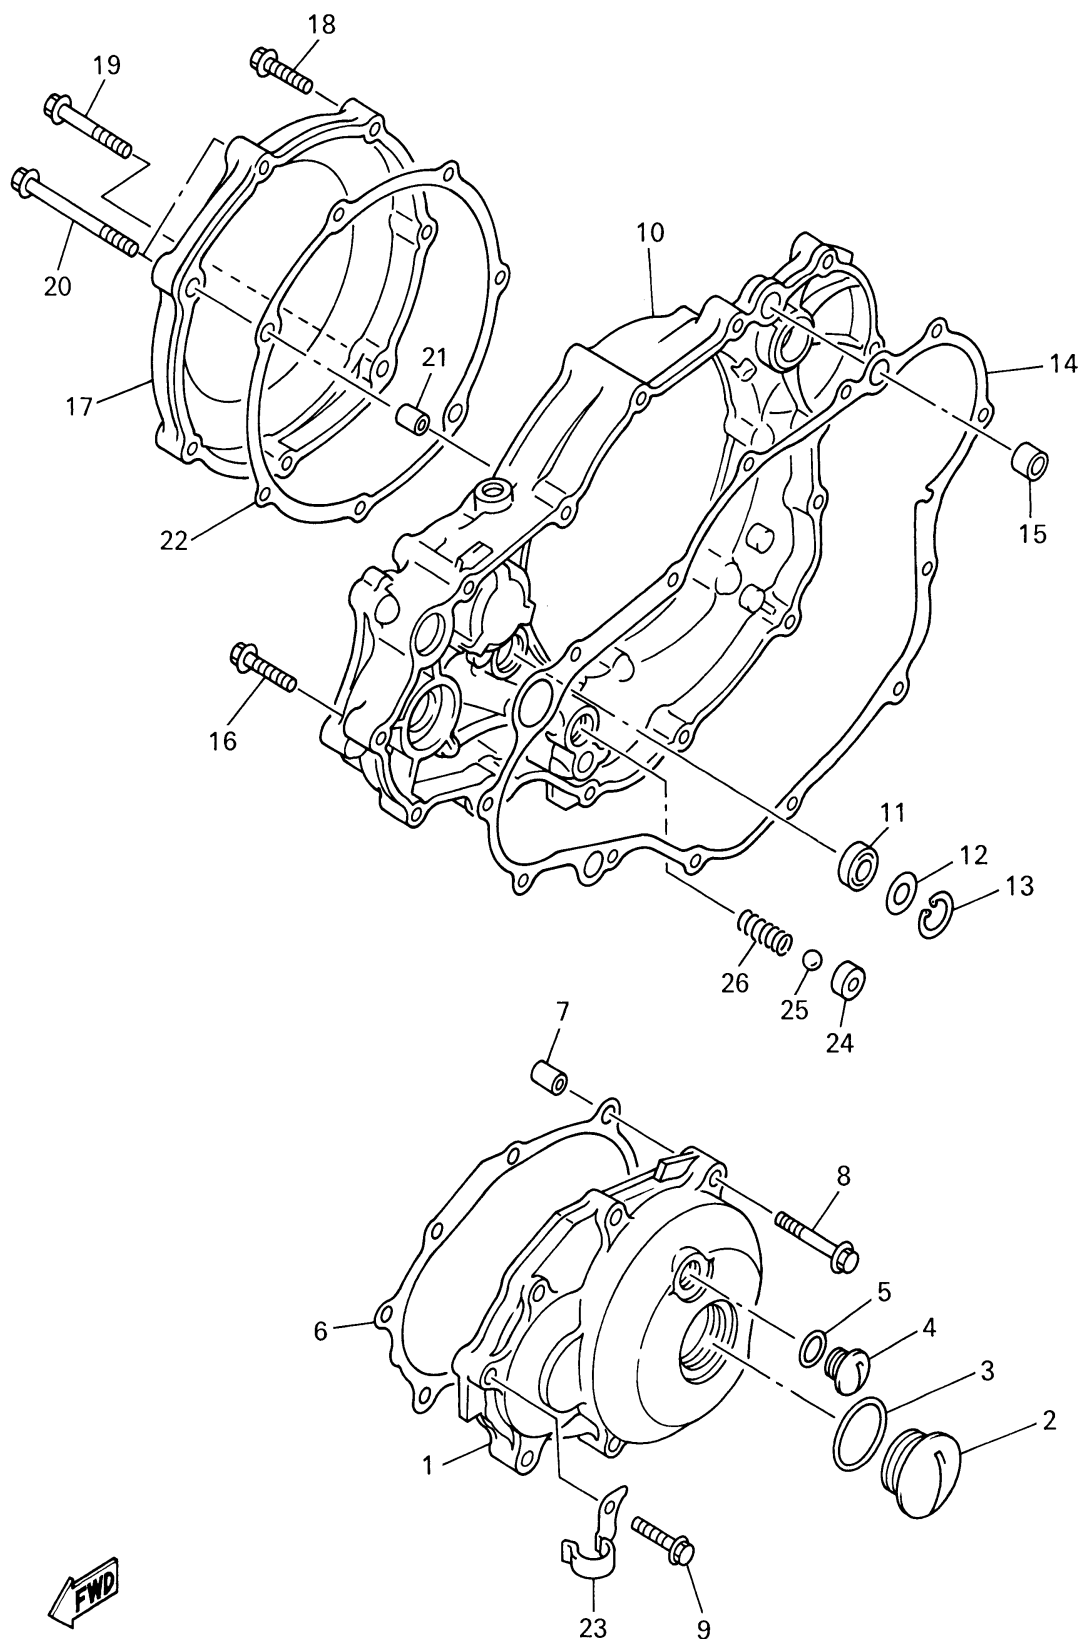


Ref. No.	Part Number	Description	Qty	Remarks
1	5BE-15411-00-00	COVER, CRANKCASE 1	1	
2	90340-32123-00	PLUG, STRAIGHT SCREW	1	
3	93210-32172-00	O-RING	1	
4	90340-14128-00	PLUG, STRAIGHT SCREW	1	
5	93210-14369-00	O-RING	1	
6	5BE-15451-00-00	GASKET, CRANKCASE COVER 1	1	
7	99530-08016-00	PIN, DOWEL	2	
8	95027-06040-00	BOLT, FLANGE	2	
9	95027-06030-00	BOLT, FLANGE	6	
10	5BE-15431-00-00	COVER, CRANKCASE 3	1	
11	93101-14164-00	OIL SEAL	1	
12	90201-15701-00	WASHER, PLATE (1.0T)	1	
13	99009-22500-00	CIRCLIP	1	
14	5BE-15462-00-00	GASKET, CRANKCASE COVER 3	1	
15	91812-16001-00	PIN, DOWEL	2	
16	95027-06030-00	BOLT, FLANGE	10	
17	5BE-15415-00-00	COVER, GENERATOR	1	
18	95027-06030-00	BOLT, FLANGE	4	
19	95027-06040-00	BOLT, FLANGE	1	
20	90105-065A1-00	BOLT, WASHER BASED	2	
21	99530-08016-00	PIN, DOWEL	2	
22	5BE-15453-00-00	GASKET	1	
23	90462-10241-00	CLAMP	1	
24	583-13113-00-00	SEAT, CHECK BALL	1	
25	93503-08007-00	BALL	1	
26	90501-043E0-00	SPRING, COMPRESSION	1	



  5BE100-8130

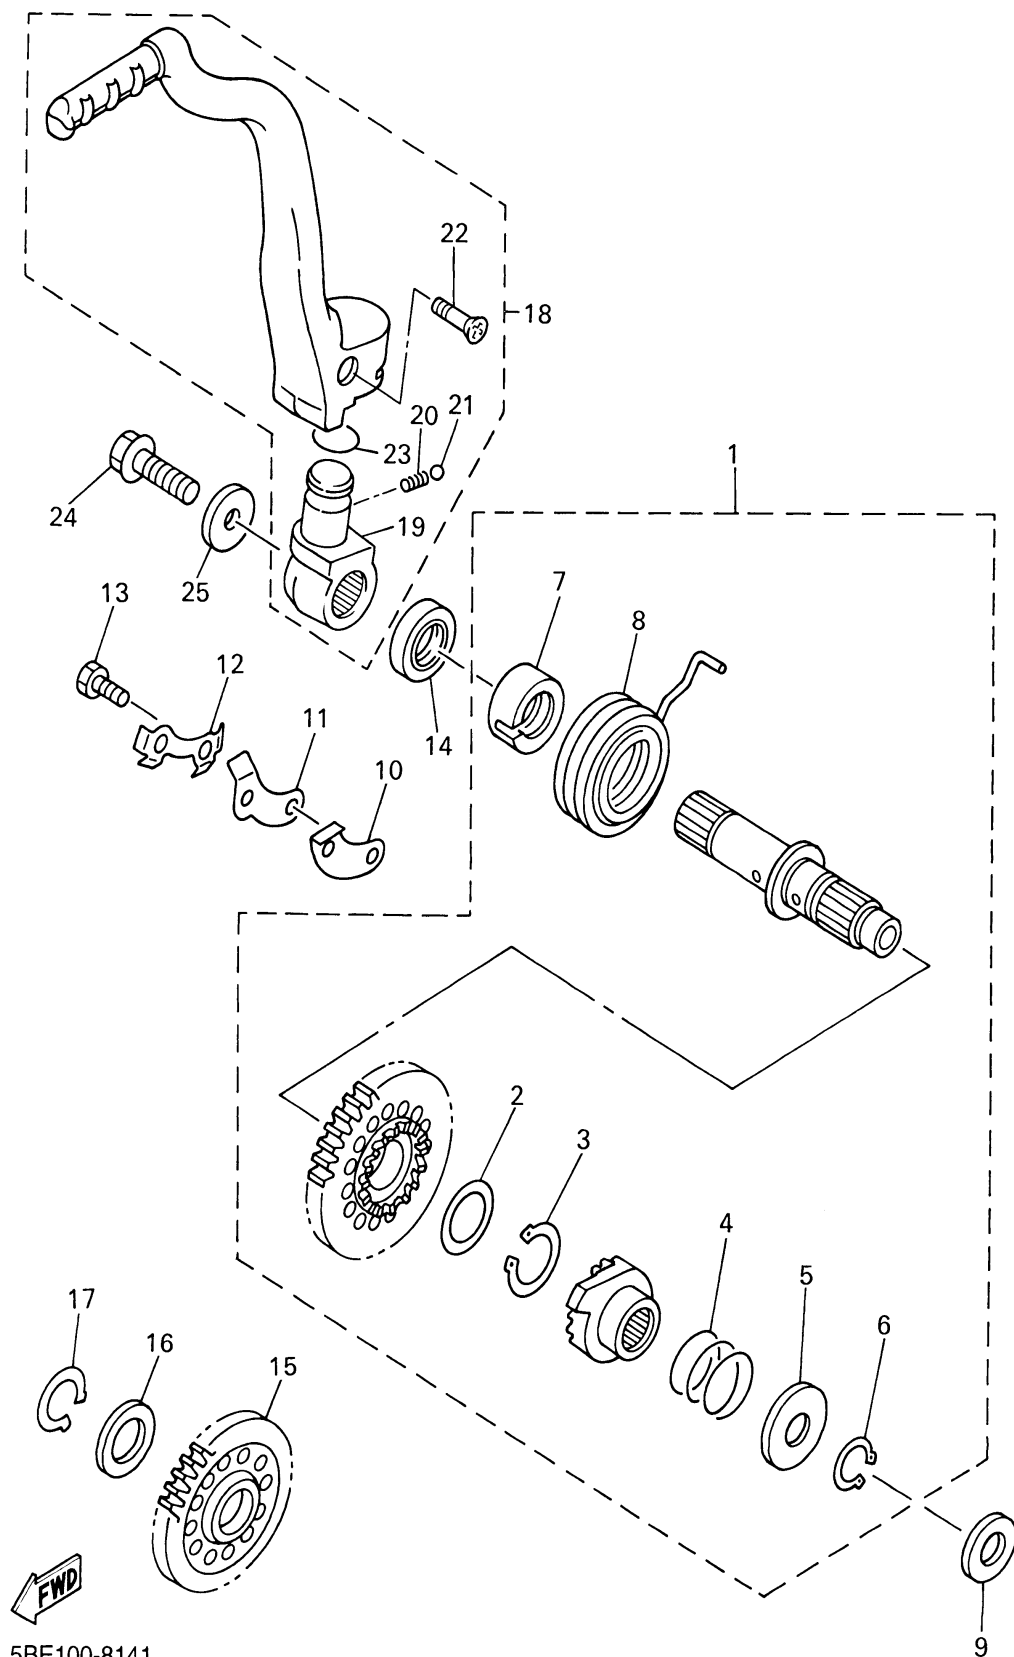

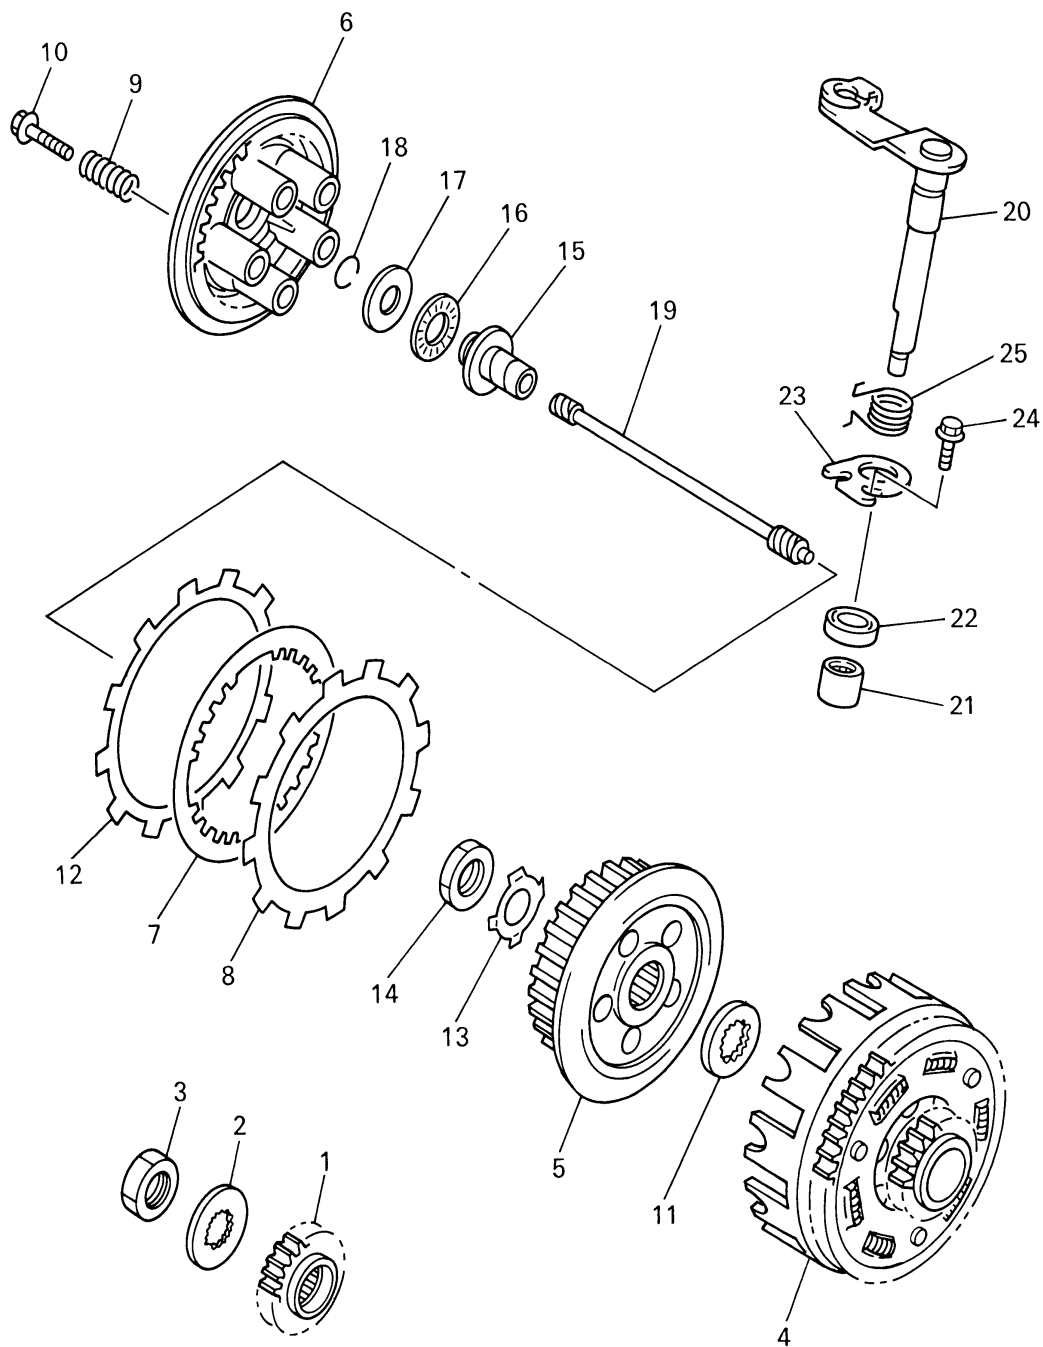


CLUTCH

Ref. No.	Part Number	Description	Qty	Remarks
1	5BE-16111-00-00	GEAR, PRIMARY DRIVE	1	
2	90215-21290-00	WASHER, LOCK	1	
3	90179-20255-00	NUT	1	
4	5BE-16150-00-00	PRIMARY DRIVEN GEAR COMP.	1	
5	2JN-16371-00-00	BOSS, CLUTCH	1	
6	3YF-16351-00-00	PLATE, PRESSURE 1	1	
7	360-16325-00-00	PLATE, CLUTCH 2	7	
8	5BE-16321-00-00	PLATE, FRICTION	7	
9	90501-23141-00	SPRING, COMPRESSION	5	
10	90159-06092-00	SCREW, WITH WASHER	5	
11	2JN-16154-00-00	PLATE, THRUST 1	1	
12	5BE-16331-00-00	PLATE, FRICTION 2	1	
13	90215-20231-00	WASHER, LOCK	1	
14	90170-20327-00	NUT	1	
15	5BE-16356-00-00	ROD, PUSH 1	1	
16	93340-21505-00	BEARING	1	
17	90201-125L6-00	WASHER, PLATE	1	
18	93440-10085-00	CIRCLIP	1	
19	5BE-16357-00-00	ROD, PUSH 2	1	
20	5BE-16381-00-00	PUSH LEVER COMP.	1	
21	93315-11206-00	BEARING	1	
22	93102-12224-00	OIL SEAL	1	
23	4JT-16384-00-00	PLATE, SEAT	1	
24	95027-06010-00	BOLT, FLANGE	1	
25	90508-142B5-00	SPRING, TORSION	1	



 5BE100-8150

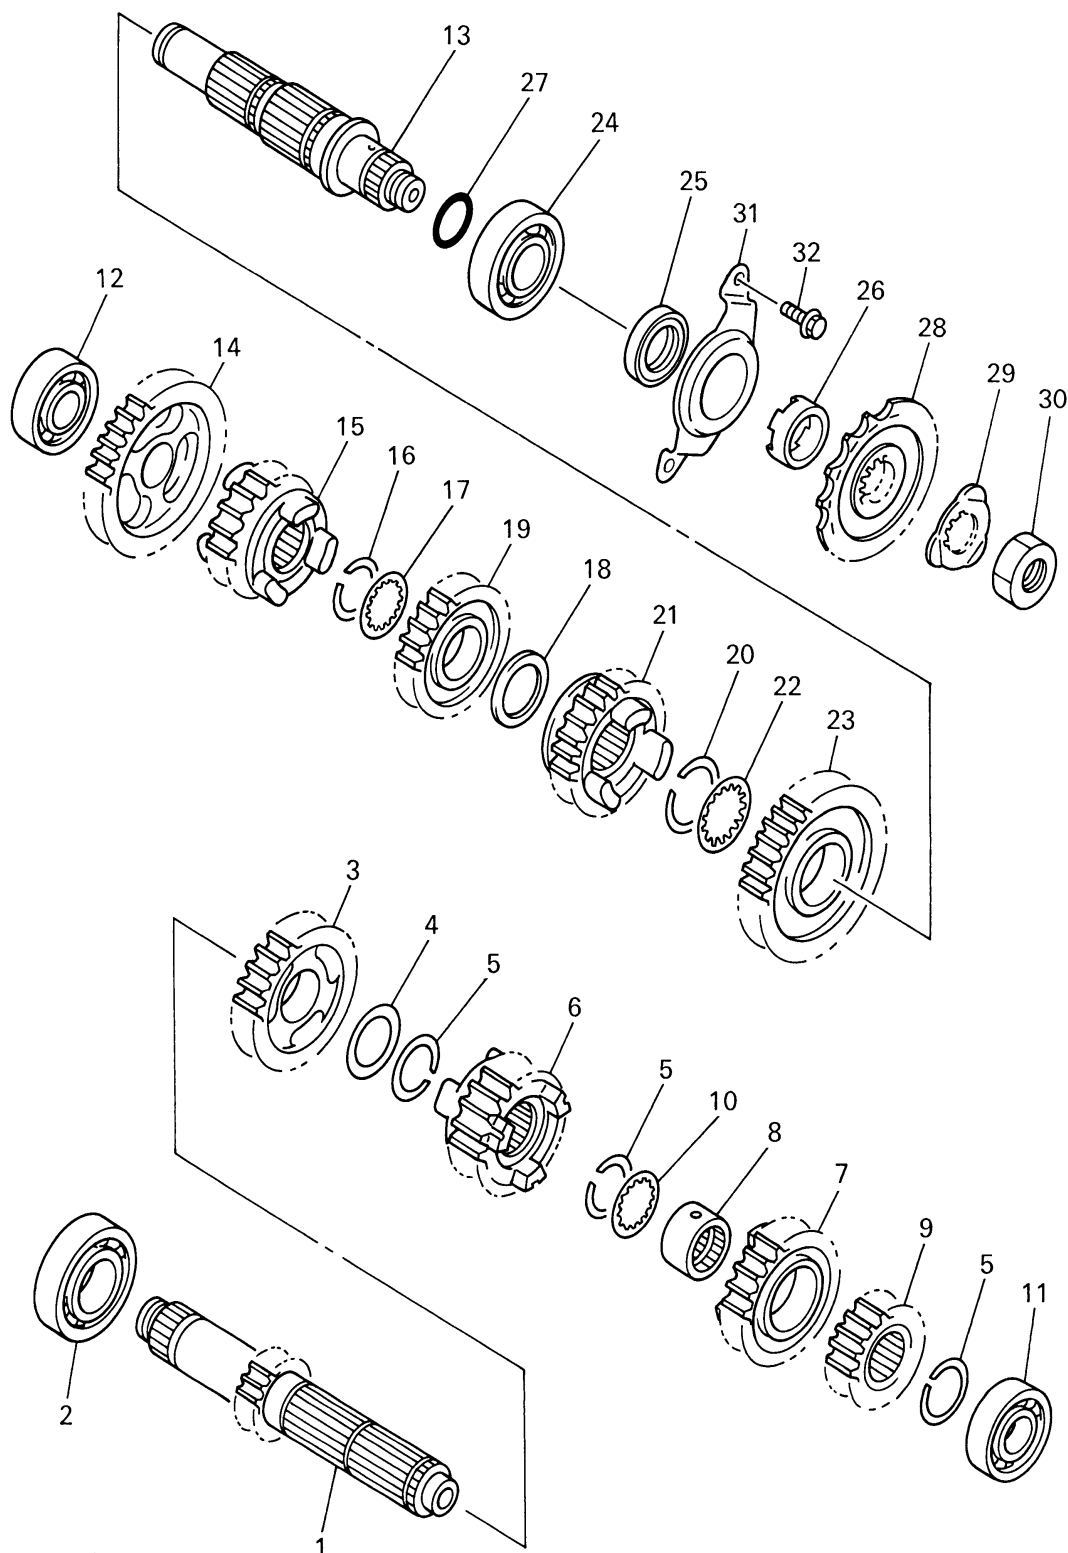


5BE100-8160

WR400FL

TRANSMISSION

Ref. No.	Part Number	Description	Qty	Remarks
1	5BF-17411-00-00	AXLE, MAIN	1	
2	93306-20532-00	BEARING	1	
3	5BF-17151-00-00	GEAR, 5TH PINION	1	
4	90201-253K0-00	WASHER, PLATE (59W)	1	
5	93440-25084-00	CIRCLIP	3	
6	5BF-17131-00-00	GEAR, 3RD PINION	1	
7	5BF-17141-00-00	GEAR, 4TH PINION	1	
8	90387-2113G-00	COLLAR	1	
9	5BF-17121-00-00	GEAR, 2ND PINION	1	
10	90209-21332-00	WASHER	1	
11	93306-00431-00	BEARING	1	
12	93306-00426-00	BEARING	1	
13	5BE-17421-00-00	AXLE, DRIVE	1	
14	5BF-17211-00-00	GEAR, 1ST WHEEL	1	
15	5BF-17251-00-00	GEAR, 5TH WHEEL	1	
16	93440-25084-00	CIRCLIP	1	
17	90209-21332-00	WASHER	1	
18	90201-253K0-00	WASHER, PLATE (59W)	1	
19	5BF-17231-00-00	GEAR, 3RD WHEEL	1	
20	93440-28062-00	CIRCLIP	1	
21	5BF-17241-00-00	GEAR, 4TH WHEEL	1	
22	90209-26348-00	WASHER	1	
23	5BF-17221-00-00	GEAR, 2ND WHEEL	1	
24	93306-20593-00	BEARING	1	
25	93102-32480-00	OIL SEAL	1	
26	90387-2513F-00	COLLAR	1	
27	93210-22298-00	O-RING	1	
28	9383E-14210-00	SPROCKET, DRIVE (14T)	1	
29	90215-21256-00	WASHER, LOCK	1	

 CONTINUED ON NEXT FRAME ➤

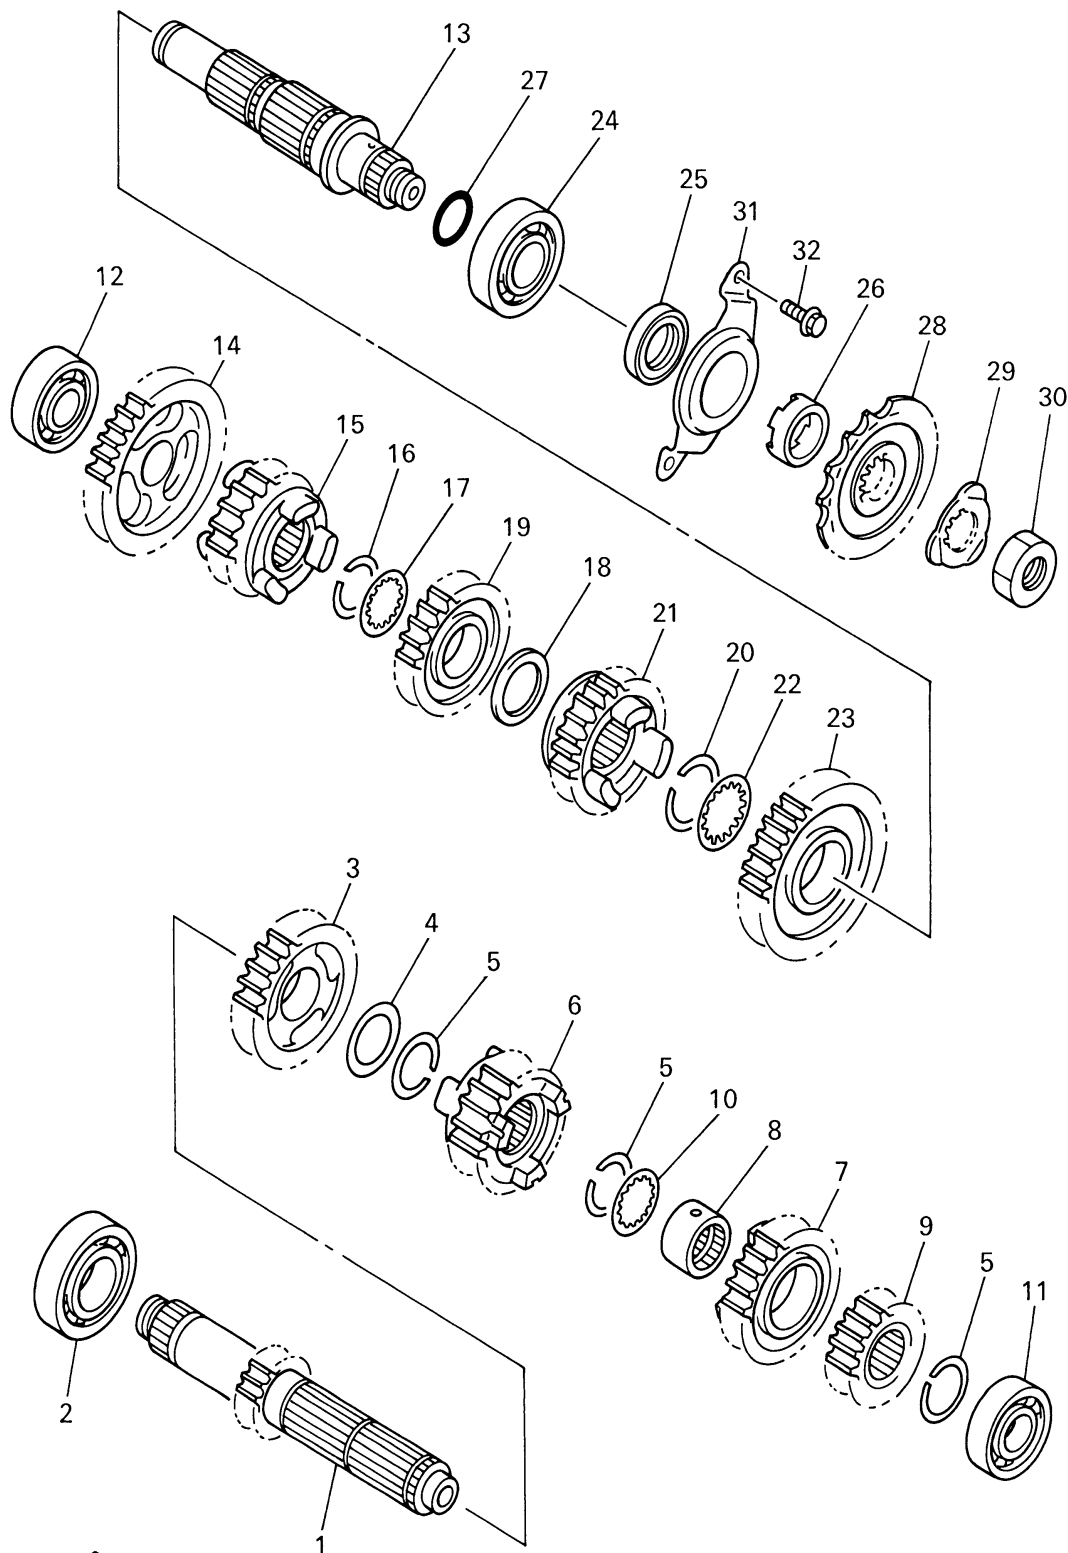

TRANSMISSION


Ref. No.	Part Number	Description	Qty	Remarks
30	90179-20255-00	NUT	1	
31	5GR-17471-00-00	PLATE, COVER	1	
32	90105-06553-00	BOLT, WASHER BASED	2	



5BE100-8160

WR400FL

 
SHIFT CAM - FORK

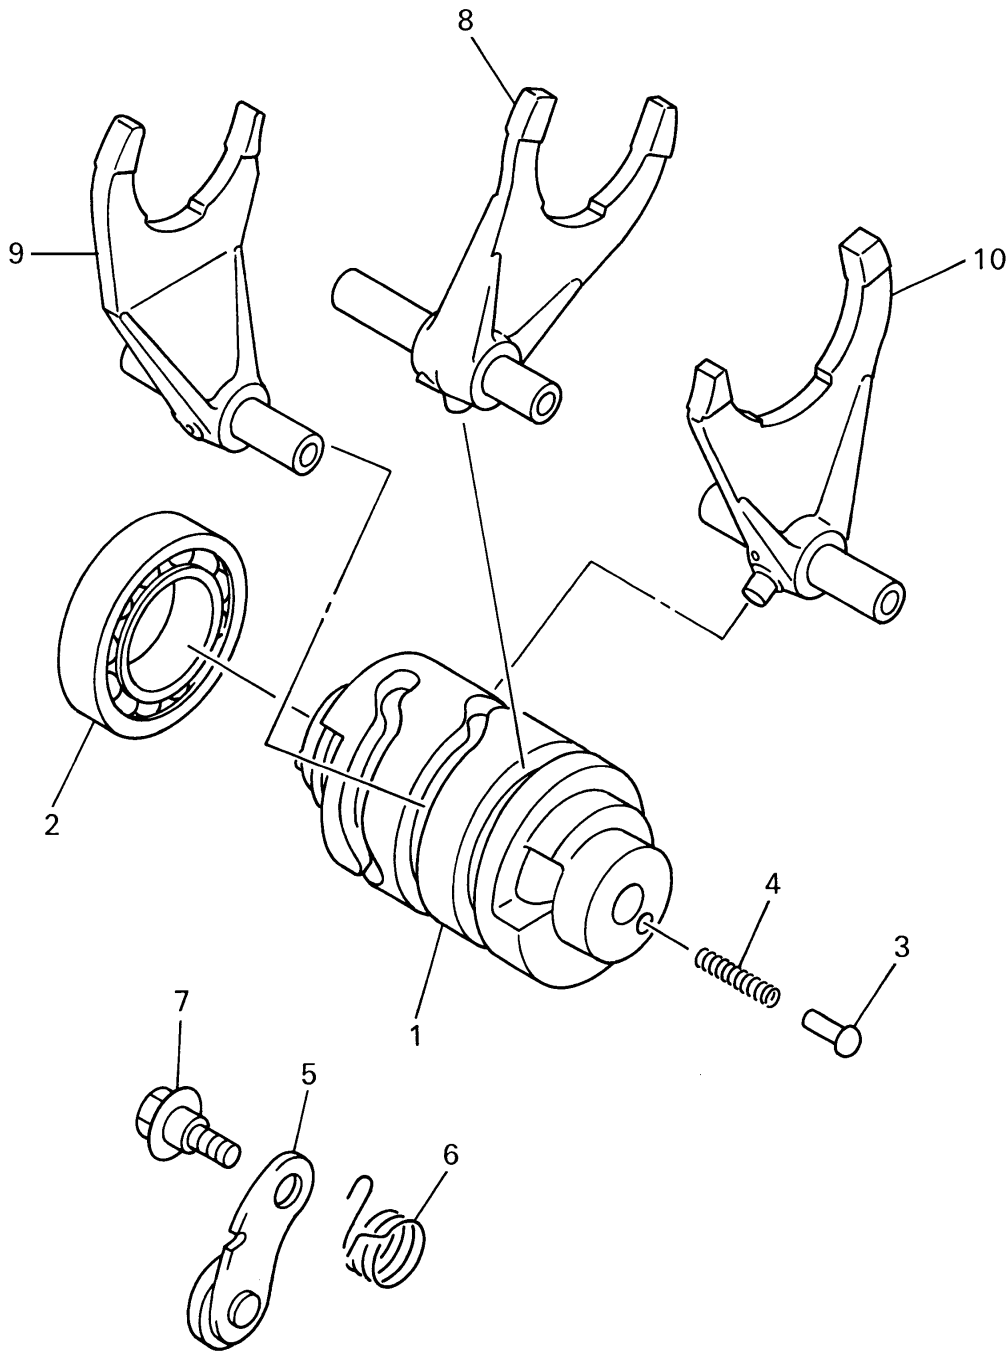

Ref. No.	Part Number	Description	Qty	Remarks
1	5BE-18541-00-00	CAM, SHIFT	1	
2	93306-90501-00	BEARING	1	
3	4BA-18542-00-00	POINT, NEUTRAL	1	
4	90501-06022-00	SPRING, COMPRESSION	1	
5	3XK-18140-00-00	STOPPER LEVER ASSEMBLY .	1	
6	90508-26561-00	SPRING, TORSION	1	
7	90109-063F8-00	BOLT	1	
8	5BE-18501-00-00	FORK, SHIFT 1	1	
9	5BE-18502-00-00	FORK, SHIFT 2	1	
10	5BE-18503-00-00	FORK, SHIFT 3	1	



 5BE100-8170

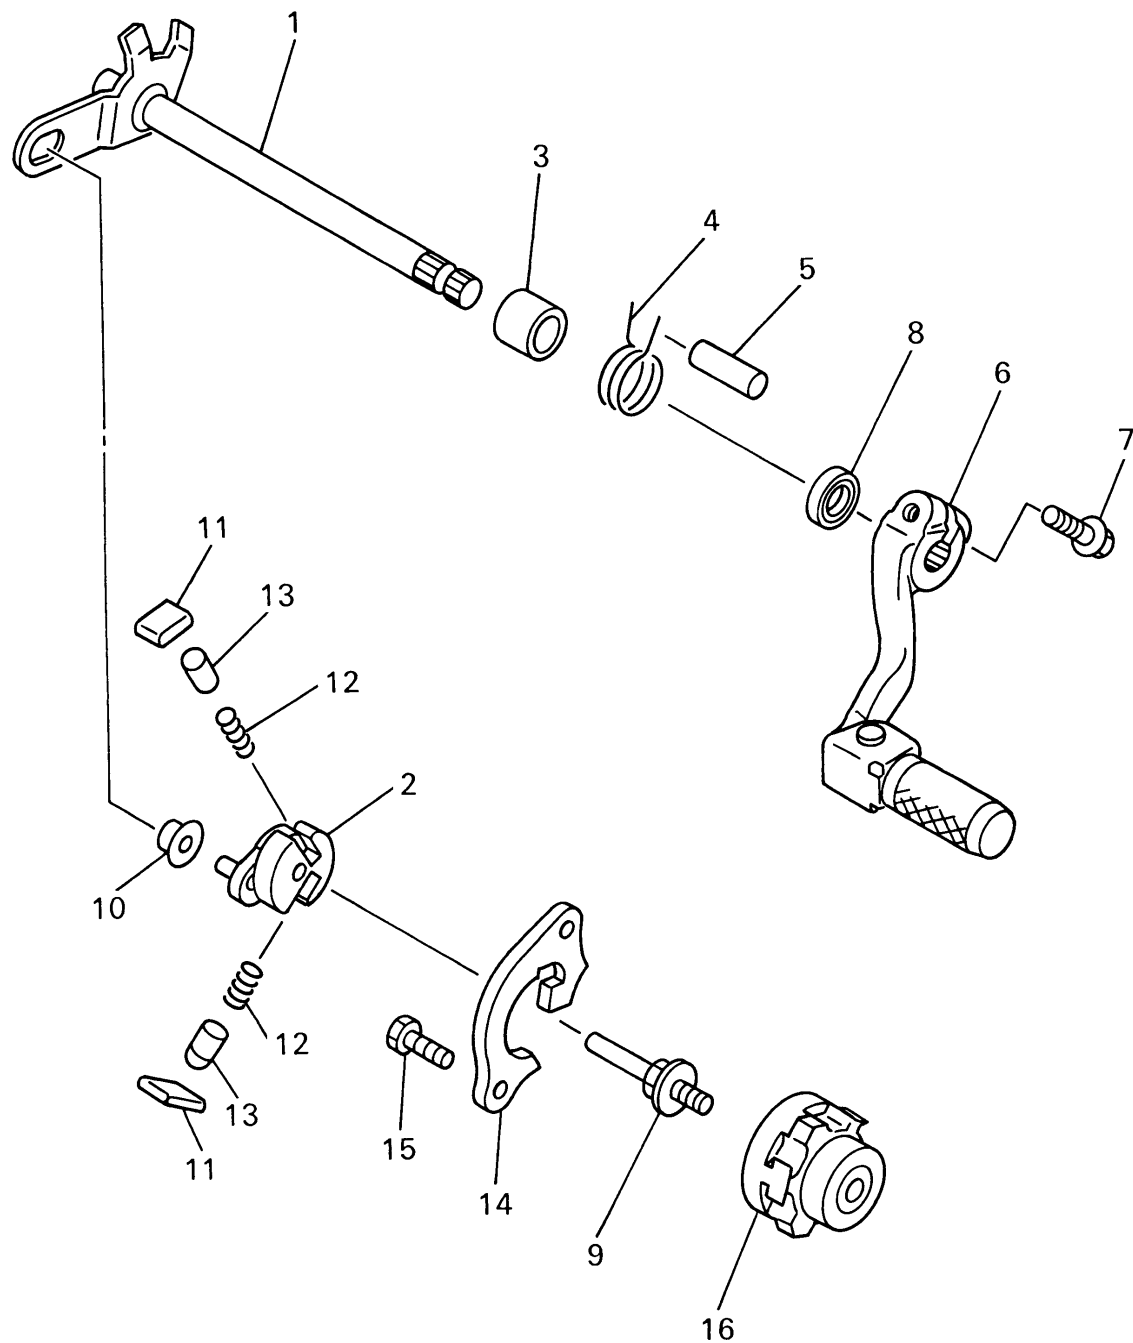


SHIFT SHAFT

Ref. No.	Part Number	Description	Qty	Remarks
1	3XK-18101-02-00	SHIFT SHAFT ASSEMBLY	1	
2	3XK-18122-00-00	LEVER, SHIFT 2	1	
3	90387-124F4-00	COLLAR	1	
4	90508-291A8-00	SPRING, TORSION	1	
5	93608-33046-00	PIN, DOWEL	1	
6	5BE-18110-00-00	SHIFT PEDAL ASSEMBLY	1	
7	95027-06020-00	BOLT, FLANGE	1	
8	93102-12106-00	OIL SEAL (SD 12-22-5 HS)	1	
9	3XJ-18173-00-00	PIN, SHIFT	1	
10	3XJ-18178-00-00	ROLLER, SHIFT LEVER	1	
11	3XJ-18182-00-00	PAWL, SHIFTER	2	
12	90501-052G5-00	SPRING, COMPRESSION	2	
13	3XJ-18184-00-00	PIN, PAWL	2	
14	5BE-18172-00-00	GUIDE, SHIFT	1	
15	90101-06664-00	BOLT	2	
16	4EW-18185-00-00	SEGMENT	1	



 
5BE100-8180

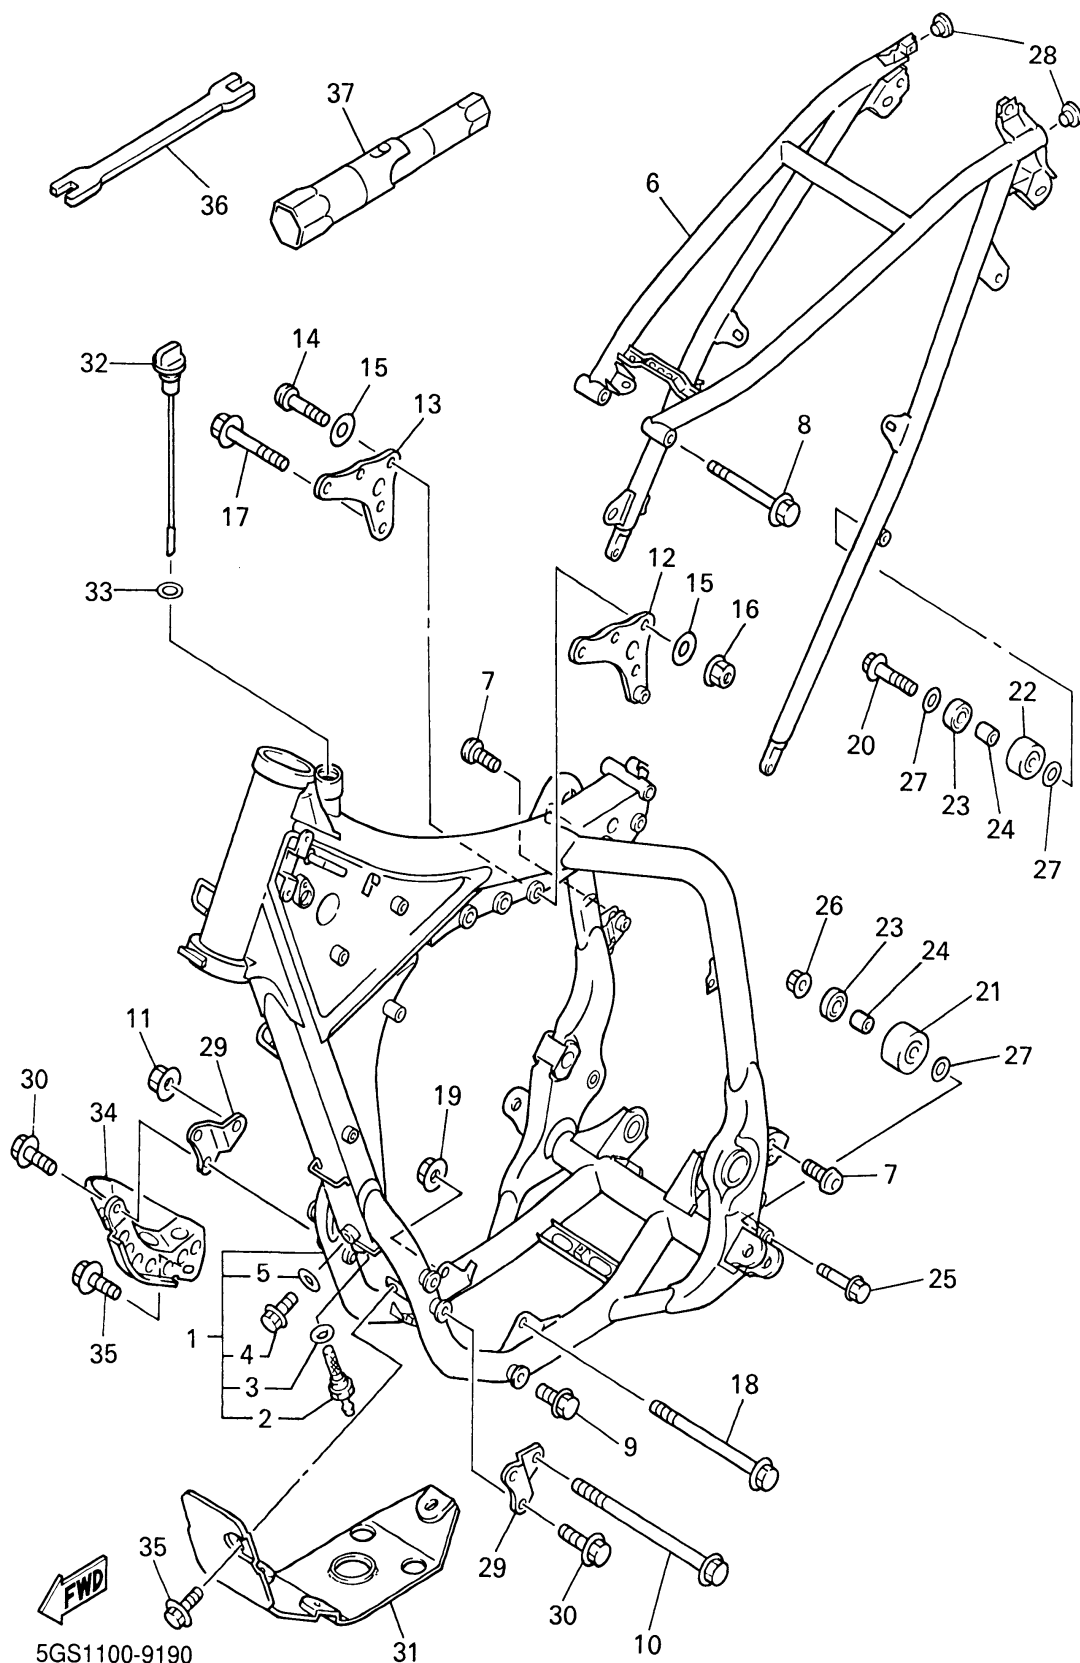

FRAME


Ref. No.	Part Number	Description	Qty	Remarks
1	5GS-21101-00-P0	FRONT FRAME COMP.	1	DPBMC
2	5BE-21756-00-00	. NET, FILTER	1	
3	90430-18130-00	. GASKET	1	
4	95827-08012-00	. BOLT, FLANGE	1	
5	90430-08119-00	. GASKET	1	
6	5BF-21190-00-P0	REAR FRAME COMP.	1	DPBMC
7	90110-08096-00	BOLT, HEXAGON SOCKET HEAD	2	
8	90105-08099-00	BOLT, WASHER BASED	1	
9	95827-08016-00	BOLT, FLANGE	1	
10	95817-10160-00	BOLT, FLANGE	1	
11	95607-10200-00	NUT, SELF-LOCKING	1	
12	5GR-21425-00-00	BRACKET, REAR UPPER 1 ...	1	
13	5BE-21425-00-00	BRACKET, REAR UPPER 1 ...	1	
14	92017-08055-00	BOLT, BUTTON HEAD	3	
15	90201-086P8-00	WASHER, PLATE	6	
16	90185-08169-00	NUT, SELF-LOCKING	3	
17	95817-10050-00	BOLT, FLANGE	1	
18	90105-10733-00	BOLT, WASHER BASED	1	
19	95607-10200-00	NUT, SELF-LOCKING	1	
20	95027-08040-00	BOLT, FLANGE	1	
21	3JD-22178-10-00	TENSIONER	1	
22	4EW-22178-00-00	TENSIONER	1	
23	93300-60804-00	BEARING	2	
24	90387-086N4-00	COLLAR	2	
25	95027-08065-00	BOLT, FLANGE	1	
26	95707-08500-00	NUT, FLANGE	1	
27	90201-086P8-00	WASHER, PLATE	3	
28	90480-17218-00	GROMMET	2	

 CONTINUED ON NEXT FRAME ►

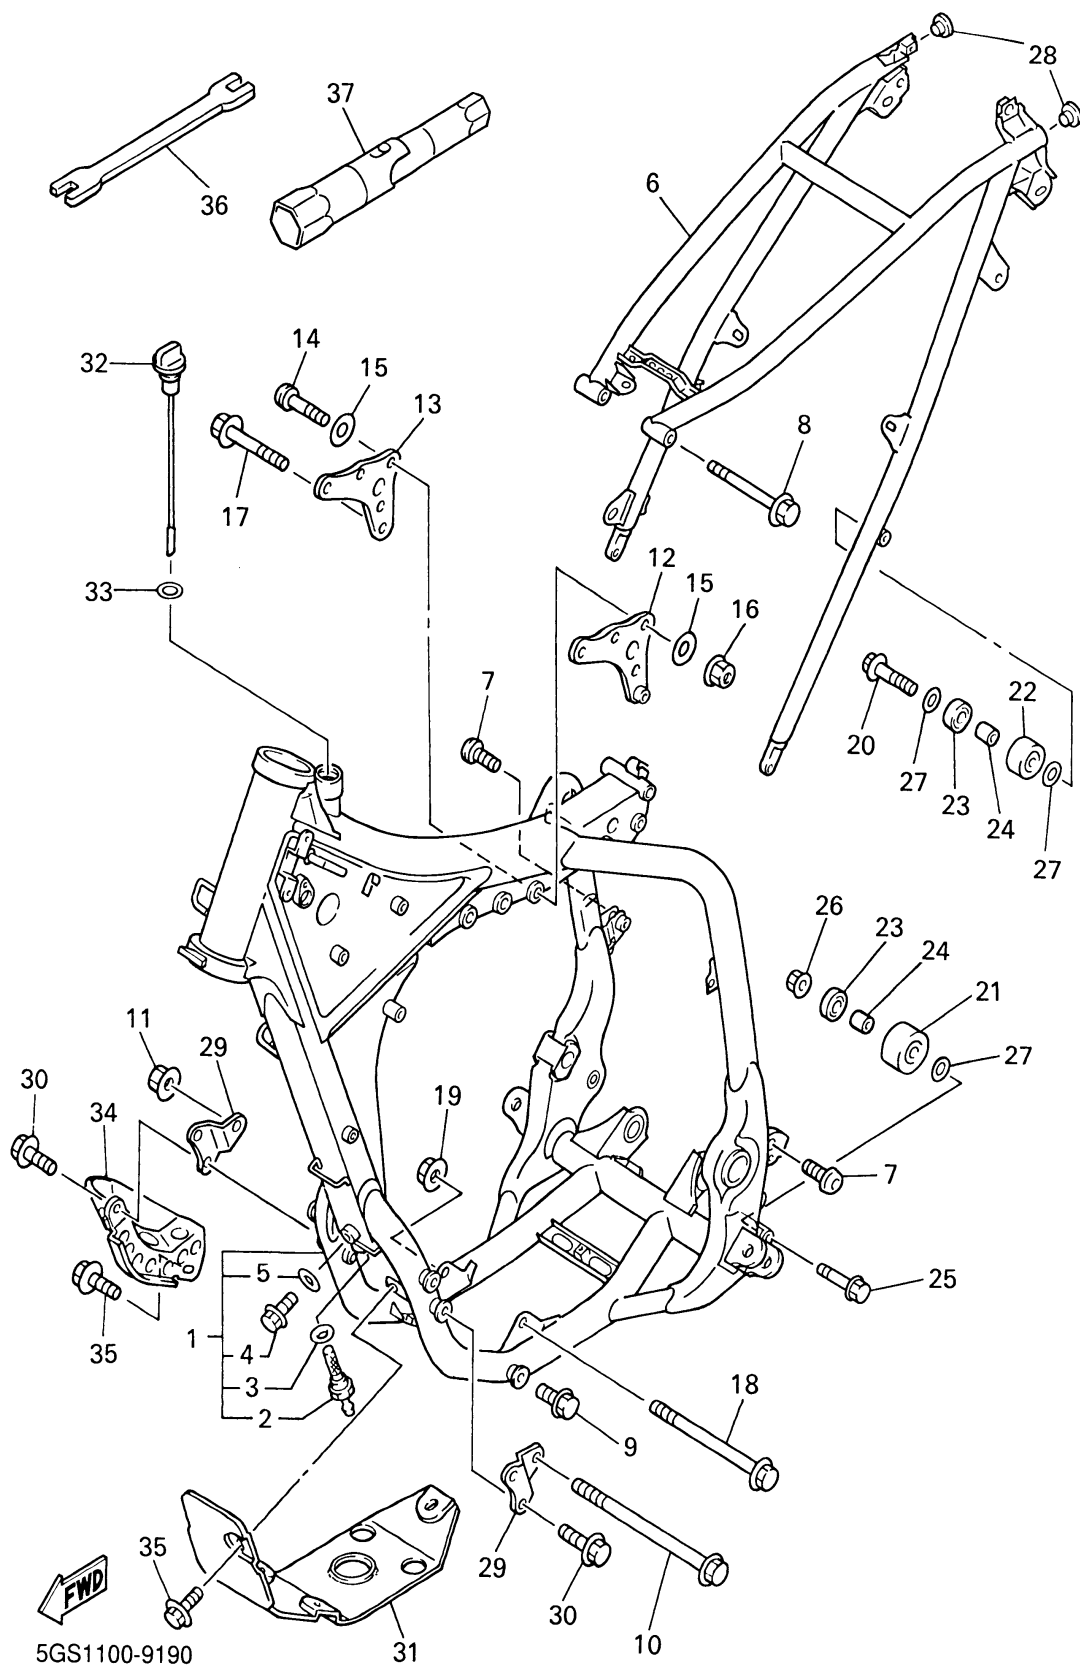

FRAME

Ref. No.	Part Number	Description	Qty	Remarks
29	5BE-21417-00-00	BRACKET, FRONT LOWER 1	2	
30	95827-08016-00	BOLT, FLANGE	4	
31	5BE-21471-00-00	PROTECTOR, ENGINE	1	
32	5BE-15362-00-00	PLUG, OIL LEVEL	1	
33	93210-19123-00	O-RING	1	
34	5BE-2147A-00-00	GUARD, ENGINE 1	1	
35	95027-08012-00	BOLT, FLANGE	5	
36	5ET-28166-00-00	WRENCH, HEXAGON	1	
37	5BE-2814F-00-00	BOX, SPARK PLUG	1	

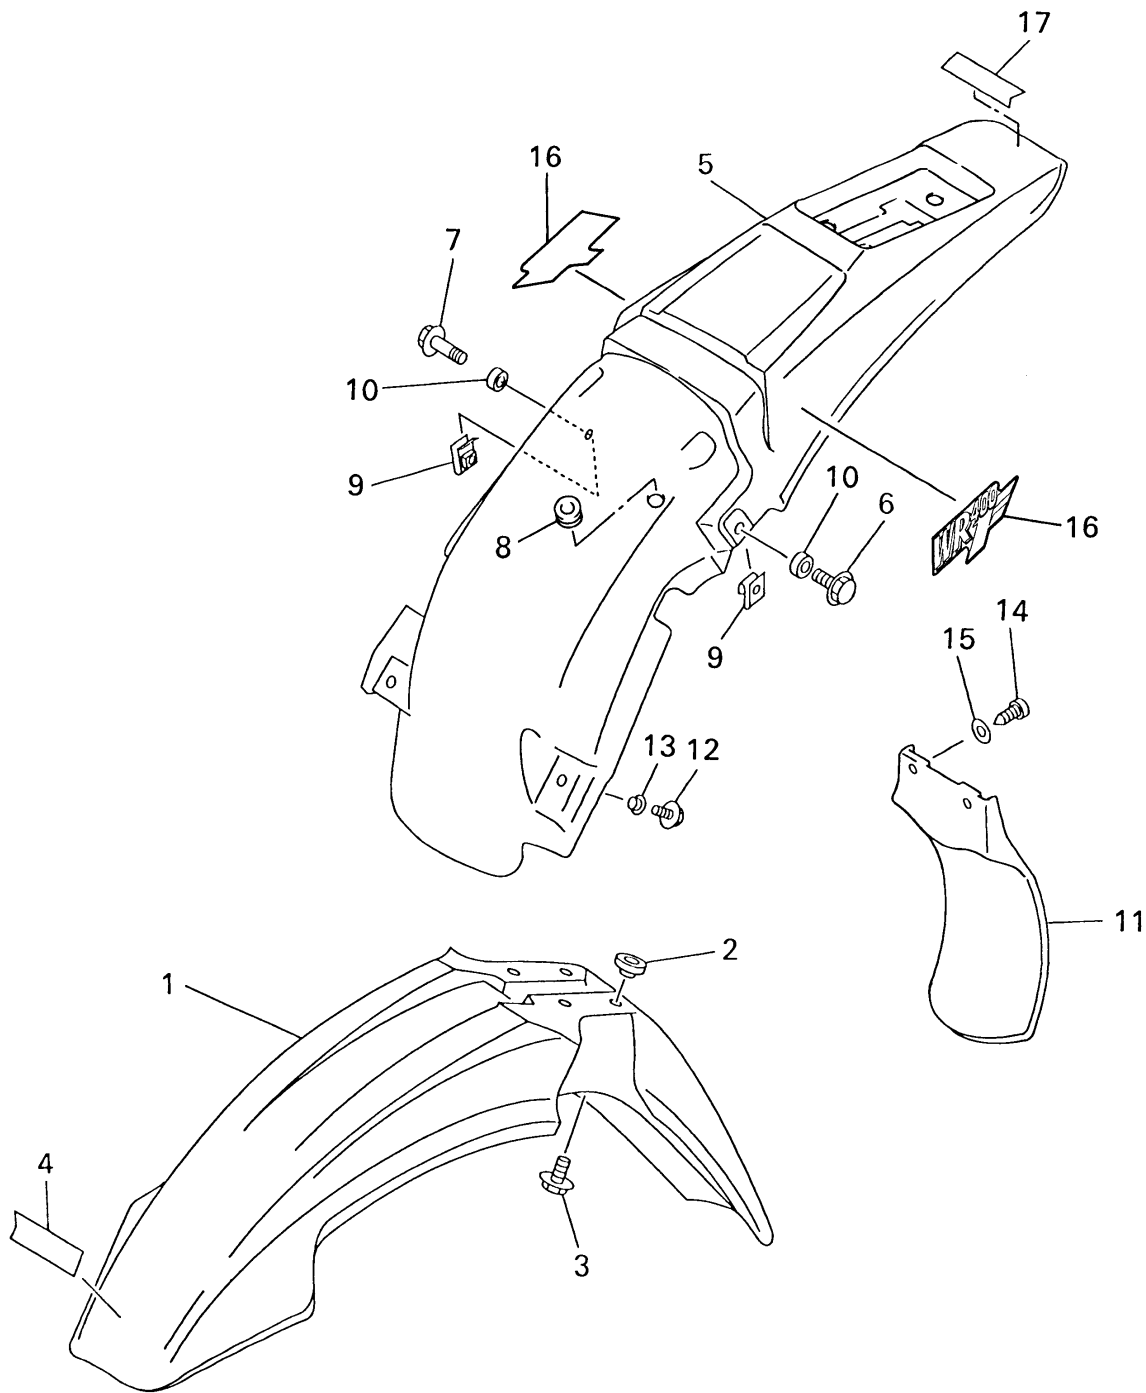 


FENDER

Ref. No.	Part Number	Description	Qty	Remarks
1	4DA-21511-20-00	FENDER, FRONT	1	
2	3JD-21748-00-00	COLLAR	4	
3	90119-06096-00	BOLT, WITH WASHER	4	
4	99241-00080-00	EMBLEM, YAMAHA	1	
5	5BF-21611-00-00	FENDER, REAR	1	
6	95027-06012-00	BOLT, FLANGE	1	
7	90119-06163-00	BOLT, WITH WASHER	1	
8	90480-14323-00	GROMMET	1	
9	90183-06023-00	NUT, SPRING	2	
10	90387-0701A-00	COLLAR	2	
11	5BE-21642-00-00	GUARD, FLAP	1	
12	95027-06014-00	BOLT, FLANGE	2	
13	90387-0600F-00	COLLAR	2	
14	97707-60016-00	SCREW, TAPPING	2	
15	90201-06557-00	WASHER, PLATE	2	
16	5GS-2163G-00-00	EMBLEM 1	2	
17	99241-00080-00	EMBLEM, YAMAHA	1	



 5GS1100-9200

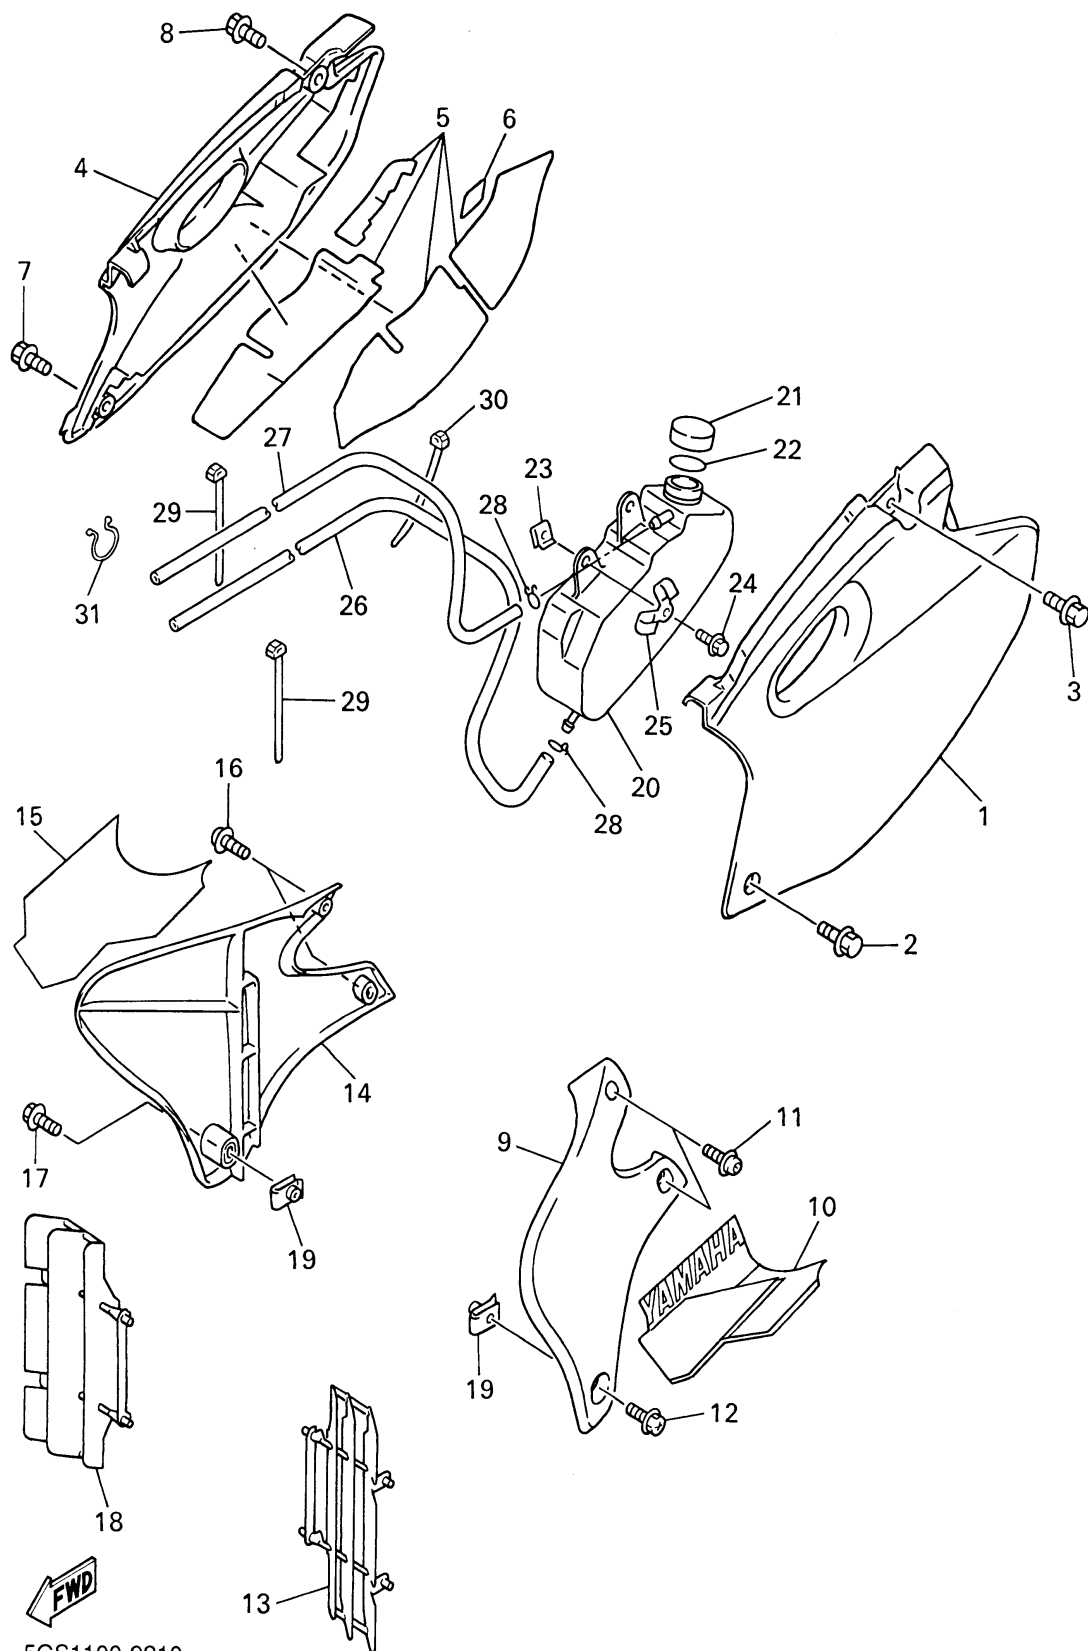


SIDE COVERä

Ref. No.	Part Number	Description	Qty	Remarks
1	5BF-21711-00-00	COVER, SIDE 1	1	
2	95827-06016-00	BOLT, FLANGE	1	
3	90119-08238-00	BOLT, WITH WASHER	1	
4	5BF-21721-00-00	COVER, SIDE 2	1	
5	5BF-2174A-00-00	INSULATOR, SIDE COVER ...	1	
6	3FY-21575-01-00	SEAL 1	1	
7	95827-06016-00	BOLT, FLANGE	1	
8	90119-08238-00	BOLT, WITH WASHER	1	
9	5BE-21731-10-00	COVER, SIDE 3	1	
10	5GS-2173E-00-00	GRAPHIC 1	1	
11	90159-06182-00	SCREW, TAPPING	2	
12	90159-06078-00	SCREW, WITH WASHER	1	
13	5BF-2172A-00-00	PANEL 1	1	
14	5BE-21741-10-00	COVER, SIDE 4	1	
15	5GS-2173F-00-00	GRAPHIC 2	1	
16	90159-06182-00	SCREW, TAPPING	2	
17	90159-06078-00	SCREW, WITH WASHER	1	
18	5BF-2172A-00-00	PANEL 1	1	
19	90183-06069-00	NUT, SPRING	2	
20	5GS-21871-00-00	TANK, RECOVERY	1	
21	26H-21875-00-00	CAP	1	
22	26H-21874-00-00	GASKET	1	
23	90183-06023-00	NUT, SPRING	1	
24	90119-06060-00	BOLT, WITH WASHER	1	
25	5BF-21823-00-00	CLAMP, HOSE	1	
26	91A20-05130-00	TUBE, FLEXIBLE VINYL	1	
27	91A21-05105-00	TUBE, FLEXIBLE	1	
28	90467-08017-00	CLIP	3	
29	90464-13077-00	CLAMP	2	


CONTINUED ON NEXT FRAME ►

SIDE COVERä

Ref. No.	Part Number	Description	Qty	Remarks
30	90464-13073-00	CLAMP	1	
31	90464-16039-00	CLAMP	1	

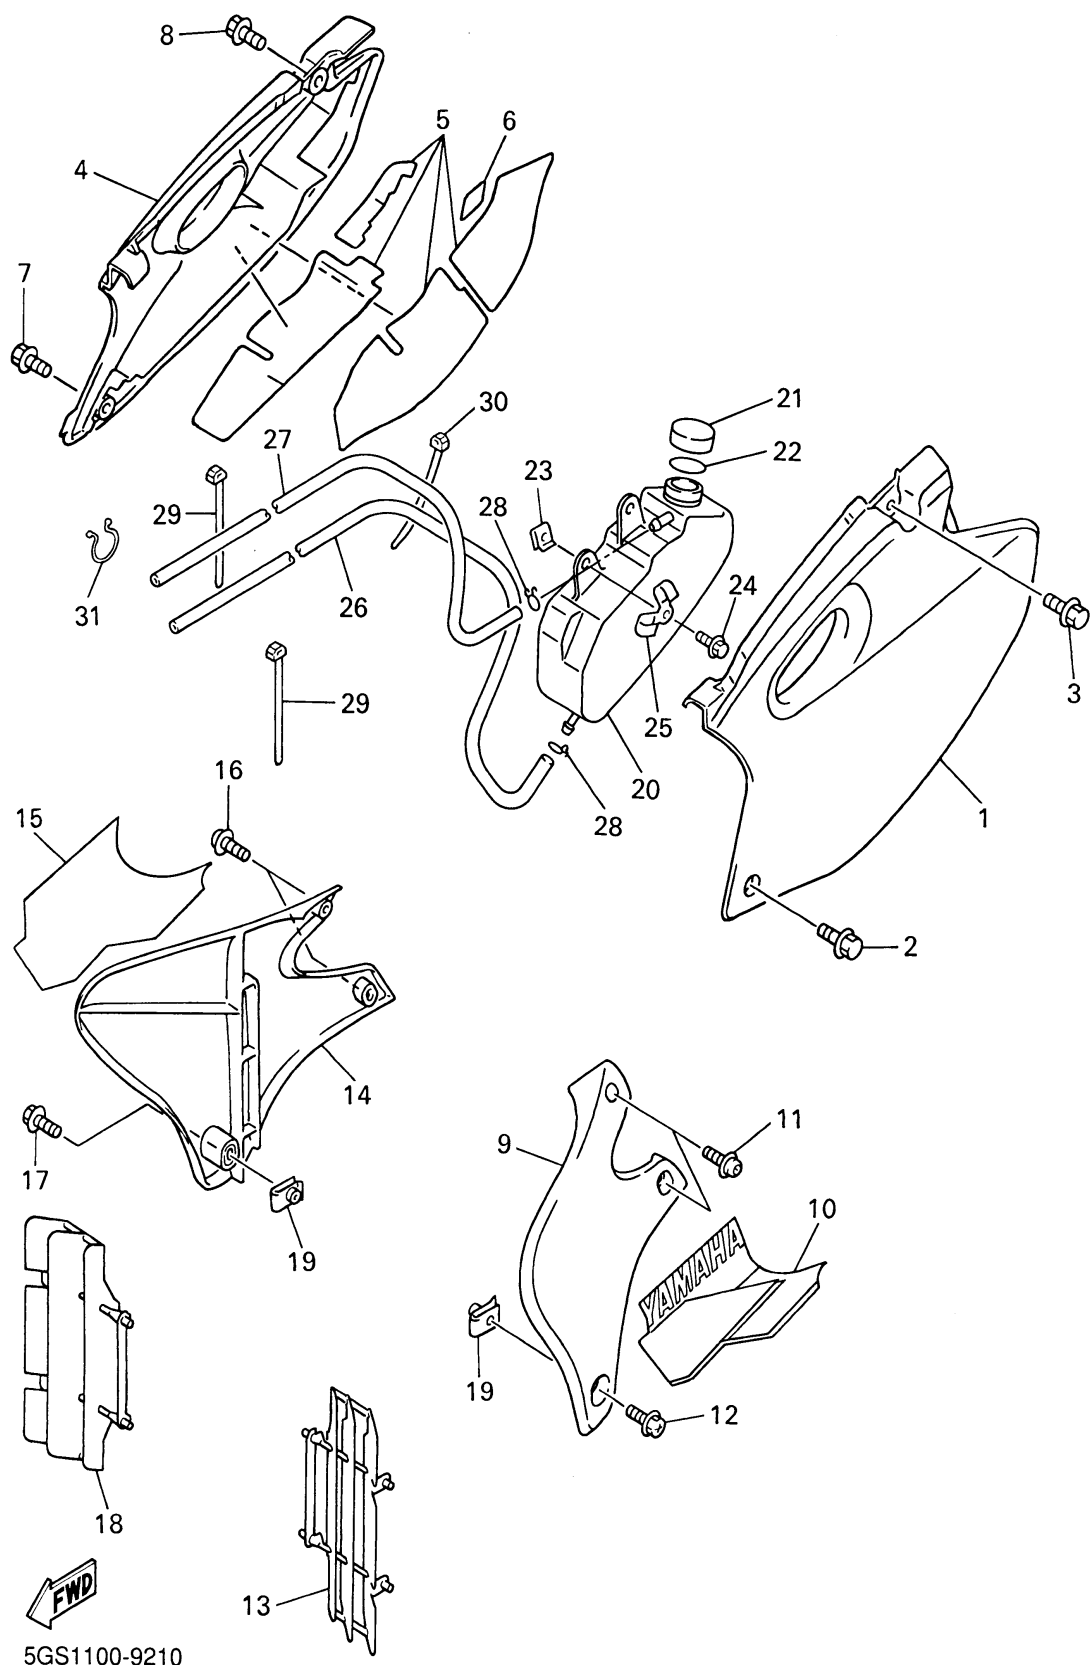 

5GS1100-9210

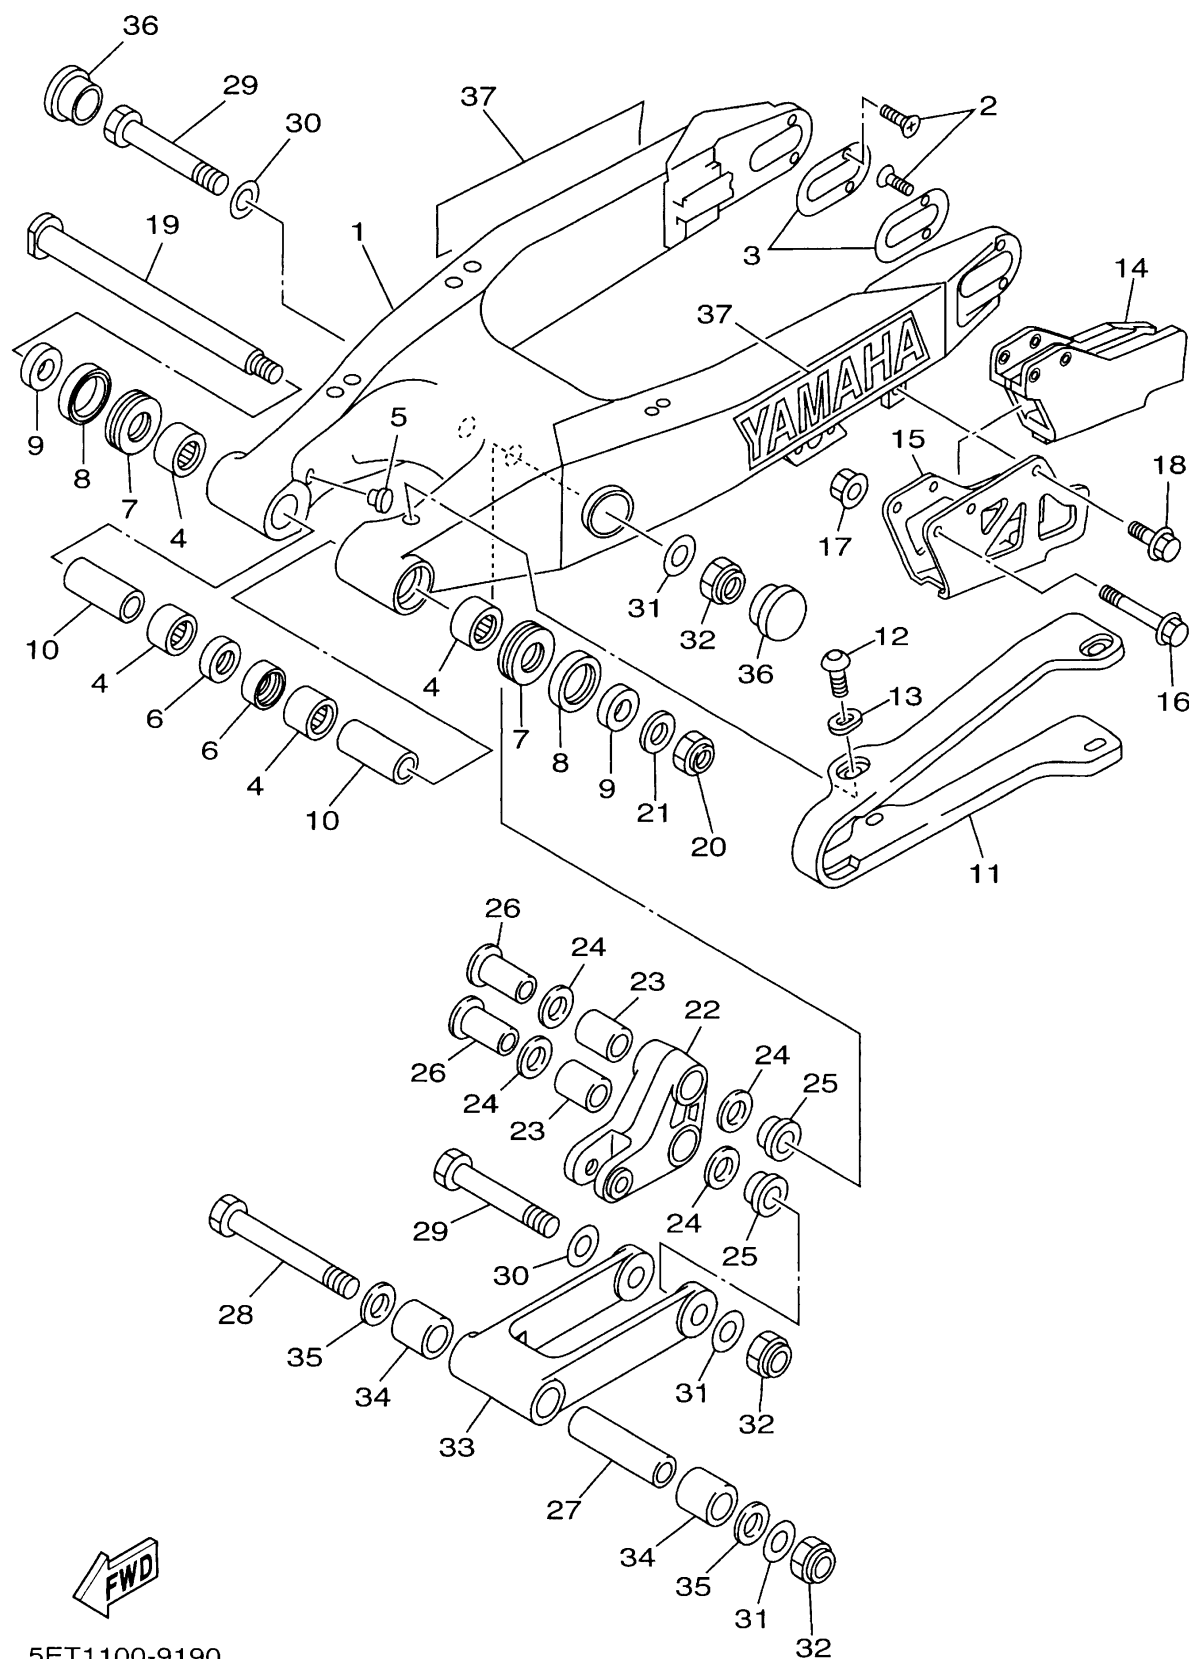 


5ET1100-9190

WR400FL

REAR ARM

Ref. No.	Part Number	Description	Qty	Remarks
1	5CU-22110-00-00	REAR ARM COMP.	1	
2	90151-04048-00	SCREW, COUNTERSUNK	4	
3	5ET-22355-00-00	PATCH	2	
4	93317-22262-00	BEARING	4	
5	90338-16148-00	PLUG	2	
6	93106-22019-00	OIL SEAL	2	
7	93342-22217-00	BEARING	2	
8	93109-28043-00	OIL SEAL	2	
9	90387-1714R-00	COLLAR	2	
10	90387-1714S-00	COLLAR	2	
11	4EW-22151-20-00	SEAL, GUARD	1	
12	90110-05201-00	BOLT, HEXAGON SOCKET HEAD	4	
13	5ET-22156-00-00	WASHER, PLATE	4	
14	4XM-22199-00-00	SUPPORT, CHAIN	1	
15	4XM-22128-00-00	COVER, THRUST 1	1	
16	95027-06050-00	BOLT, FLANGE	2	
17	90179-06568-00	NUT	2	
18	95027-06010-00	BOLT, FLANGE	1	
19	5DH-22141-00-00	SHAFT, PIVOT	1	
20	90185-16127-00	NUT, SELF-LOCKING	1	
21	90201-164H4-00	WASHER, PLATE	1	
22	5ET-2217A-00-00	ARM, RELAY	1	
23	93315-32056-00	BEARING	2	
24	93109-20076-00	OIL SEAL	4	
25	90387-164N2-00	COLLAR	2	
26	90387-164N3-00	COLLAR	2	
27	90387-167Y9-00	COLLAR	1	
28	90109-147F2-00	BOLT	1	

 
CONTINUED ON NEXT FRAME ►

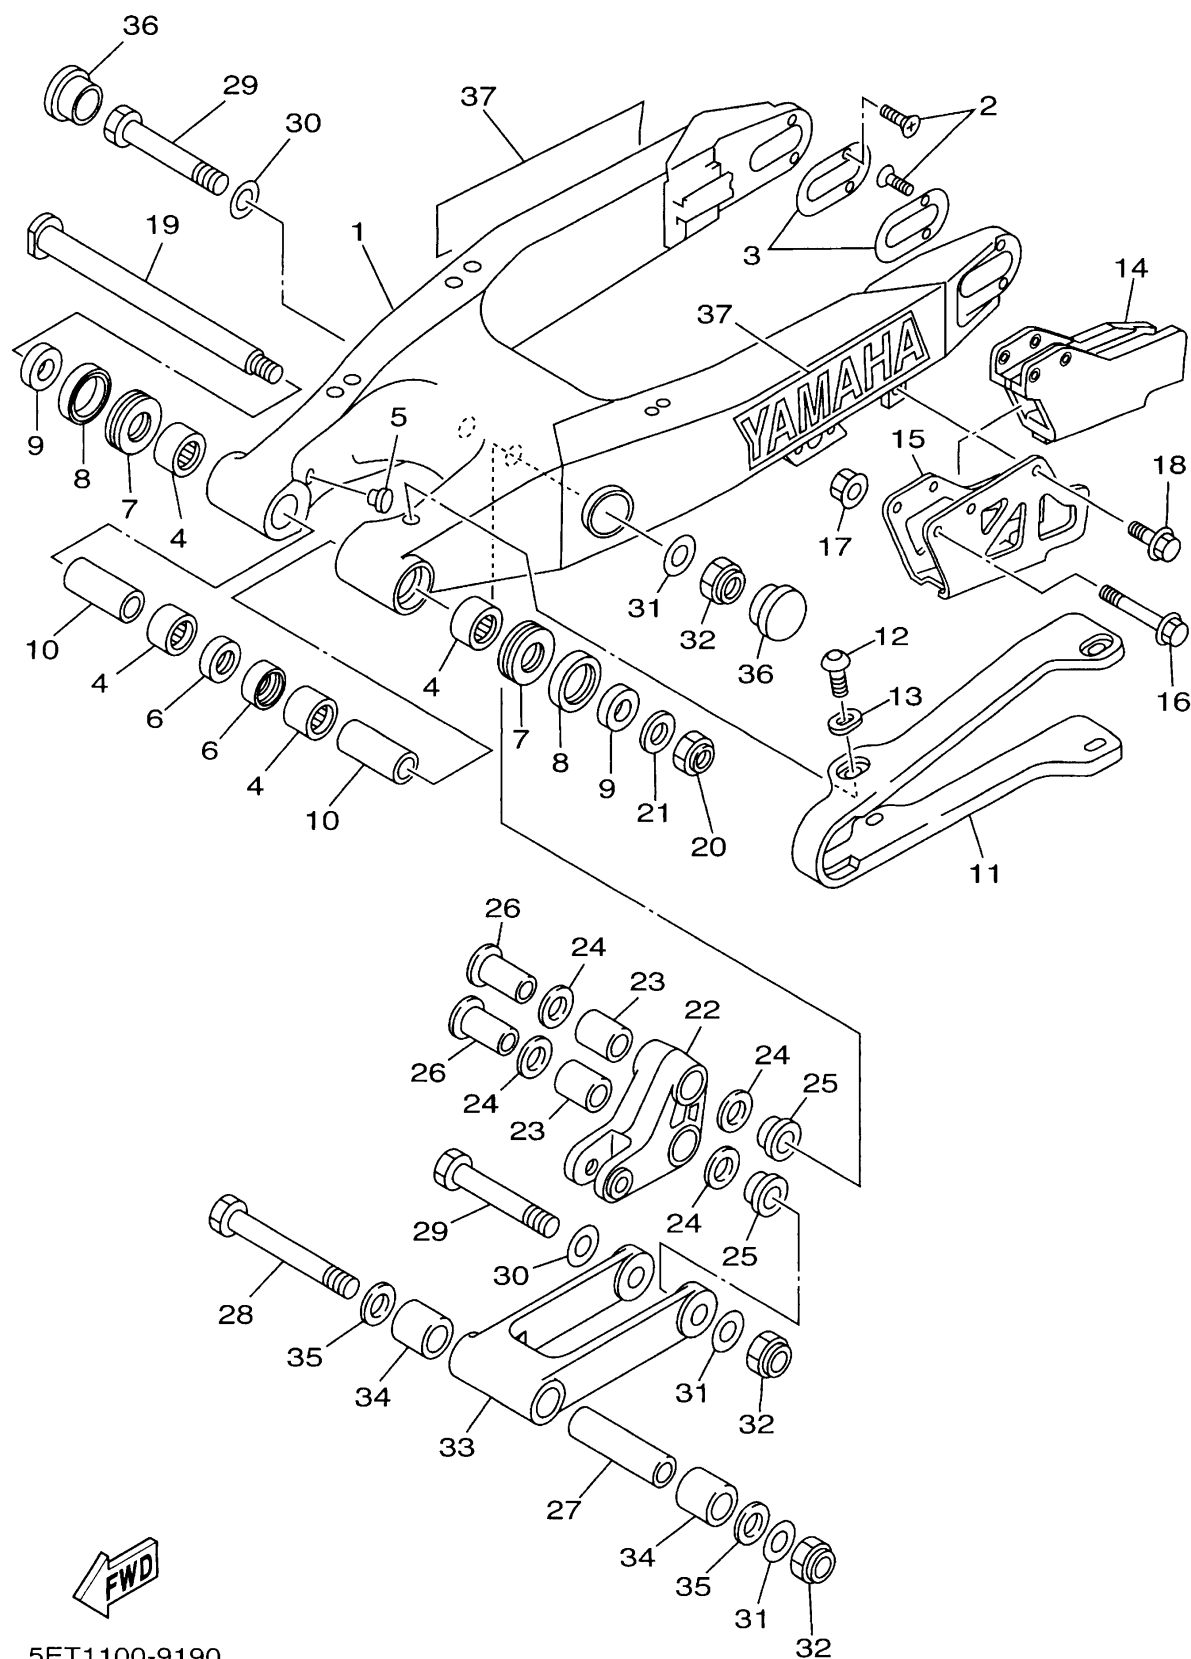

REAR ARM

Ref. No.	Part Number	Description	Qty	Remarks
29	90109-142F4-00	BOLT	2	
30	90201-164H4-00	WASHER, PLATE	2	
31	90201-14740-00	WASHER, PLATE	3	
32	90185-14112-00	NUT, SELF-LOCKING	3	
33	5DH-2217F-00-00	ROD, CONNECTING 1	1	
34	93315-32056-00	BEARING	2	
35	93109-20076-00	OIL SEAL	2	
36	1HX-2135F-10-00	COVER	2	
37	99244-00200-00	EMBLEM, YAMAHA	2	

 5ET1100-9190

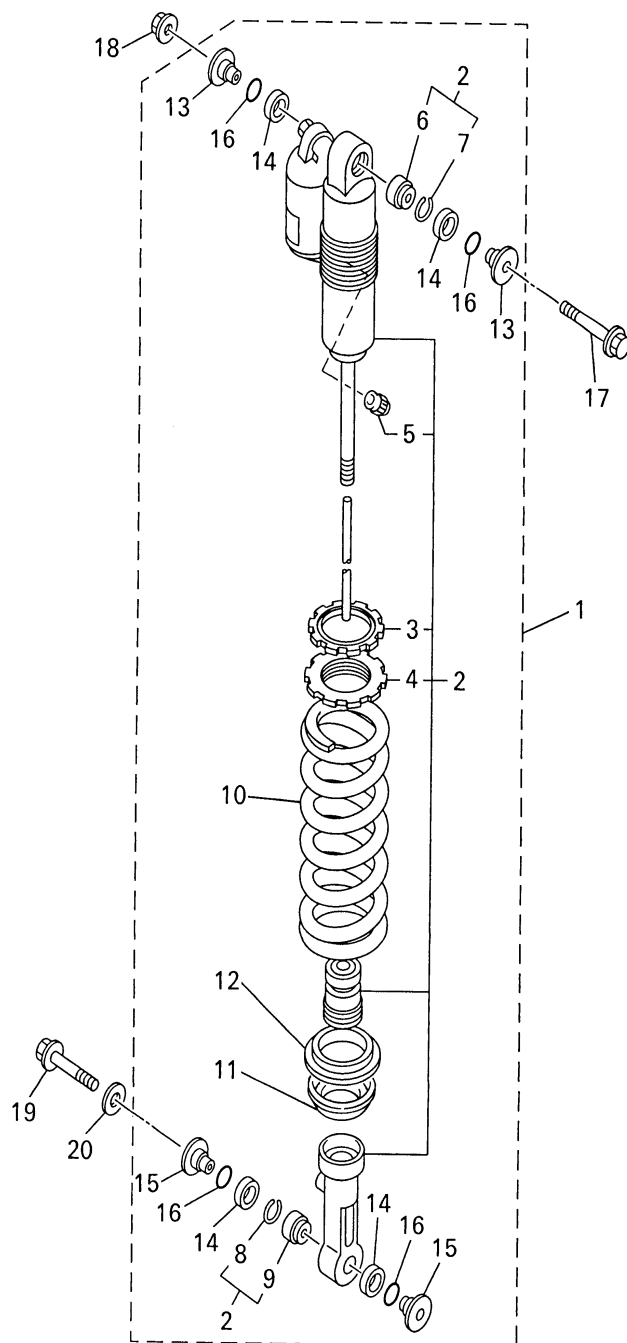

5GR100-9230

REAR SUSPENSION

Ref. No.	Part Number	Description	Qty	Remarks
1	5GS-22210-00-00	SHOCK ABSORBER ASSEMBLY, REAR	1	
2	5GS-22201-00-00	. DAMPER SUB ASSEMBLY ..	1	
3	3SP-22234-00-00	.. GUIDE, SPRING 3	1	
4	3SP-22213-00-00	.. SEAT, SPRING UPPER	1	
5	509-23184-L0-00	.. CAP, AIR VALVE	1	
6	4JX-22226-00-00	.. BUSH, SHOCK ABSORBER LOWER	1	
7	5DH-23183-00-00	.. CIRCLIP	1	
8	5DH-23183-00-00	.. CIRCLIP	1	
9	4JX-22226-00-00	.. BUSH, SHOCK ABSORBER LOWER	1	
10	5DH-22212-30-00	. SPRING (K=5.0)	1	
11	5DH-22214-00-00	. GUIDE, SPRING 1	1	
12	5DH-22224-00-00	. GUIDE, SPRING 2	1	
13	5DH-22253-00-00	. COLLAR, DISTANCE	2	
14	3JE-22475-00-00	. SEAL, DUST	4	
15	4EW-22253-00-00	. COLLAR, DISTANCE	2	
16	4EW-22474-00-00	. SEAL, RING	4	
17	90105-10323-00	BOLT, WASHER BASED	1	
18	95607-10200-00	NUT, SELF-LOCKING	1	
19	90105-105A2-00	BOLT, WASHER BASED	1	
20	90201-112U6-00	WASHER, PLATE	1	

STEERING

Ref. No.	Part Number	Description	Qty	Remarks
1	93332-00081-00	BEARING	1	
2	93332-00068-00	BEARING	1	
3	4EW-23416-00-00	COVER, BALL RACE 2	1	
4	90179-28650-00	NUT	1	
5	5BF-23435-00-00	CROWN, HANDLE	1	
6	90170-24373-00	NUT	1	
7	90201-247L2-00	WASHER, PLATE	1	
8	3SP-23441-00-00	HOLDER, HANDLE UPPER ...	2	
9	95027-08035-00	BOLT, FLANGE	4	
10	95027-08040-00	BOLT, FLANGE	4	
11	4GY-2831V-00-00	STAY, HEAD LIGHT 1	1	
12	4GY-2832V-00-00	STAY, HEAD LIGHT 2	1	
13	4GY-23389-00-00	GUIDE, CABLE	1	
14	90105-05361-00	BOLT, WASHER BASED	1	
15	90201-286K9-00	WASHER, PLATE	2	
16	4DA-23389-00-00	GUIDE, CABLE	1	
17	90105-05361-00	BOLT, WASHER BASED	1	



5BF100-8240

FRONT FORKä

Ref. No.	Part Number	Description	Qty	Remarks
1	5GS-23102-L0-00	FRONT FORK ASSEMBLY (L.H)	1	
2	5ET-23136-L0-00	. TUBE, OUTER (RIGHT)	1	
3	5DH-23120-L0-00	. INNER TUBE COMP 2	1	
4	5ET-23171-L0-00	. PISTON, FRONT FORK	1	
5	5ET-23125-L0-00	. METAL, SLIDE 1	1	
6	4SS-23146-L0-00	. WASHER, OIL SEAL	1	
7	5ET-23145-L0-00	. OIL SEAL	1	
8	4SS-23153-L0-00	. RING, SNAP	1	
9	4SS-23144-L0-00	. SEAL, DUST	1	
10	5GR-23170-L0-00	. CYLINDER COMP., FRONT FORK	1	
11	5GS-2316A-L0-00	. VALVE COMP.	1	
12	5DH-23111-L0-00	. BOLT, CAP	1	
13	5DH-23142-L0-00	. SEAT, SPRING UPPER	1	
14	5ET-23393-L0-00	. NUT, SPECIAL	1	
15	5DH-23195-L0-00	. RUBBER	1	
16	5DH-23149-L0-00	. WASHER, SPRING UPPER	1	
17	5DH-23118-L0-00	. SPACER	1	
18	4SS-23158-L0-00	. GASKET	1	
19	5GR-23141-L0-00	. SPRING, FRONT FORK (K=0.46)	1	
20	3JD-2312G-L0-00	. PLUG	1	
21	5GS-23103-L0-00	FRONT FORK ASSEMBLY (R.H)	1	
22	5ET-23136-L0-00	. TUBE, OUTER (RIGHT)	1	
23	5BF-23110-L0-00	. INNER TUBE COMP 1	1	
24	5ET-23171-L0-00	. PISTON, FRONT FORK	1	
25	5ET-23125-L0-00	. METAL, SLIDE 1	1	
26	4SS-23146-L0-00	. WASHER, OIL SEAL	1	
27	5ET-23145-L0-00	. OIL SEAL	1	


CONTINUED ON NEXT FRAME ►



5GS1100-9250


FRONT FORKä

Ref. No.	Part Number	Description	Qty	Remarks
28	4SS-23153-L0-00	. RING, SNAP	1	
29	4SS-23144-L0-00	. SEAL, DUST	1	
30	5GR-23170-L0-00	. CYLINDER COMP., FRONT FORK	1	
31	5GS-2316A-L0-00	. VALVE COMP.	1	
32	5DH-23111-L0-00	. BOLT, CAP	1	
33	5DH-23142-L0-00	. SEAT, SPRING UPPER	1	
34	5ET-23393-L0-00	. NUT, SPECIAL	1	
35	5DH-23195-L0-00	. RUBBER	1	
36	5DH-23149-L0-00	. WASHER, SPRING UPPER ..	1	
37	5DH-23118-L0-00	. SPACER	1	
38	4SS-23158-L0-00	. GASKET	1	
39	5GR-23141-L0-00	. SPRING, FRONT FORK (K=0.46)	1	
40	3JD-2312G-L0-00	. PLUG	1	
41	5BF-23340-L0-00	UNDER BRACKET COMP.	1	
42	95021-08040-00	BOLT, FLANGE	8	
43	4SS-2314G-L0-00	PROTECTOR GUIDE COMP., 2	1	
44	5DH-2314F-L0-00	PROTECTOR GUIDE COMP., 1	1	
45	4SS-23346-L0-00	BOLT 1	2	
46	5BF-2314J-00-00	PROTECTOR COMP., 2	1	
47	5DH-2314H-00-00	PROTECTOR COMP., 1	1	
48	3SP-23356-L0-00	BOLT 2	6	
49	4EW-2331E-L0-00	GUIDE, CABLE	1	

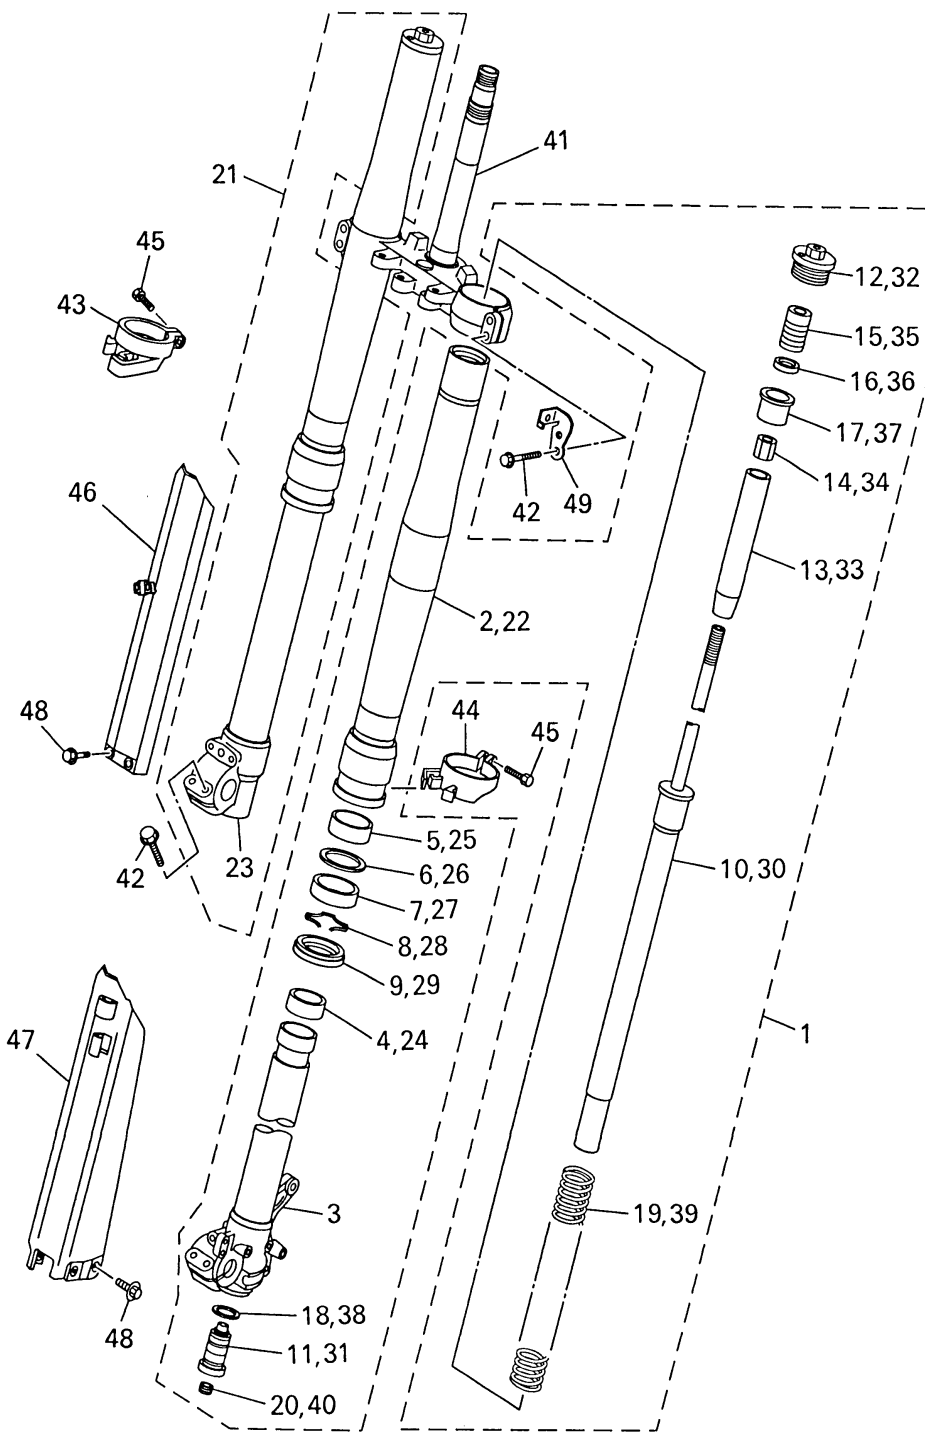 

5GS1100-9250

 FUEL TANKä

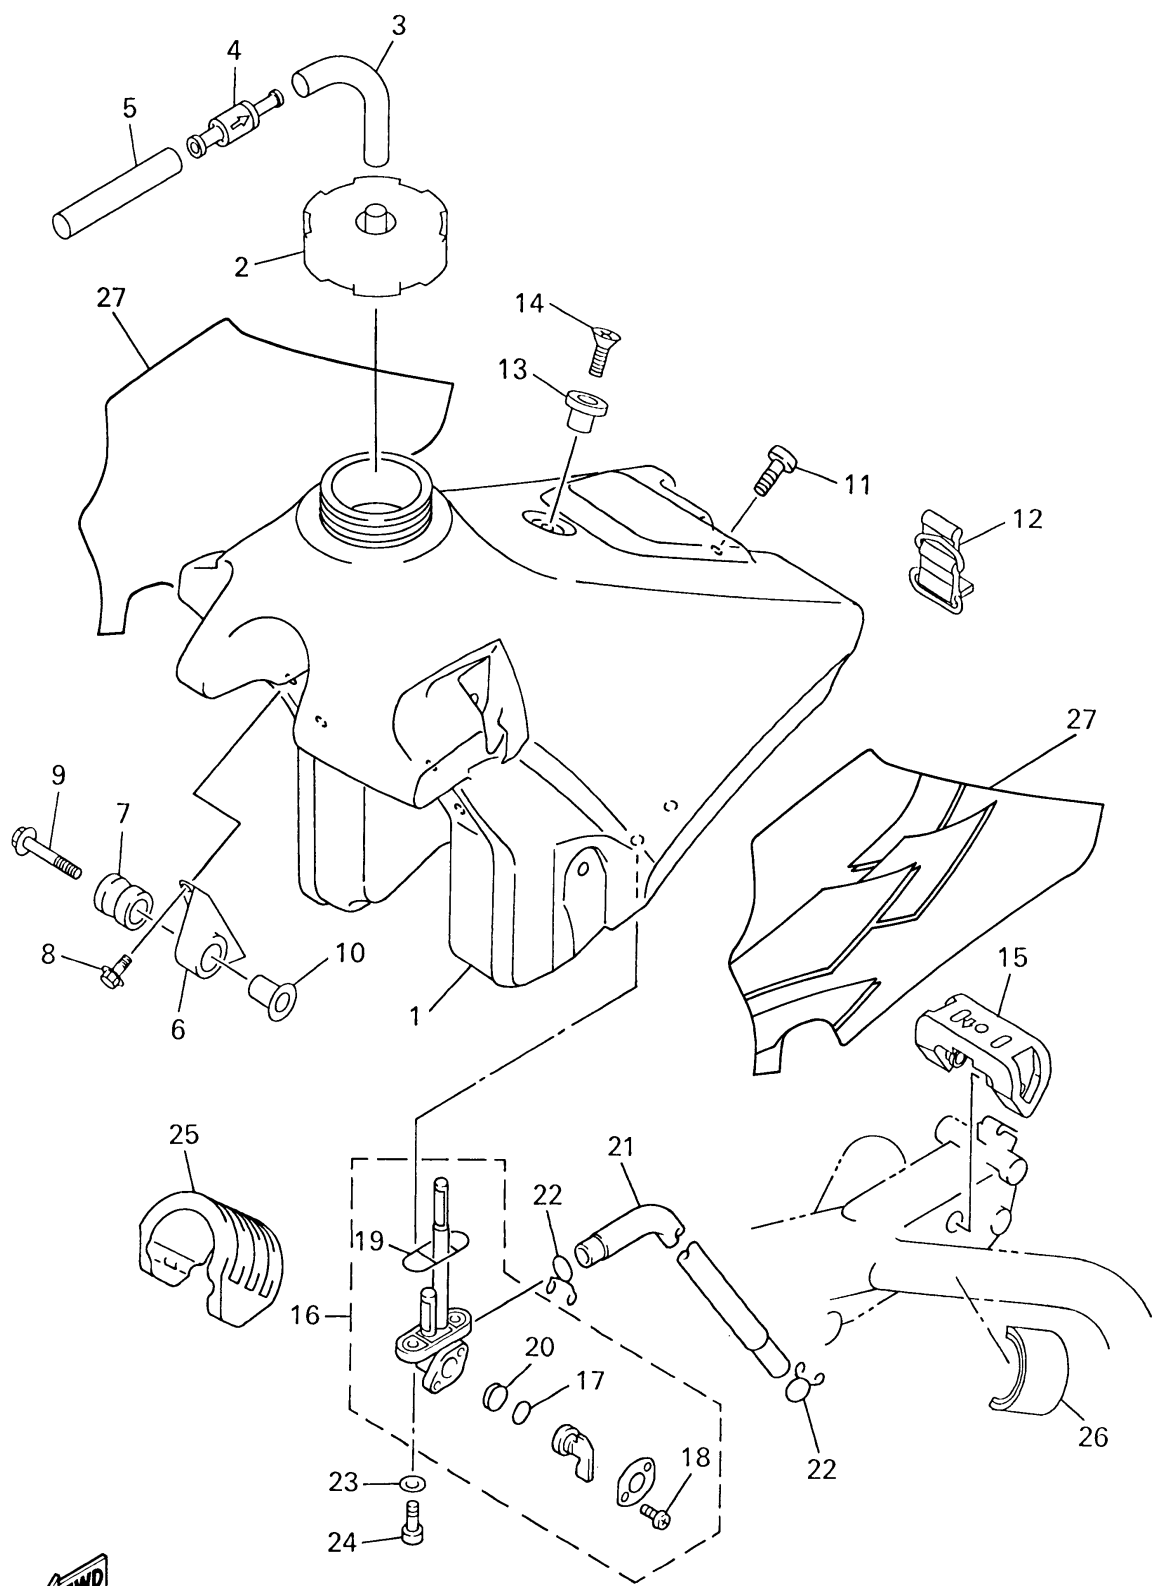


Ref. No.	Part Number	Description	Qty	Remarks
1	5GS-24110-00-00	FUEL TANK COMP.	1	
2	1UY-24610-00-00	CAP ASSEMBLY	1	
3	90445-09220-00	HOSE	1	
4	3XJ-24380-00-00	PIPE JOINT ASSEMBLY	1	
5	90445-09100-00	HOSE	1	
6	24X-24144-00-00	HOLDER, DAMPER	2	
7	90480-18549-00	GROMMET	2	
8	95027-06016-00	BOLT, FLANGE	4	
9	90119-06214-00	BOLT, WITH WASHER	2	
10	3JD-24186-00-00	WASHER, SPECIAL	2	
11	98907-06020-00	SCREW, BIND	1	
12	3SP-24173-00-00	BAND, TANK FITTING 1	1	
13	4EW-2412F-00-00	BRACKET, SEAT	1	
14	98707-06025-00	SCREW, FLAT HEAD	1	
15	4SS-24181-00-00	DAMPER, LOCATING 1	1	
16	2GU-24500-01-00	FUEL COCK ASSEMBLY 1 ...	1	
17	3AJ-24534-00-00	. SEAL, COCK	1	
18	97801-03008-00	. SCREW, PAN HEAD	2	
19	4X8-24512-00-00	. O-RING	1	
20	3AJ-24523-00-00	. VALVE PACKING	1	
21	90445-114K8-00	HOSE	1	
22	90467-10008-00	CLIP	2	
23	90202-05193-00	WASHER, PLATE	2	
24	90149-06011-00	SCREW	2	
25	5BE-24182-00-00	DAMPER, LOCATING 2	1	
26	3V6-22358-00-00	SEAL 1	2	
27	5GS-24240-00-00	GRAPHIC SET	1	

FWD
5GS1100-9260

SEAT


Ref. No.	Part Number	Description	Qty	Remarks
1	5GS-24710-00-00	SINGLE SEAT ASSEMBLY ...	1	
2	5GS-24731-00-00	. COVER, SEAT	1	
3	5BE-24728-00-00	. BRACKET, SEAT	2	
4	97007-06012-00	. BOLT	4	
5	92907-06100-00	. WASHER, SPRING	4	

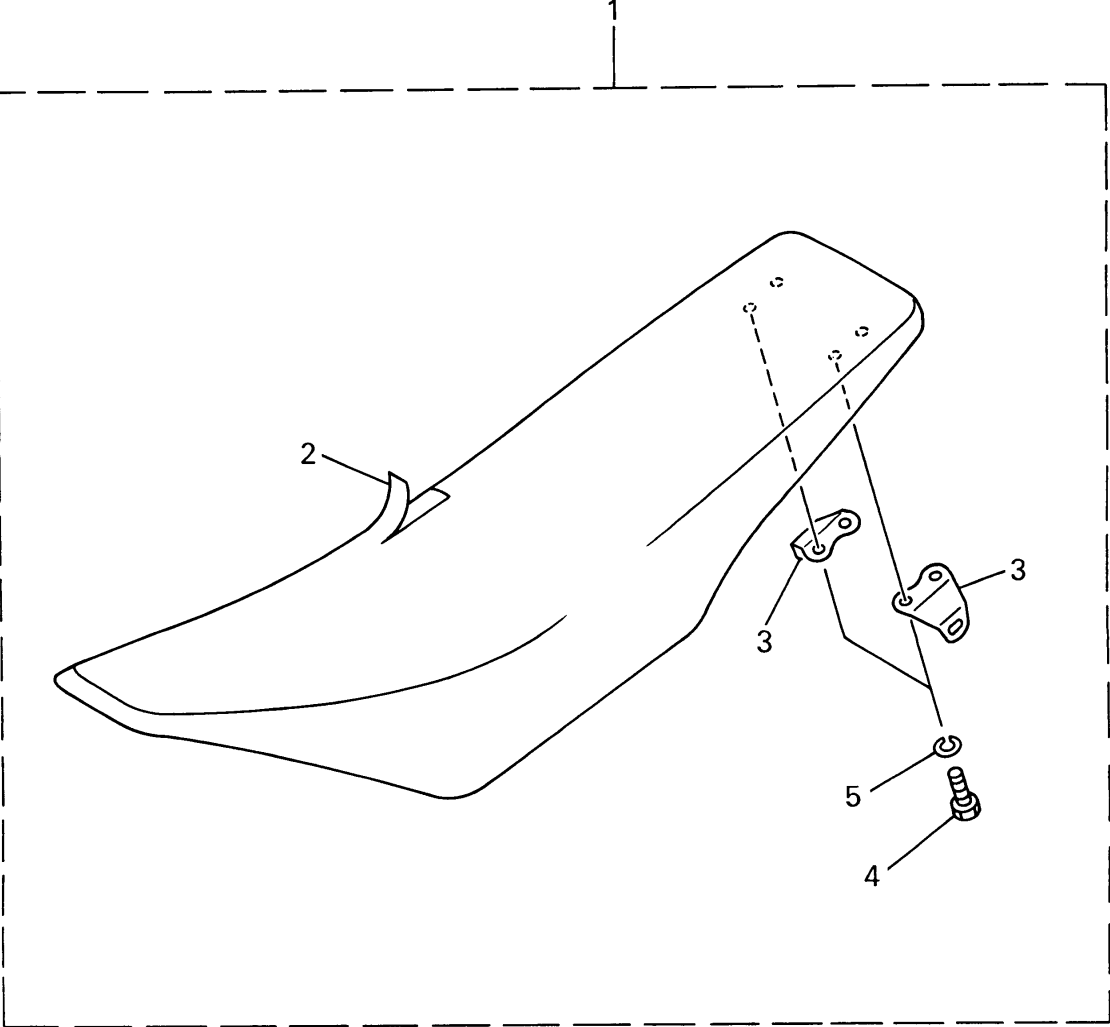 

5BE100-8270

FRONT WHEEL


Ref. No.	Part Number	Description	Qty	Remarks
1	5BF-25111-00-00	HUB, FRONT	1	
2	93306-90403-00	BEARING	2	
3	5DH-25117-00-00	SPACER, BEARING	1	
4	93102-26468-00	OIL SEAL	1	
5	94416-21613-00	RIM (1.60-21)	1	
6	4DA-25104-00-00	SPOKE SET, FRONT	1	
7	94108-21008-00	TIRE (80/100-21 51M D739F) ..	1	FOR ZAF DUNLOP
8	94227-21101-00	TUBE (80/100-21 TR4 BTL) ...	1	FOR ZAF DUNLOP
9	94309-21161-00	BAND, RIM (70-80/100-21)	1	FOR ZAF DUNLOP
10	2J5-25394-01-00	SPACER, BEAD	1	
11	5BE-25181-00-00	AXLE, WHEEL	1	
12	5DH-25183-00-00	COLLAR, WHEEL	1	
13	5BF-25190-00-00	GEAR UNIT ASSEMBLY	1	
14	90179-16672-00	NUT	1	

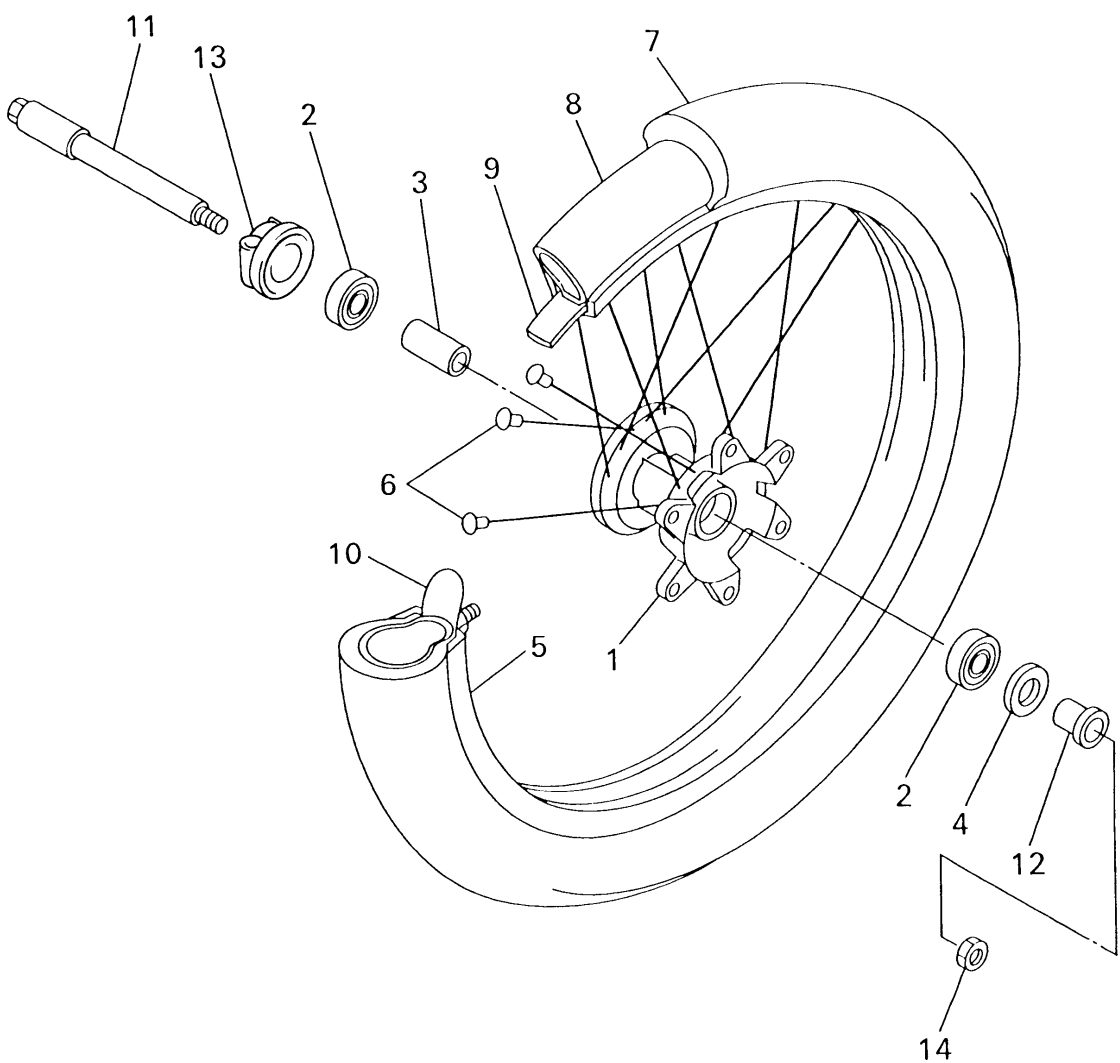 


5BF100-8280

FRONT BRAKE CALIPER

Ref. No.	Part Number	Description	Qty	Remarks
1	4XM-2582T-00-00	DISC, BRAKE	1	
2	90149-06327-00	SCREW	6	
3	5DH-2580T-00-00	CALIPER ASSEMBLY (LEFT) ..	1	
4	4EW-W0057-00-00	. PISTON ASSEMBLY, CALIPER	1	
5	3JD-W0047-00-00	. . CALIPER SEAL KIT	1	
6	5DH-25919-00-00	. SUPPORT, PAD	1	
7	1UY-W0048-50-00	. BLEED SCREW KIT	1	
8	5DH-W0045-00-00	. BRAKE PAD KIT	1	
9	5DH-25933-00-00	. PIN, PAD	1	
10	5DH-25916-00-00	. PLUG	1	
11	90105-08659-00	BOLT, WASHER BASED	2	
12	5DH-2314E-00-00	COVER, HOSE	1	
13	95827-06012-00	BOLT, FLANGE	1	
14	95027-08020-00	BOLT, FLANGE	1	
15	5DH-25875-00-00	HOLDER, BRAKE HOSE 1	1	
16	92907-08200-00	WASHER	1	

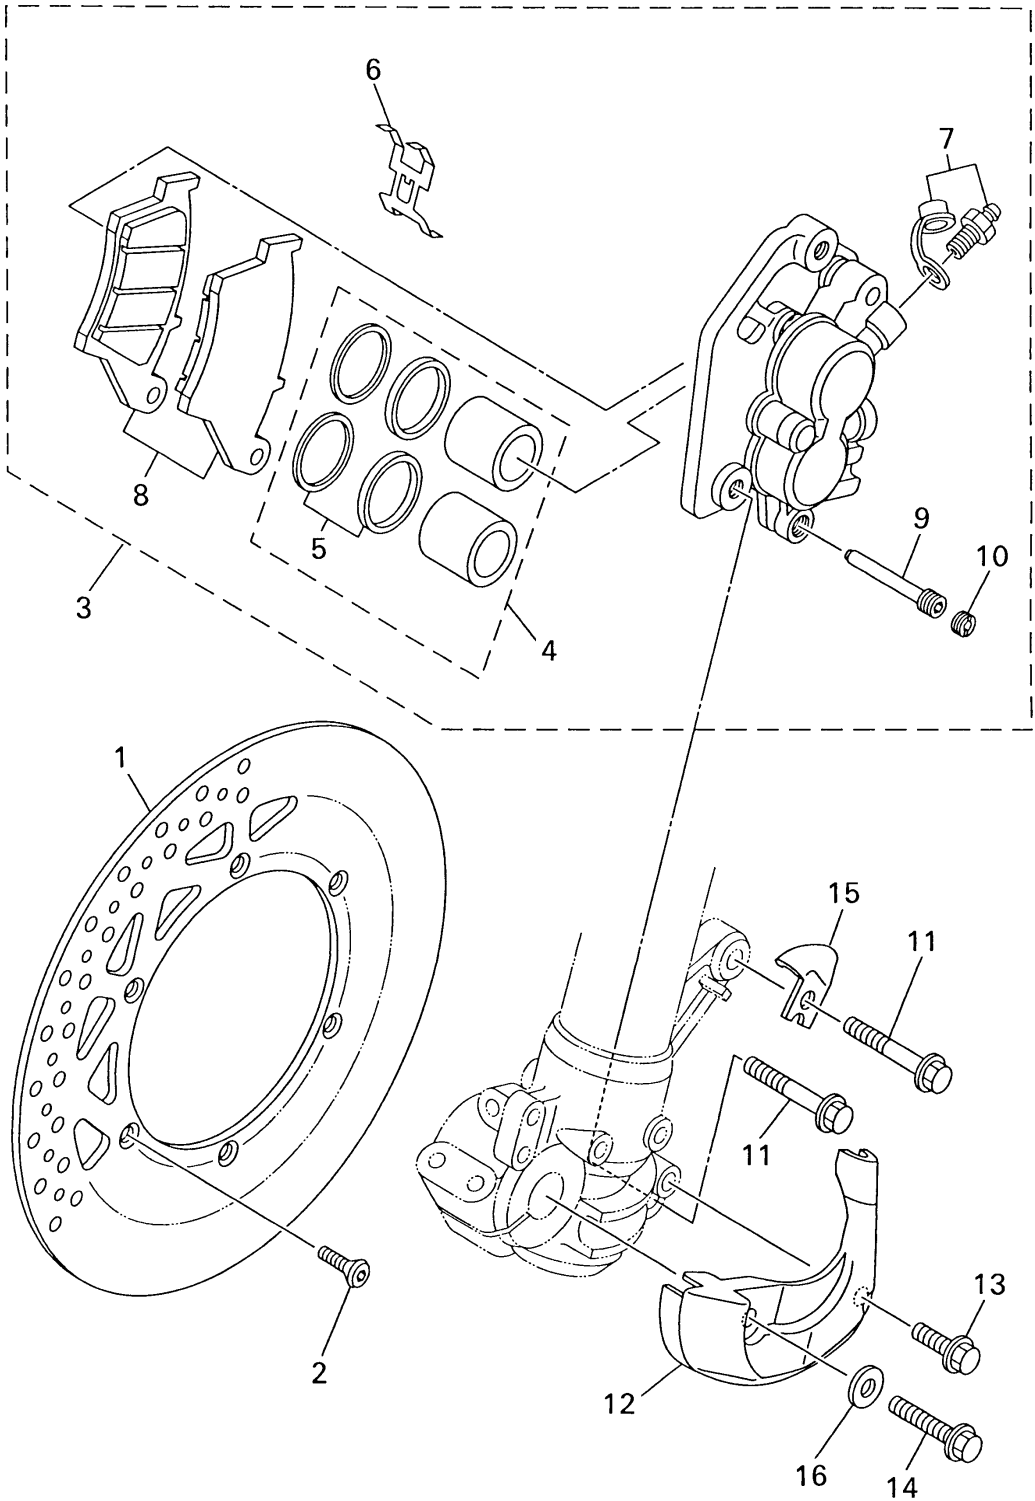 

5BE100-8290

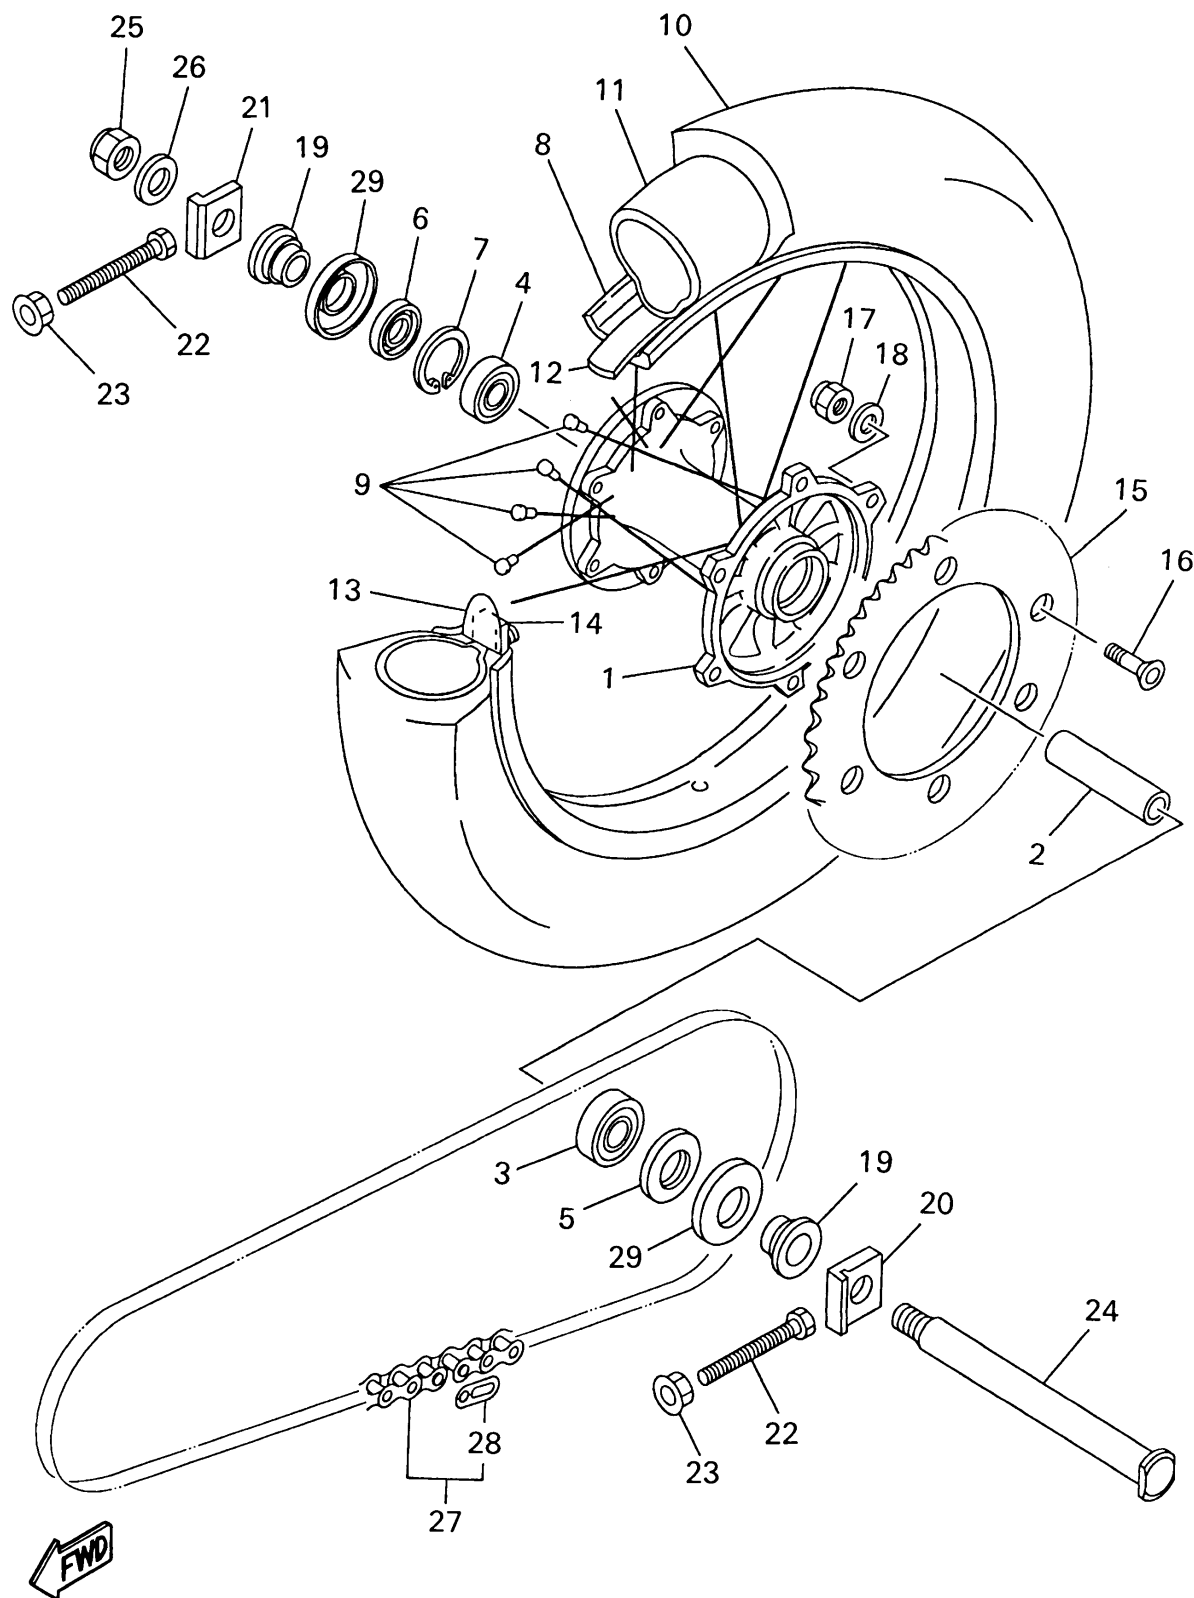 


REAR WHEELä

Ref. No.	Part Number	Description	Qty	Remarks
1	5ET-25311-00-00	HUB, REAR	1	
2	5ET-25317-00-00	SPACER, BEARING	1	
3	93306-27205-00	BEARING	1	
4	93306-07202-00	BEARING	1	
5	93106-30044-00	OIL SEAL	1	
6	93106-30045-00	OIL SEAL	1	
7	99009-45500-00	CIRCLIP	1	
8	94421-18610-00	RIM (2.15-18)	1	
9	5GS-25304-00-00	SPOKE SET, REAR	1	
10	94111-18008-00	TIRE (110/100-18 64M D739) ..	1	FOR ZAF DUNLOP
11	94212-18188-00	TUBE (120/90-18)	1	FOR ZAF DUNLOP
12	94309-18146-00	BAND, RIM (110/100-18)	1	FOR ZAF DUNLOP
13	3JE-25394-00-00	SPACER, BEAD	2	
14	4XM-25364-00-00	DAMPER	2	
15	5GS-25448-50-00	SPROCKET, DRIVEN (48T) ...	1	AP
	5GS-25450-50-00	SPROCKET, DRIVEN (50T) ...	1	STD
	5GS-25452-50-00	SPROCKET, DRIVEN (52T) ...	1	AP
16	90109-081G1-00	BOLT	6	
17	90185-08169-00	NUT, SELF-LOCKING	6	
18	90201-08326-00	WASHER, PLATE	6	
19	5ET-25383-00-00	COLLAR, WHEEL	2	
20	5ET-25388-00-00	PULLER, CHAIN 1	1	
21	5ET-25389-00-00	PULLER, CHAIN 2	1	
22	90101-08777-00	BOLT	2	
23	90179-08299-00	NUT	2	
24	5ET-25381-00-00	AXLE, WHEEL	1	
25	90185-20168-00	NUT, SELF-LOCKING	1	
26	90201-203U1-00	WASHER, PLATE	1	
27	9Y581-76113-00	CHAIN (DID 520VM-114LL) ...	1	

CONTINUED ON NEXT FRAME ➤

5GS1100-9300

 
REAR WHEELä

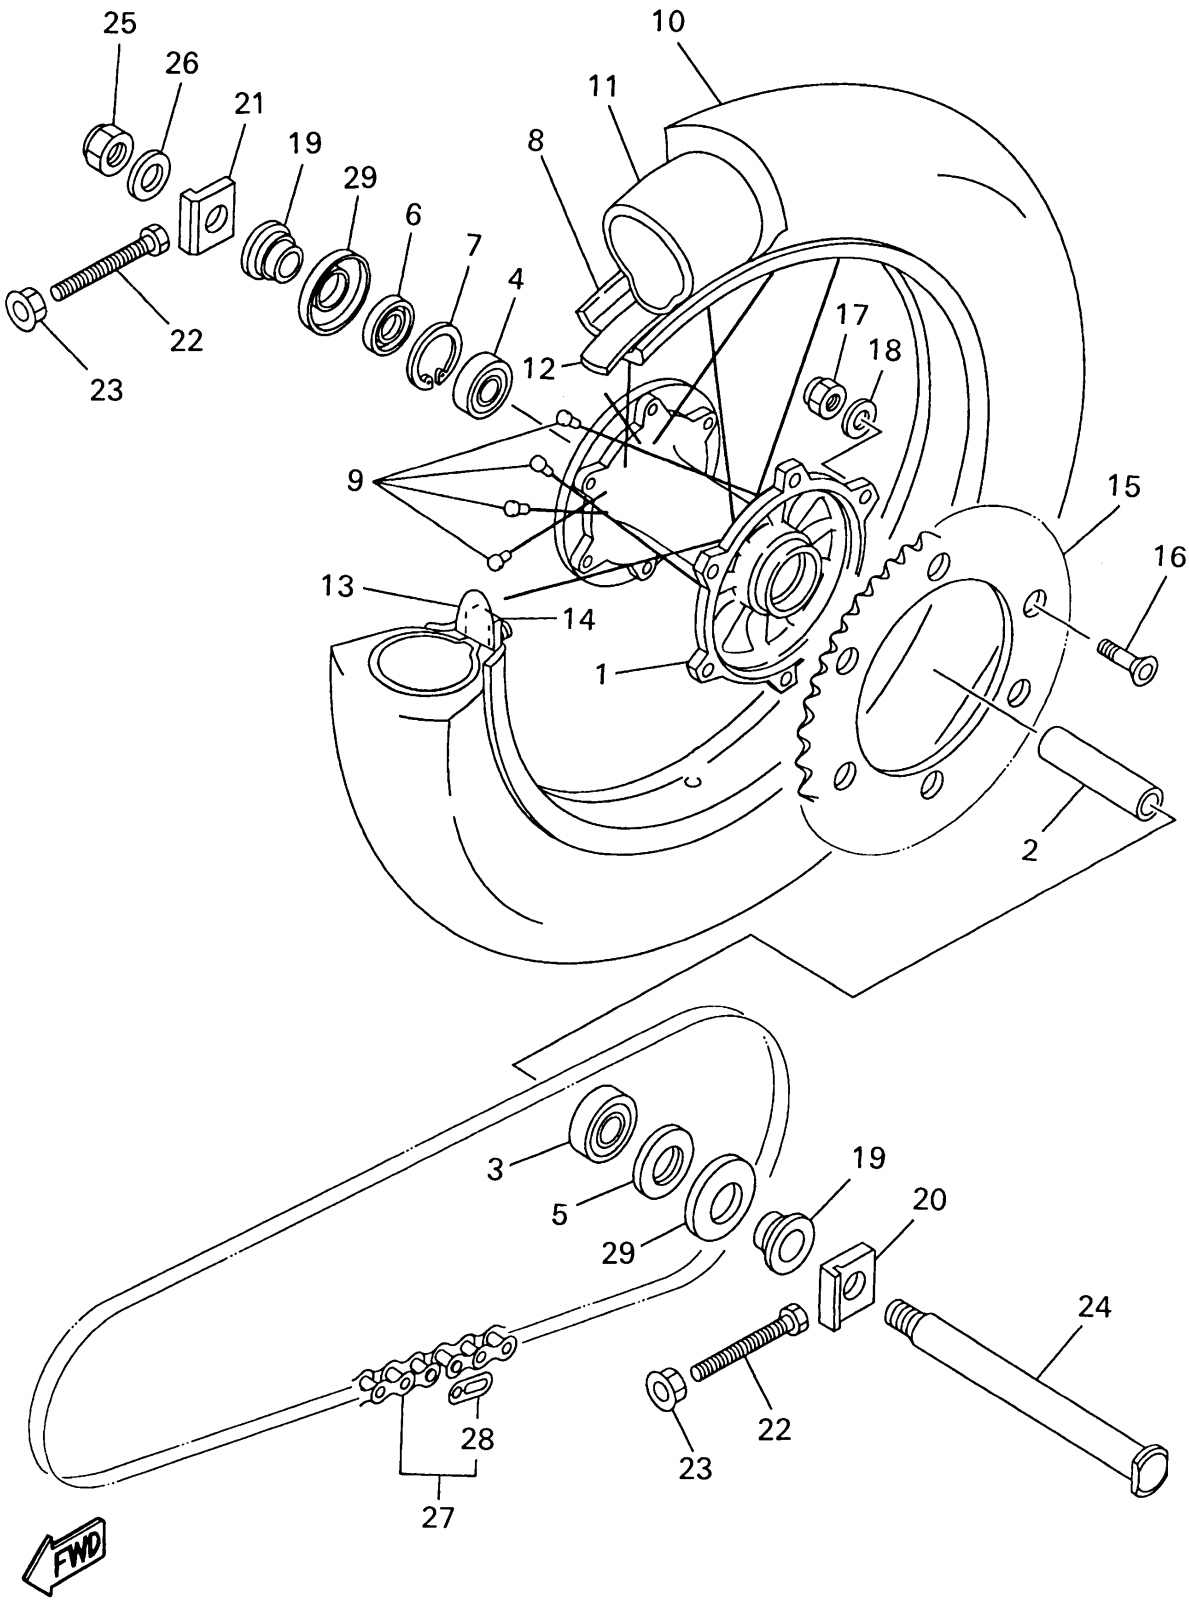

Ref. No.	Part Number	Description	Qty	Remarks
28	94681-76001-00	. JOINT, CHAIN	1	
29	5ET-25367-00-00	COVER, HUB DUST	2	


5GS1100-9300

 REAR BRAKE CALIPERä

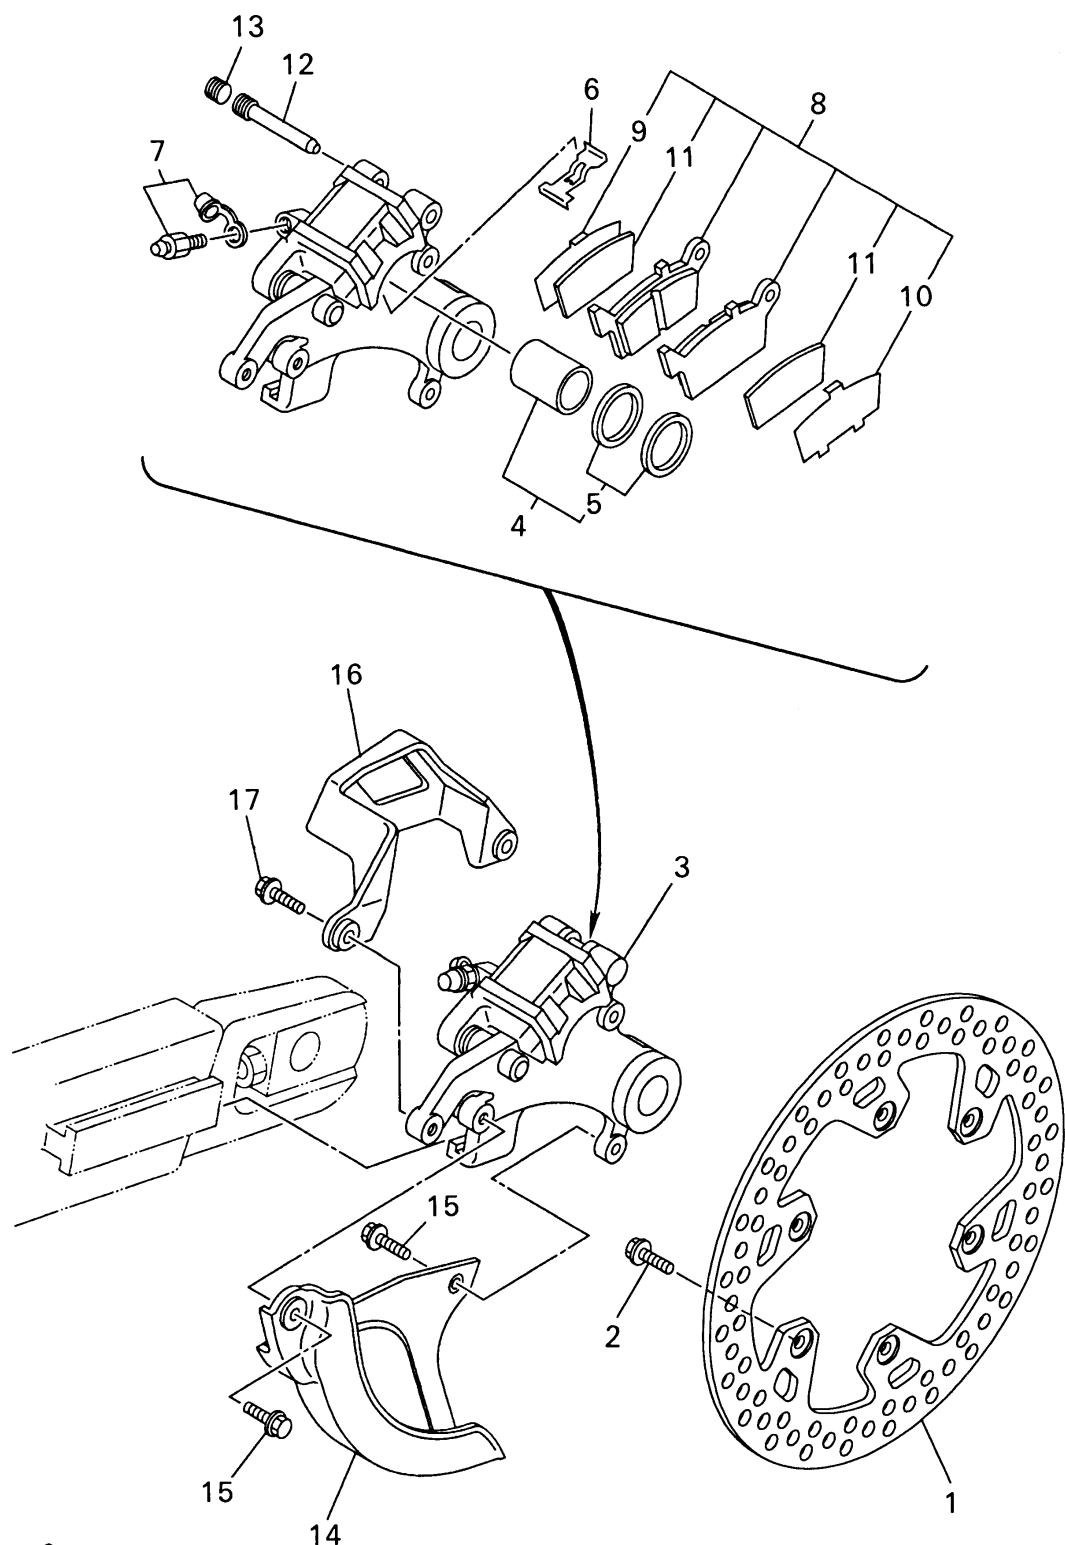

Ref. No.	Part Number	Description	Qty	Remarks
1	5DH-2582W-00-00	DISC, REAR BRAKE 2	1	
2	90109-065G4-00	BOLT	6	
3	5GR-2580W-00-00	CALIPER ASSEMBLY, REAR 2	1	
4	5ET-W0057-50-00	. PISTON ASSEMBLY, CALIPER	1	
5	5ET-W0047-50-00	. . CALIPER SEAL KIT	1	
6	5DH-25919-50-00	. SUPPORT, PAD	1	
7	1UY-W0048-50-00	. BLEED SCREW KIT	1	
8	5GR-W0046-00-00	. BRAKE PAD KIT 2	1	
9	5DH-25828-50-00	. . SHIM, CALIPER	1	
10	5DH-25827-50-00	. . SHIM, CALIPER	1	
11	5GR-22898-50-00	. . INSULATOR, HEAT	2	
12	8CR-25924-00-00	. PIN, PAD	1	
13	5DH-25916-00-00	. PLUG	1	
14	5DH-25718-00-00	PROTECTOR, DISK BRAKE ...	1	
15	95027-06012-00	BOLT, FLANGE	2	
16	4GY-27491-00-00	PROTECTOR	1	
17	95027-06016-00	BOLT, FLANGE	2	

 STEERING HANDLE - CABLE

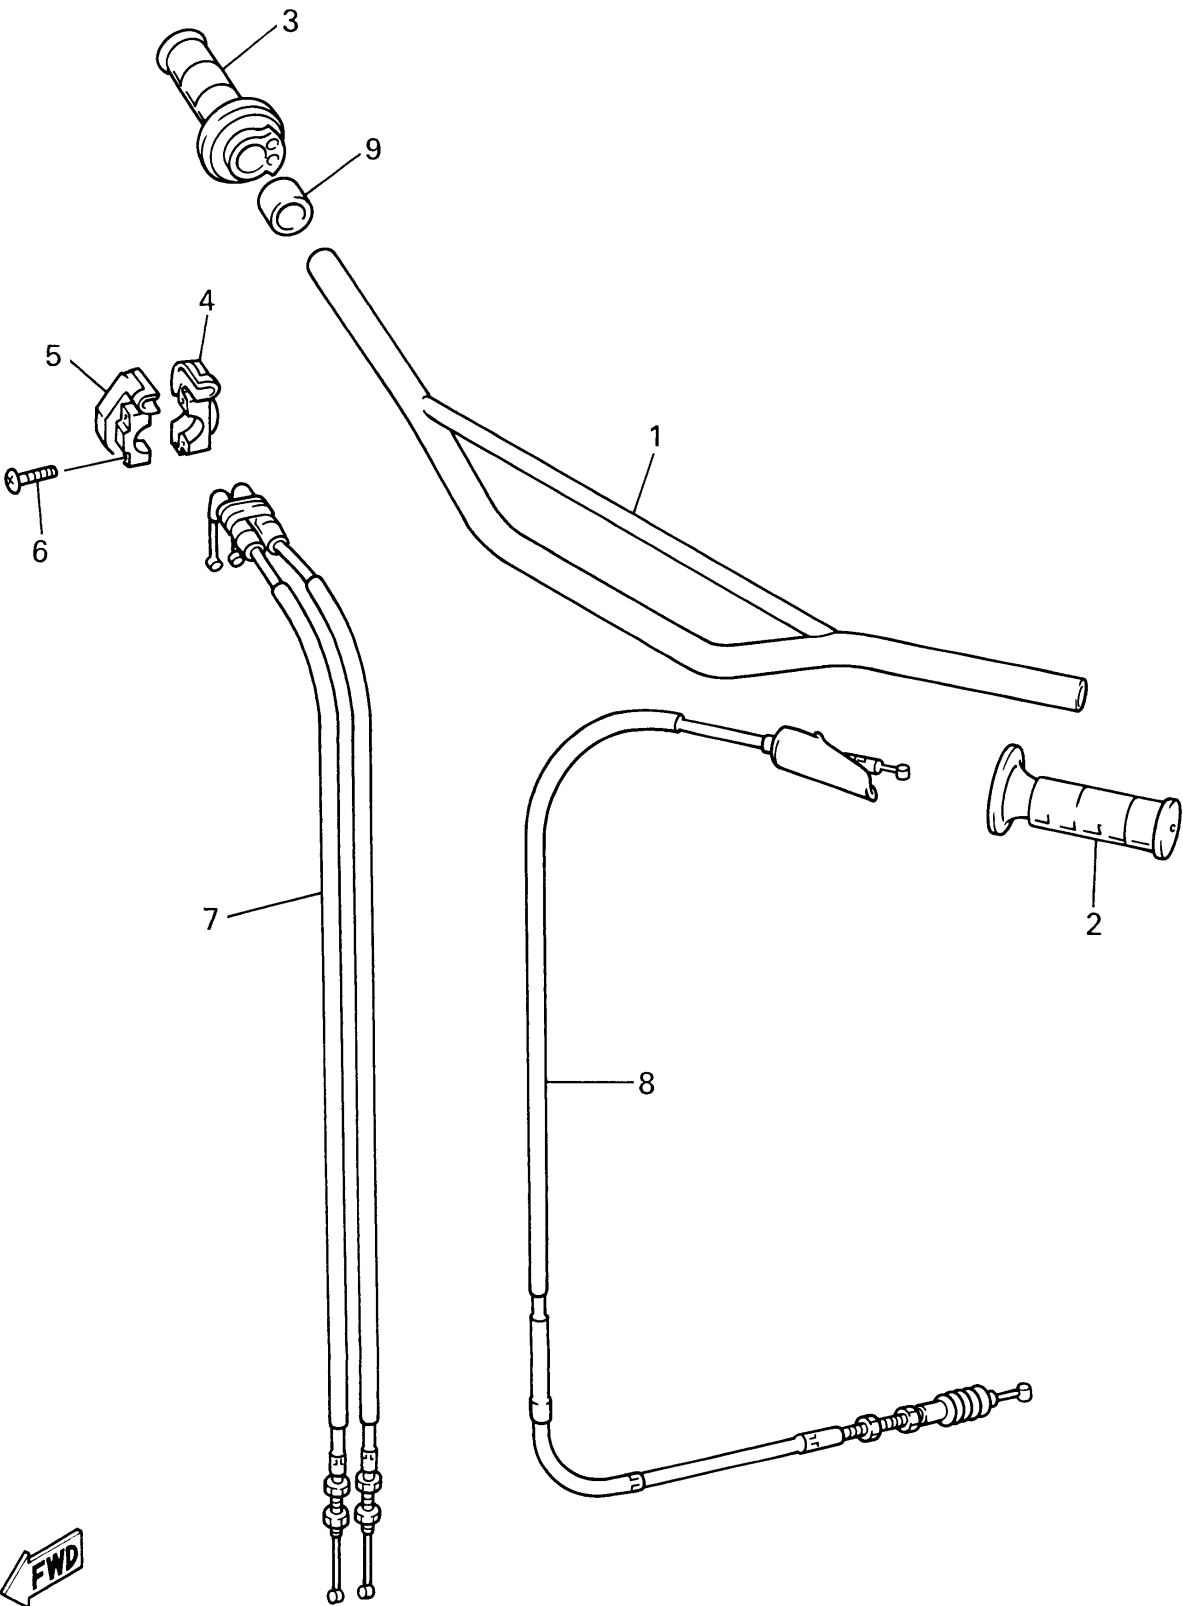


Ref. No.	Part Number	Description	Qty	Remarks
1	4XM-26111-00-00	HANDLEBAR	1	
2	4GY-26241-00-00	GRIP (LEFT)	1	
3	5BE-26240-00-00	GRIP ASSEMBLY	1	
4	5BE-26281-00-00	CAP, GRIP UPPER	1	
5	5BE-26282-00-00	CAP, GRIP LOWER	1	
6	98507-05020-00	SCREW, PAN HEAD	2	
7	5BE-26302-01-00	THROTTLE CABLE ASSEMBLY	1	
8	5BE-26335-01-00	CABLE, CLUTCH	1	
9	90387-225N2-00	COLLAR	1	



5BE100-8320

 FRONT MASTER CYLINDER

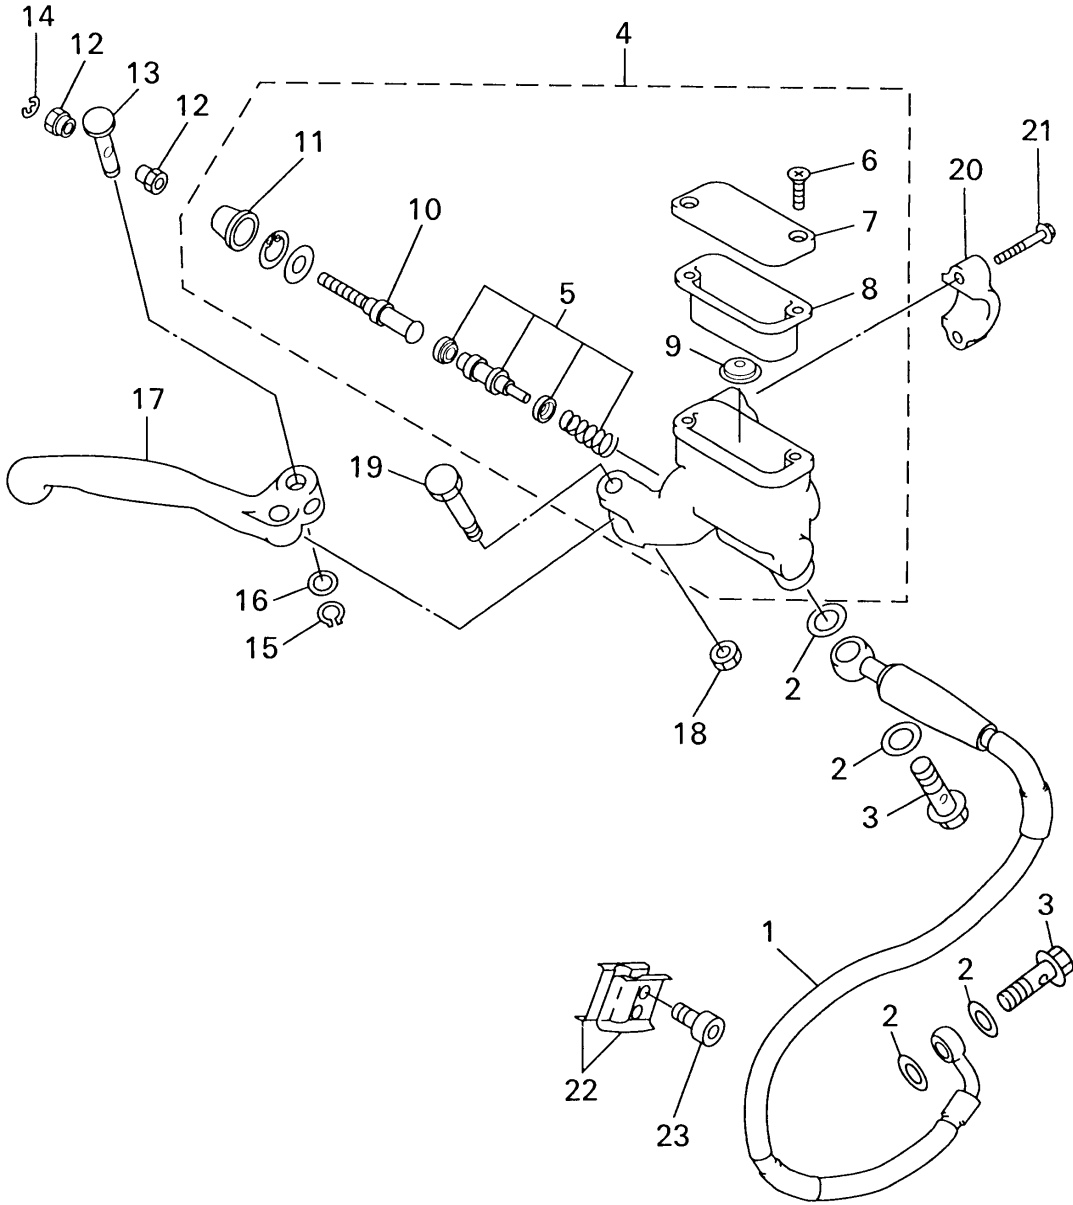


Ref. No.	Part Number	Description	Qty	Remarks
1	5GS-25872-00-00	HOSE, BRAKE 1	1	
2	90201-10118-00	WASHER, PLATE	4	
3	90401-10172-00	BOLT, UNION	2	
4	4SS-W2587-00-00	MASTER CYLINDER SUB ASSEMBLY	1	
5	4SS-W0041-00-00	. CYLINDER KIT, MASTER	1	
6	98706-04012-00	. SCREW, FLAT HEAD	2	
7	4SS-25852-00-00	. CAP, RESERVOIR	1	
8	4SS-25854-00-00	. DIAPHRAGM, RESERVOIR ..	1	
9	4SS-25889-00-00	. SEPARATOR ASSEMBLY ...	1	
10	4SS-25880-00-00	. PUSH ROD COMP.	1	
11	4SS-25868-00-00	. BOOT, MASTER CYLINDER ..	1	
12	4SS-2538E-00-00	NUT, ADJUSTING	2	
13	4SS-83913-00-00	COLLAR, LEVER 1	1	
14	3YX-25866-10-00	CIRCLIP	1	
15	4SS-25866-00-00	CIRCLIP	1	
16	4SS-2583G-00-00	WASHER	1	
17	4SS-83922-01-00	LEVER 2	1	
18	95606-06100-00	NUT, U	1	
19	4SS-2589F-00-00	BOLT, LEVER	1	
20	3YK-25867-00-00	BRACKET, MASTER CYLINDER	1	
21	4SS-25833-00-00	BOLT, FITTING	2	
22	90465-16258-00	CLAMP	2	
23	91317-06014-00	BOLT	2	



5BE100-8330



 
5BF100-8340

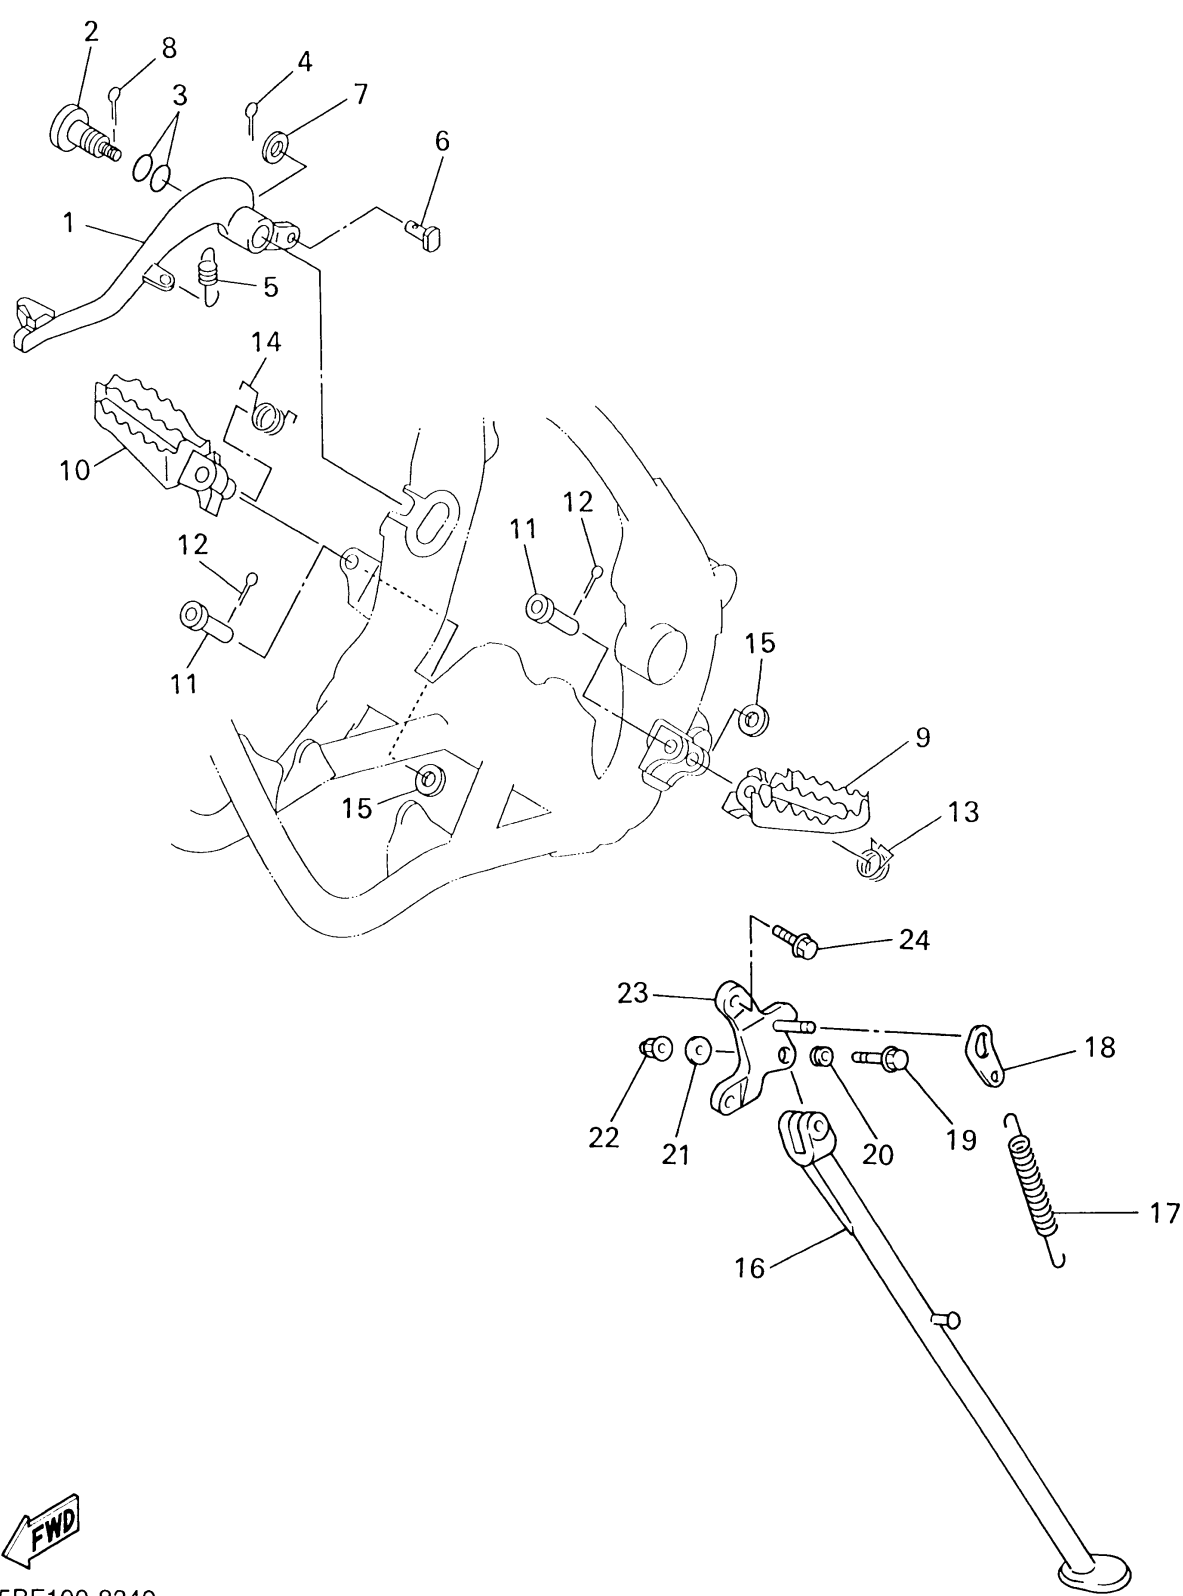

STAND - FOOTREST


Ref. No.	Part Number	Description	Qty	Remarks
1	4XM-27200-00-00	PEDAL, BRAKE	1	
2	4SS-27217-00-00	BOLT	1	
3	93210-11073-00	O-RING	2	
4	91401-20012-00	PIN, COTTER	1	
5	90506-16500-00	SPRING, TENSION	1	
6	90240-08120-00	PIN, CLEVIS	1	
7	90201-08089-00	WASHER, PLATE	1	
8	90468-16191-00	CLIP	1	
9	5ET-27411-00-00	FOOTREST 1	1	
10	5ET-27421-00-00	FOOTREST 2	1	
11	90240-10142-00	PIN, CLEVIS	2	
12	91401-25015-00	PIN, COTTER	2	
13	90508-282B8-00	SPRING, TORSION	1	
14	90508-282B9-00	SPRING, TORSION	1	
15	90201-10119-00	WASHER, PLATE	2	
16	5BF-27311-00-00	STAND, SIDE	1	
17	90506-35473-00	SPRING, TENSION	1	
18	5BF-27315-00-00	LINK, SIDE STAND	1	
19	90105-10728-00	BOLT, WASHER BASED	1	
20	90387-1003G-00	COLLAR	1	
21	92990-10200-00	WASHER	1	
22	95617-10100-00	NUT, U	1	
23	5BF-21458-00-00	BRACKET, SIDE STAND	1	
24	95027-10020-00	BOLT, FLANGE	2	

 REAR MASTER CYLINDER

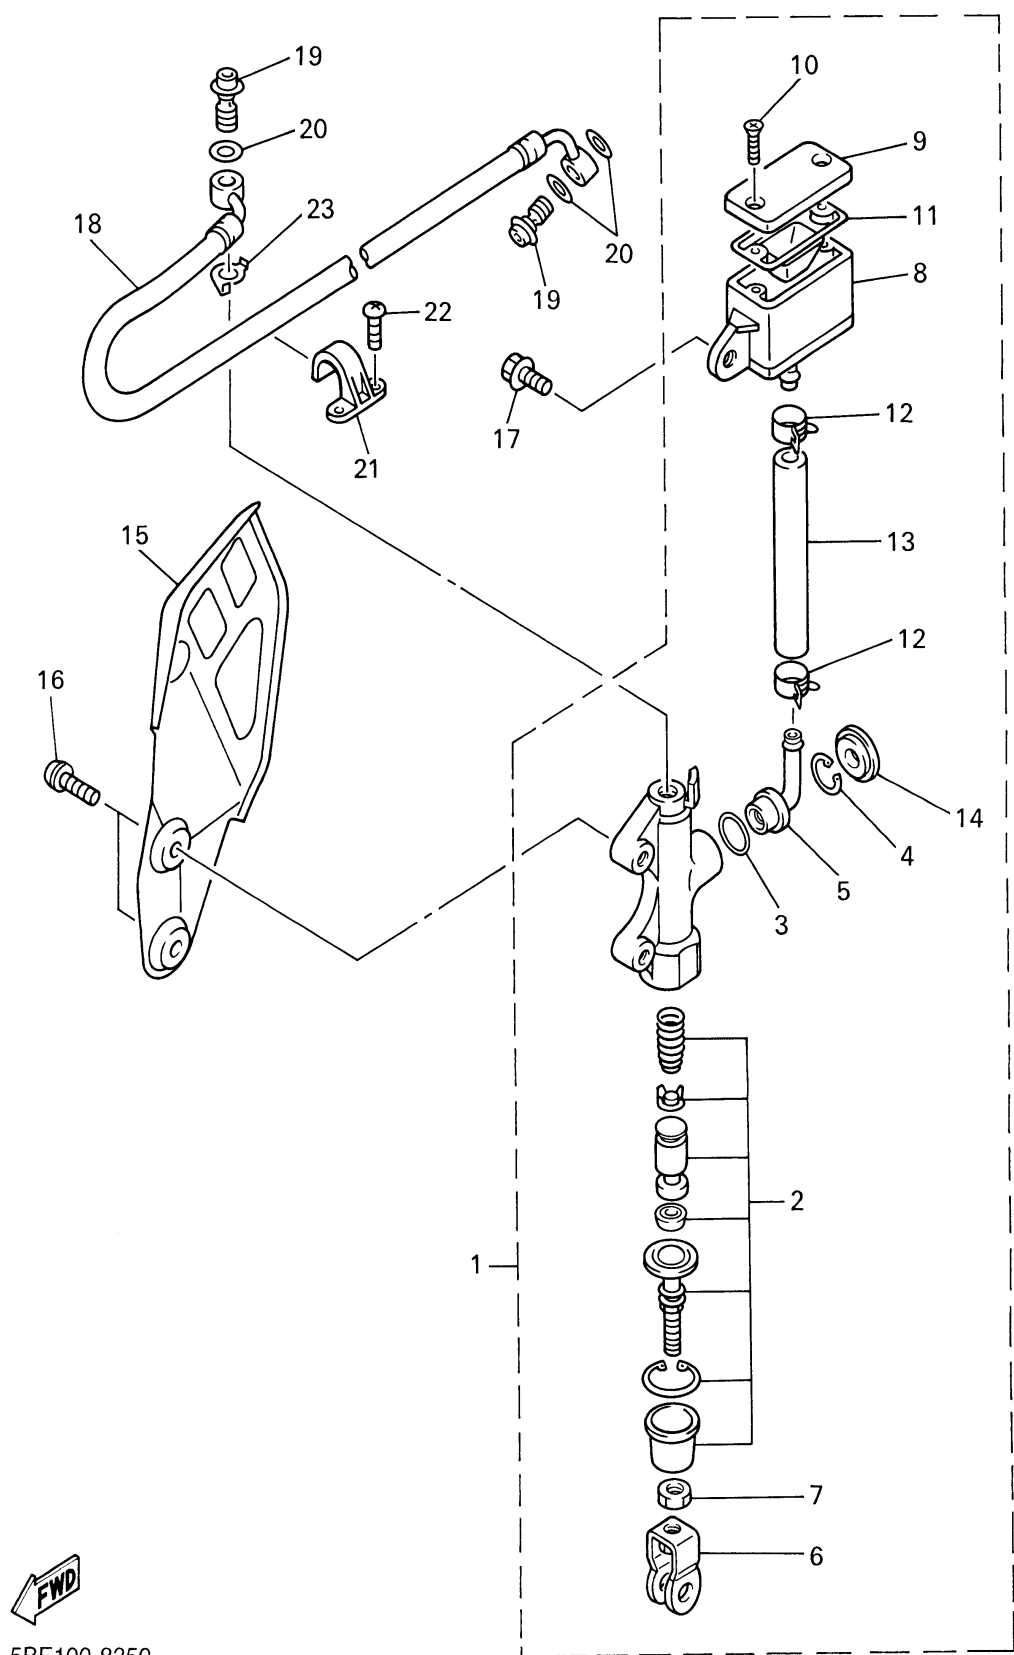

Ref. No.	Part Number	Description	Qty	Remarks
1	5BE-2583V-00-00	RR. MASTER CYLINDER ASSEMBLY.	1	
2	5BE-W0042-00-00	. CYLINDER KIT, MASTER	1	
3	93210-15620-00	. O-RING	1	
4	2VN-25866-00-00	. CIRCLIP	1	
5	4ML-2582A-50-00	. JOINT	1	
6	3SP-27222-00-00	. JOINT	1	
7	95301-08700-00	. NUT	2	
8	5BE-25894-00-00	. TANK, RESERVOIR	1	
9	5BE-25852-00-00	. CAP, RESERVOIR	1	
10	98706-04040-00	. SCREW, FLAT HEAD	2	
11	56A-25854-00-00	. DIAPHRAGM, RESERVOIR ..	1	
12	90467-12085-00	. CLIP	2	
13	5BE-25895-00-00	. HOSE, RESERVOIR	1	
14	3FV-2589A-00-00	. COVER, DUST	1	
15	5BE-2117M-00-00	COVER 2	1	
16	92014-06016-00	BOLT, BUTTON HEAD	2	
17	95027-06012-00	BOLT, FLANGE	1	
18	5DH-25873-00-00	HOSE, BRAKE 2	1	
19	90401-10172-00	BOLT, UNION	2	
20	90201-10118-00	WASHER, PLATE	3	
21	2VM-25876-00-00	HOLDER, BRAKE HOSE 2	2	
22	97780-50510-00	SCREW, TAPPING	4	
23	5BE-25844-00-00	WASHER, LOCK	1	

 
5BE100-8350

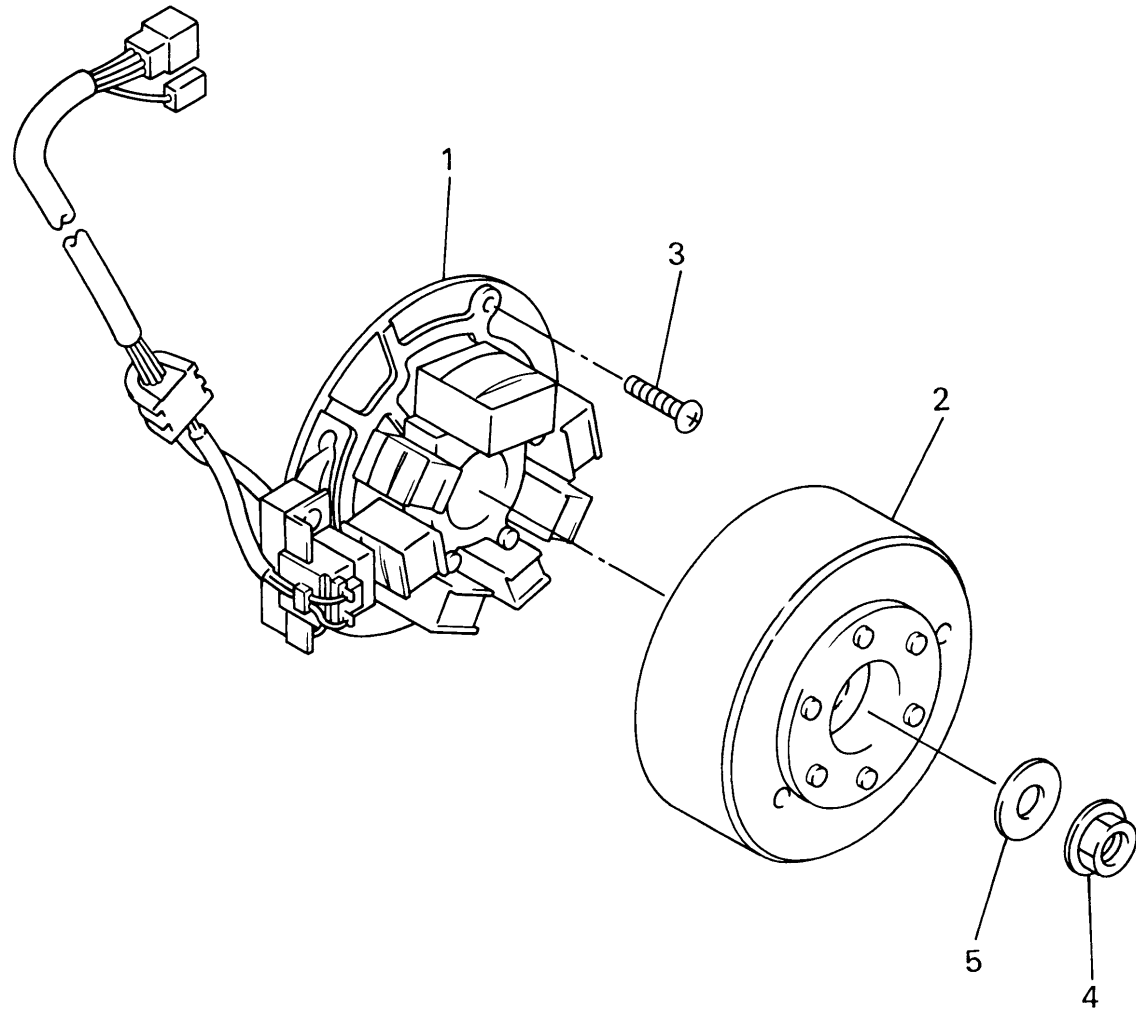

GENERATOR


Ref. No.	Part Number	Description	Qty	Remarks
1	5BF-85560-00-00	BASE ASSEMBLY	1	
2	5BF-85550-00-00	ROTOR ASSEMBLY	1	
3	90149-06324-00	SCREW	3	
4	90179-10247-00	NUT	1	
5	90201-101J1-00	WASHER, PLATE	1	



5BF100-8360

METER


Ref. No.	Part Number	Description	Qty	Remarks
1	2HR-83505-G0-00	TRIP METER COMP.	1	FOR GBR MILE
2	4V5-83513-00-00	DAMPER	1	
3	2HR-83519-01-00	BRACKET, METER	1	
4	1M1-83526-00-00	DAMPER 2	2	
5	90201-05033-00	WASHER, PLATE	2	
6	437-83525-00-00	CLIP	2	
7	11H-83578-00-00	KNOB, TRIP METER	1	
8	90157-02031-00	SCREW, PAN HEAD	1	
9	2HR-83592-00-00	DAMPER	1	
10	95027-06010-00	BOLT, FLANGE	2	
11	5BF-83550-00-00	SPEEDOMETER CABLE ASSEMBLY	1	
12	5BF-2317M-00-00	STAY 3	1	
13	92017-05008-00	BOLT, BUTTON HEAD	2	
14	5BF-84319-00-00	STAY, HEADLIGHT 2	1	
15	95027-06010-00	BOLT, FLANGE	2	

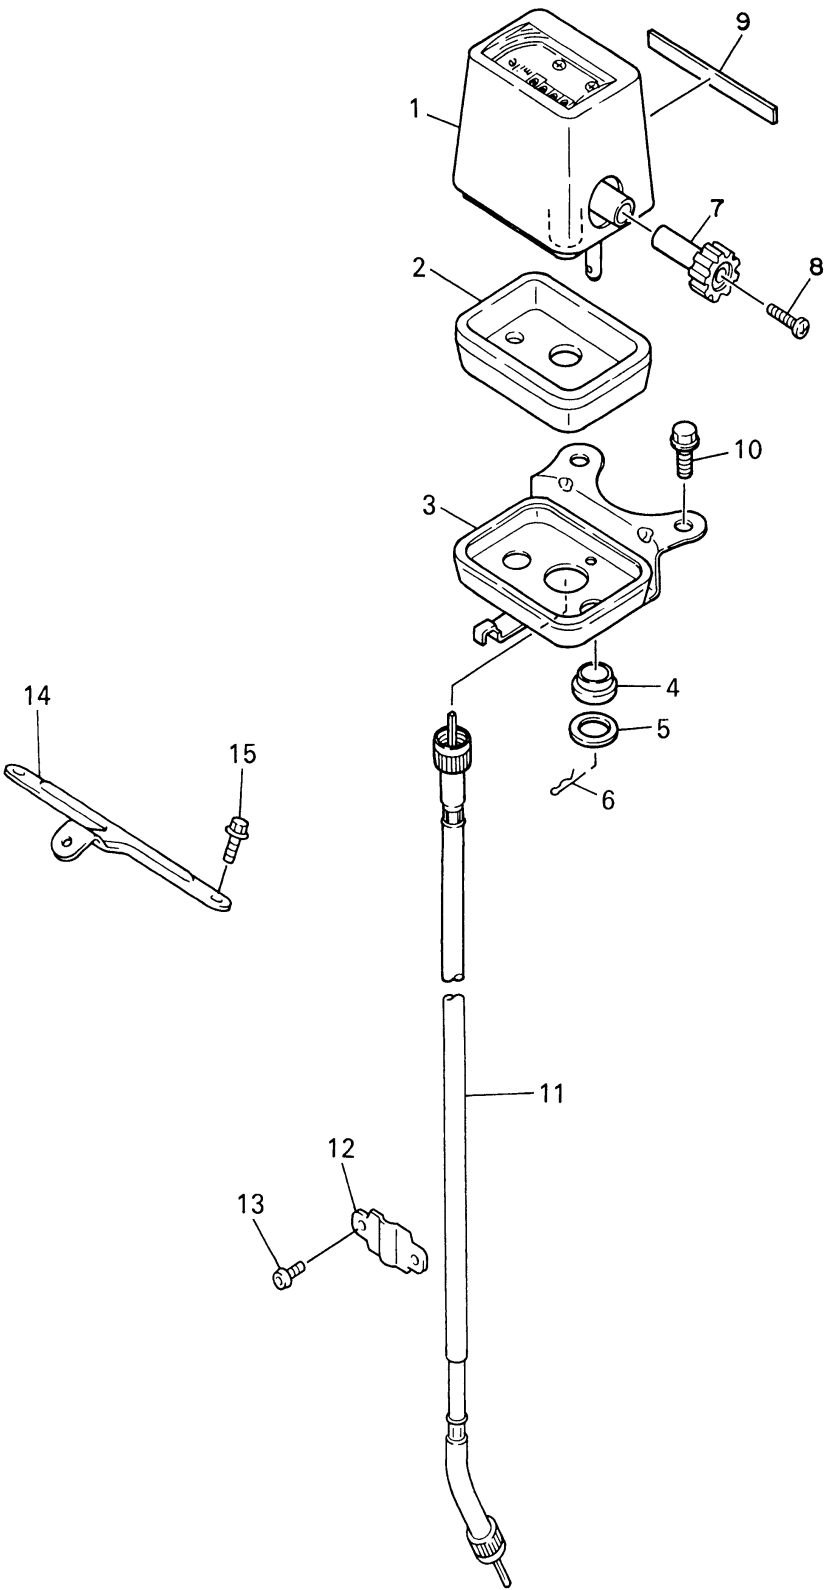 

5BF100-8370


HEADLIGHTä

Ref. No.	Part Number	Description	Qty	Remarks
1	5BF-84310-00-00	HEADLIGHT UNIT ASSEMBLY .	1	
2	8G9-84314-00-00	. BULB (12V-60/55W)	1	(H4)HALOGEN
3	5BF-84397-00-00	. COVER, SOCKET	1	
4	5BF-84330-00-00	BODY ASSEMBLY	1	
5	55U-84337-00-00	BOLT, SPECIAL	2	
6	5BF-8433E-00-00	SCREW, ADJUSTING	1	
7	5BF-84335-00-00	SPRING	1	
8	5BF-84334-00-00	NUT, ADJUSTING	1	
9	90159-06189-00	SCREW, WITH WASHER	3	

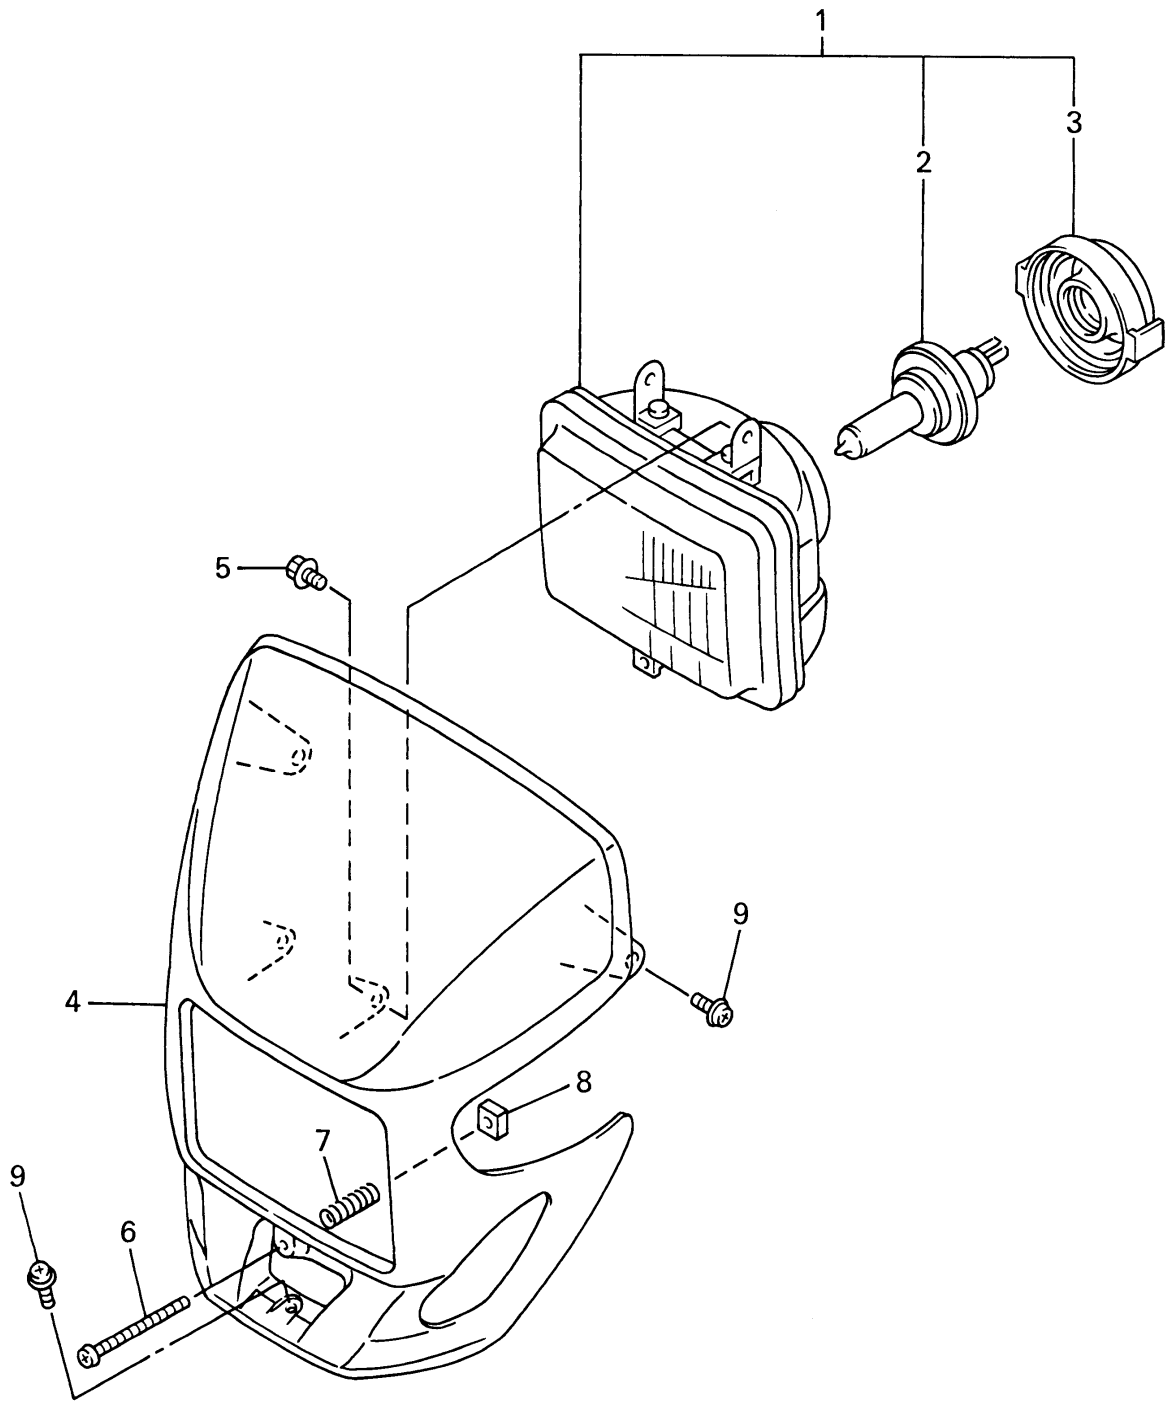 

5GS1100-9380

 
TAILLIGHT

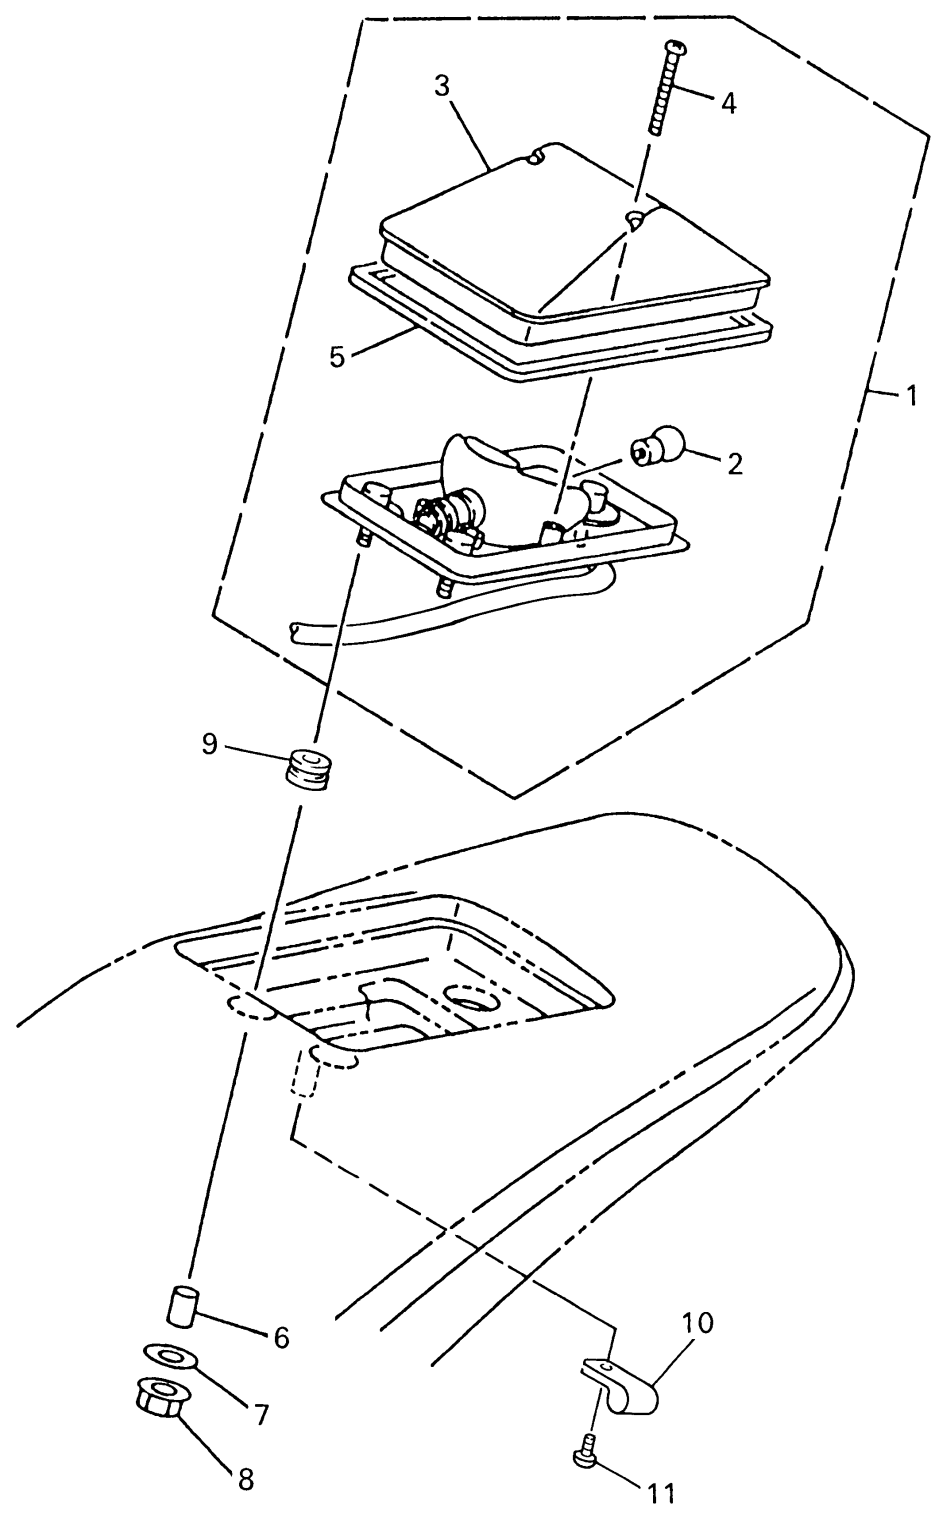

Ref. No.	Part Number	Description	Qty	Remarks
1	5BF-84710-00-00	TAILLIGHT UNIT ASSEMBLY ..	1	
2	36Y-84714-40-00	. BULB, TAILLIGHT (12V-21/5W)	1	
3	4GY-84733-00-00	. LENS, TAILLIGHT	1	
4	97706-40530-00	. SCREW, TAPPING	2	
5	4GY-84723-00-00	. GASKET, TAIL LENS	1	
6	90387-065L5-00	COLLAR	3	
7	90201-06057-00	WASHER, PLATE	3	
8	95707-06500-00	NUT, FLANGE	3	
9	90480-14102-00	GROMMET	3	
10	90461-11099-00	CLAMP	2	
11	97780-40010-00	SCREW, TAPPING	2	



 5BF100-8390

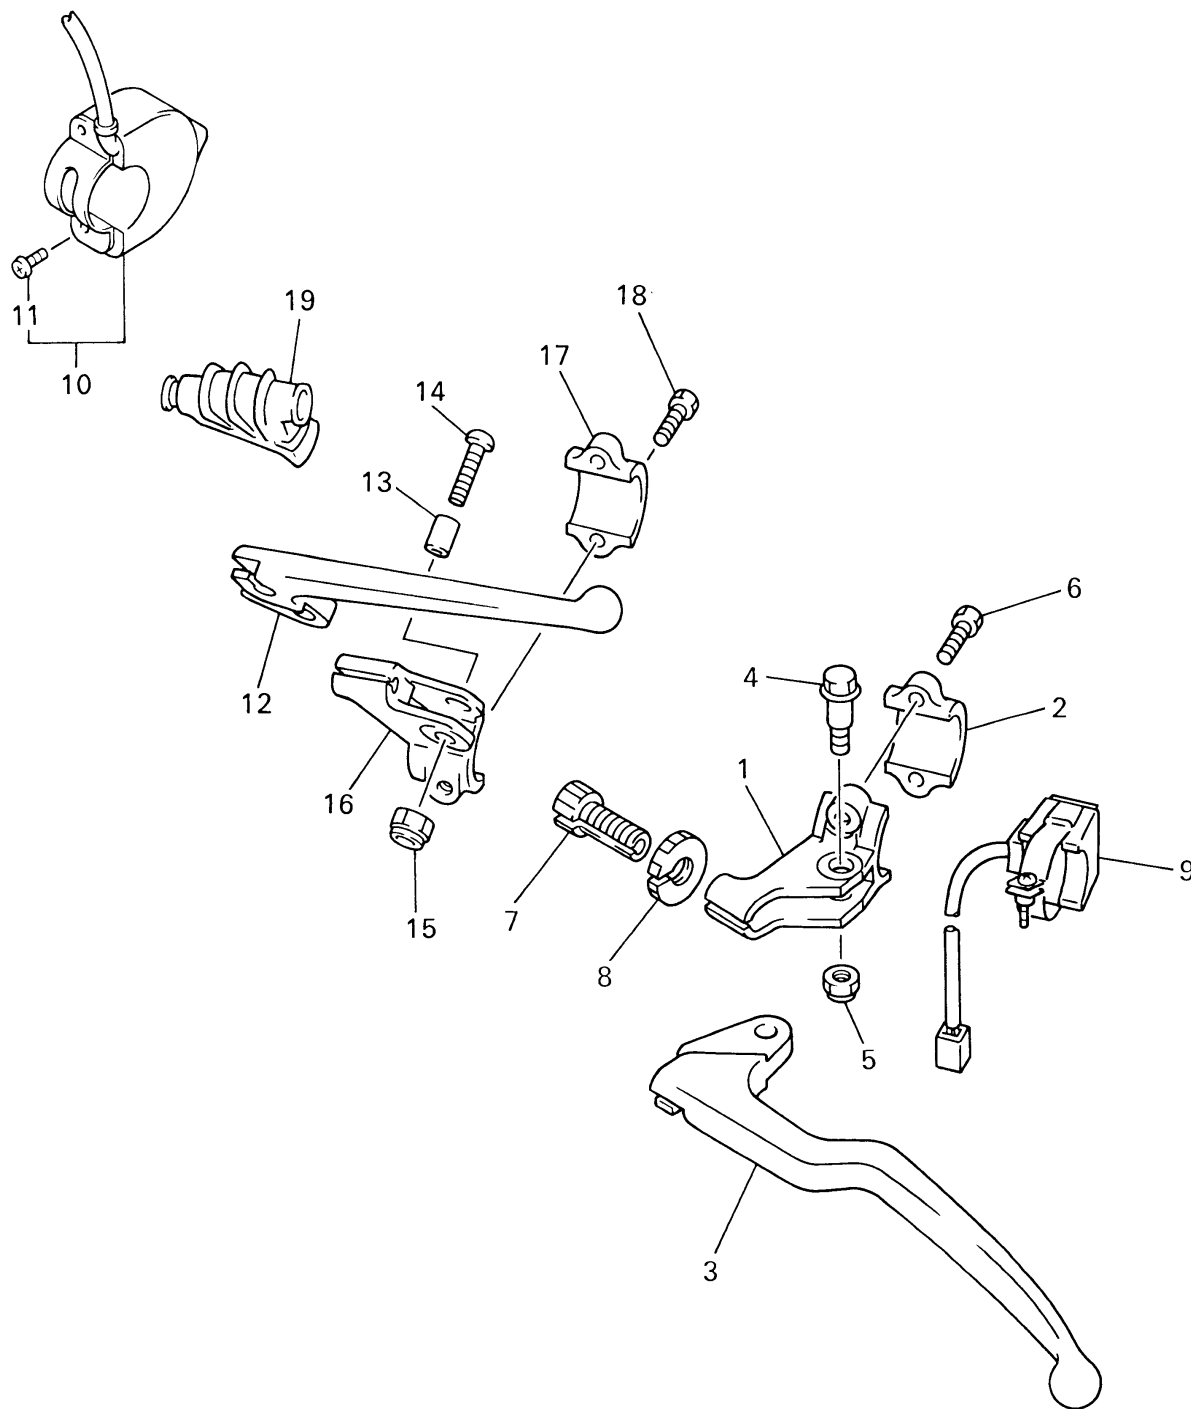


HANDLE SWITCH - LEVER

Ref. No.	Part Number	Description	Qty	Remarks
1	38V-82911-00-00	HOLDER, LEVER 1	1	
2	38V-82913-00-00	HOLDER, LEVER LOWER 1 ...	1	
3	4GY-83912-00-00	LEVER 1	1	
4	90109-06799-00	BOLT	1	
5	95607-06100-00	NUT, U	1	
6	97007-05016-00	BOLT	2	
7	90123-08090-00	BOLT	1	
8	90179-08401-00	NUT	1	
9	23X-83976-00-00	SWITCH, HANDLE 1	1	
10	5BF-83976-00-00	SWITCH, HANDLE 1	1	
11	98507-04014-00	. SCREW, PAN HEAD	2	
12	583-83981-00-00	LEVER, DECOMPRESSION ...	1	
13	5BE-83913-00-00	COLLAR, LEVER 1	1	
14	98907-05020-00	SCREW, BIND	1	
15	95607-05100-00	NUT, U	1	
16	5BE-82912-00-00	HOLDER, LEVER UPPER 1 ...	1	
17	38V-82913-00-00	HOLDER, LEVER LOWER 1 ...	1	
18	97007-05016-00	BOLT	2	
19	583-26352-00-00	COVER, DECOMPRESSION CABLE	1	



 5BF100-8400

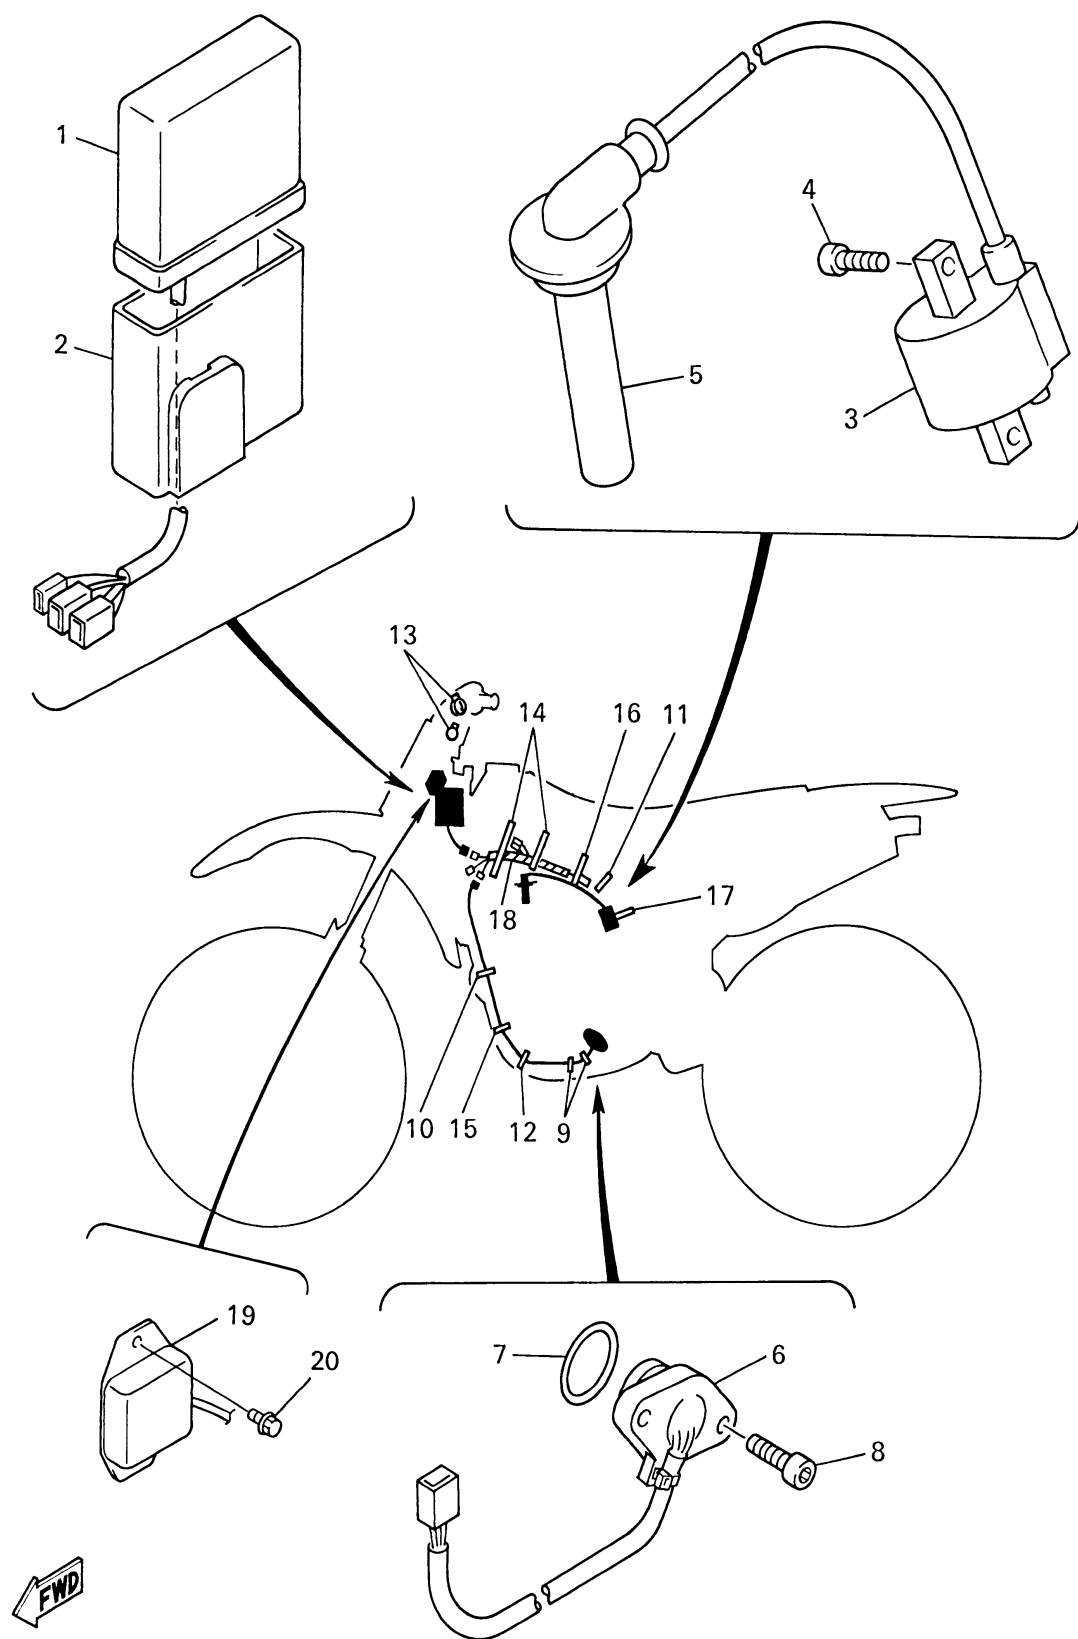


ELECTRICAL 1

Ref. No.	Part Number	Description	Qty	Remarks
1	5BF-85540-00-00	C.D.I. UNIT ASSEMBLY	1	
2	5BE-85546-00-00	BAND	1	
3	5BE-82310-00-00	IGNITION COIL ASSEMBLY ...	1	
4	91317-06016-00	BOLT	2	
5	5BE-82370-00-00	PLUG CAP ASSEMBLY	1	
6	5BE-82540-01-00	NEUTRAL SWITCH ASSEMBLY	1	
7	93210-21276-00	O-RING	1	
8	90154-05073-00	SCREW, BINDING	2	
9	90464-16061-00	CLAMP	2	
10	90464-13073-00	CLAMP	1	
11	90464-15195-00	CLAMP	1	
12	90460-15126-00	CLAMP, HOSE	1	
13	90464-13077-00	CLAMP	2	
14	90464-15152-00	CLAMP	2	
15	90464-13073-00	CLAMP	1	
16	90465-13275-00	CLAMP	1	
17	90464-15195-00	CLAMP	1	
18	5BF-82509-00-00	WIRE, SUB LEAD	1	
19	82M-81910-A0-00	VOLTAGE REGULATOR ASSEMBLY	1	
20	95827-06008-00	BOLT, FLANGE	2	



5GS1100-9410

 ALTERNATE (CHASSIS)

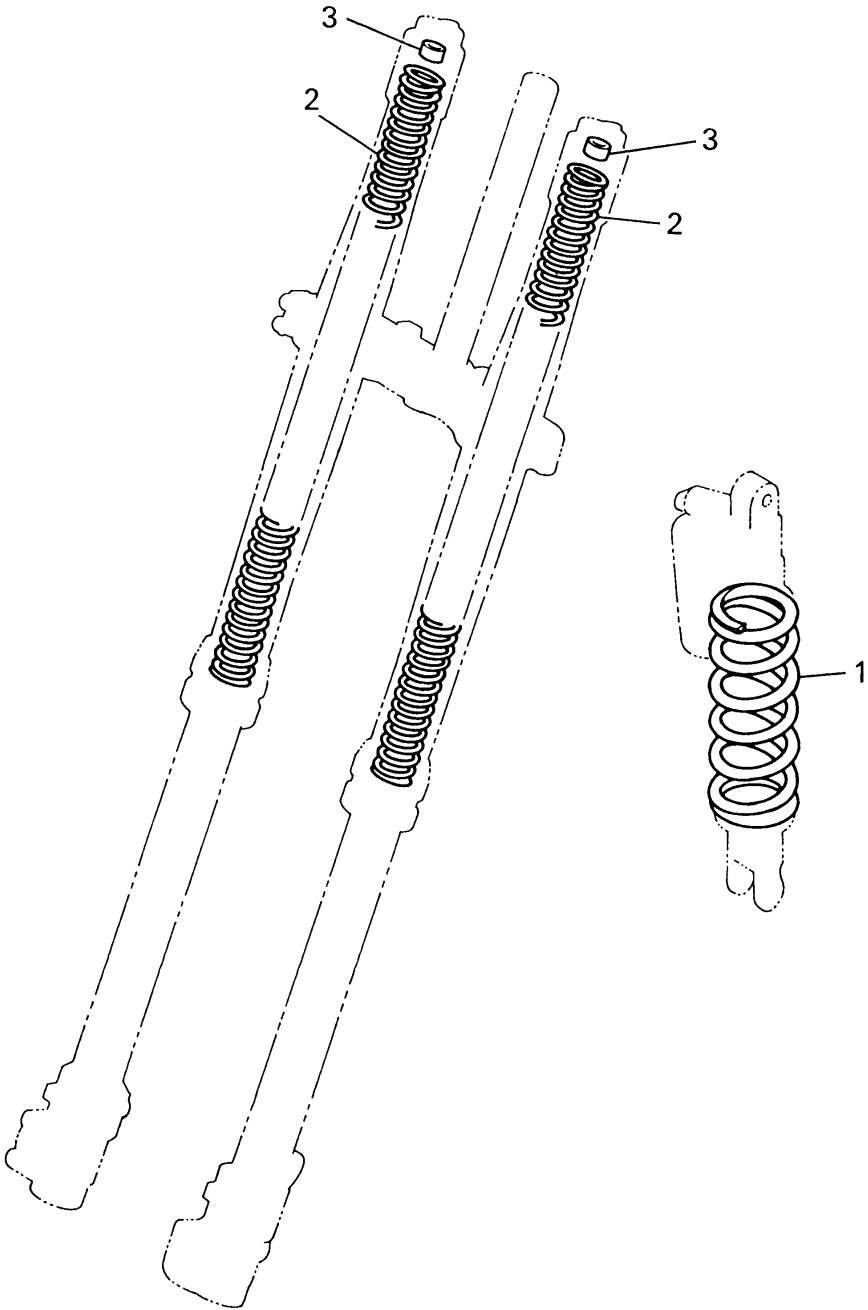

Ref. No.	Part Number	Description	Qty	Remarks	
1	5DH-22212-10-00	SPRING (K=4.6)	1	AP	
	5DH-22212-20-00	SPRING (K=4.8)	1	AP	
	5DH-22212-30-00	SPRING (K=5.0)	1	AP	
	5DH-22212-40-00	SPRING (K=5.2)	1	AP	
	5DH-22212-50-00	SPRING (K=5.4)	1	AP	
	5DH-22212-60-00	SPRING (K=5.6)	1	AP	
	5DH-22212-70-00	SPRING (K=4.4)	1	AP	
	5ET-22212-00-00	SPRING (K=Approx.4.8)	1	AP	
	5ET-22212-10-00	SPRING (K=Approx.5.0)	1	AP	
	5ET-22212-20-00	SPRING (K=Approx.4.6)	1	AP	
	5ET-22212-30-00	SPRING (K=Approx.5.2)	1	AP	
	5ET-22212-40-00	SPRING (K=Approx.5.4)	1	AP	
	5ET-22212-50-00	SPRING (K=Approx.5.6)	1	AP	
2	4SS-23141-10-00	SPRING, FRONT FORK (K=0.38)	2	AP	
	4SS-23141-20-00	SPRING, FRONT FORK (K=0.39)	2	AP	
	4SS-23141-30-00	SPRING, FRONT FORK (K=0.40)	2	AP	
	4SS-23141-40-00	SPRING, FRONT FORK (K=0.41)	2	AP	
	4SS-23141-50-00	SPRING, FRONT FORK (K=0.42)	2	AP	
	4SS-23141-60-00	SPRING, FRONT FORK (K=0.43)	2	AP	
	4SS-23141-70-00	SPRING, FRONT FORK (K=0.44)	2	AP	
	5BE-23141-00-00	SPRING, FRONT FORK (K=0.46)	2	AP	
	5BE-23141-L0-00	SPRING, FRONT FORK (K=0.45)	2	AP	
	5ET-23141-00-00	SPRING (K=Approx.0.41)	2	AP	
	5ET-23141-10-00	SPRING (K=Approx.0.43)	2	AP	
	5ET-23141-20-00	SPRING (K=Approx.0.40)	2	AP	
	5ET-23141-30-00	SPRING (K=Approx.0.42)	2	AP	
	5ET-23141-40-00	SPRING (K=Approx.0.44)	2	AP	
	5GR-23141-00-00	SPRING, FRONT FORK (K=0.47)	2	AP	
	3	4SS-23364-L0-00	COLLAR 2	1	UN



5BE100-8390