
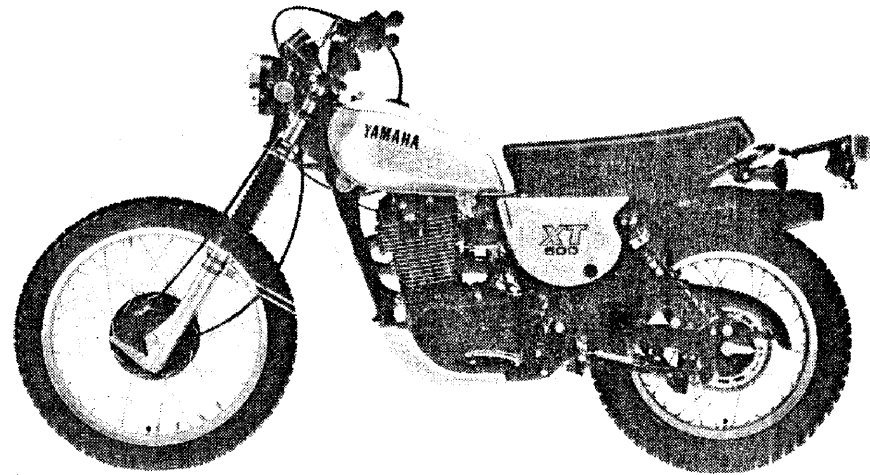


YAMAHA

PARTS CATALOGUE

XT500H (5R1)

115R1-600E1

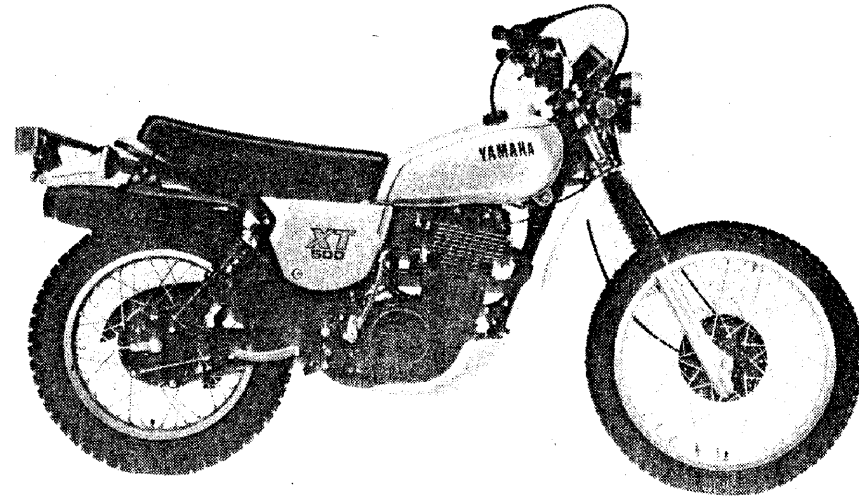

FOREWORD

This Parts Catalogue is related to the parts in use for the Yamaha XT500H (5R1)

When you are ordering replacement parts for the XT500H (5R1), refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after issue of the Parts Catalogue will be announced in the Yamaha Parts News.

It is advisable that according to the Yamaha Parts News you make necessary corrections to the Parts Catalogue on hand to keep it up-to-date.

2. Abbreviations

The following abbreviations are used in this Parts Catalogue.

- U.R. Use size (thickness) and/or number as required.
- U.N. Use as many as you need.
- A.P. Alternate Parts
- L.M. Local Made
- F# Frame No. (Applicable machine No.)

3. The parts marked with (*) in the parts number column of this Catalogue are not supplied with by Yamaha, those have to be found locally.
4. Parts, which are to be supplied in the form of assemblies, are listed with an indentation of one letter's space, and a dot (.) is put against the name of each part.

EXAMPLE CARBURETOR ASS'Y
 . JET, pilot
 . NOZZLE, main

5. Indication of No. of constituent parts for assembly



The numeral appearing to the right of each constituent part under the description indicates the quantity of such parts for each individual assembly unit.

EXAMPLE

Part No.	Description	Q'ty	Remarks
2F5-83310-60	FRONT FLASHER LIGHT ASS'Y	2	
115-83311-60	. BULB (6V-18W)	1	
1M1-83309-60	. REFLECTOR	1	

6. Initial Serial No. and Color Code

(A) Frame Serial No.	5R1-000101 and following
(B) Engine Serial No.	5R1-000101 and following

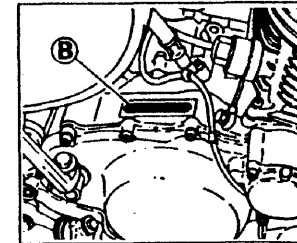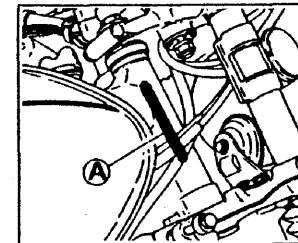

Color Code	Color Name	Abbreviate
20	CRYSTAL SILVER	CSL

7. Applicable colors of graphics are represented in the "Remarks" column by the letter(s) appropriately picked out of the full word(s) showing such colors.

EXAMPLE

Part No.	Description	Q'ty	Remarks
2N4-24110-00-X5	FUEL TANK COMP.	1	MAXIM RED
3J1-24240-10	. GRAPHIC, fuel tank set	1	for MXR

CONTENTS

ENGINE

Fig. 1	CYLINDER HEAD	1
Fig. 2	CYLINDER	3
Fig. 3	CRANKSHAFT · PISTON	4
Fig. 4	VALVE	6
Fig. 5	CAMSHAFT · CHAIN	7
Fig. 6	OIL PUMP · OIL CLEANER	8
Fig. 7	INTAKE	10
Fig. 8	CARBURETOR	12
Fig. 9	EXHAUST	15
Fig. 10	CRANKCASE	17
Fig. 11	CRANKCASE COVER	18
Fig. 12	C.D.I. MAGNETO	19
Fig. 13	BREAKER · GOVERNOR	20
Fig. 14	KICK STARTER	21
Fig. 15	CLUTCH	23
Fig. 16	TRANSMISSION	25
Fig. 17	SHIFT CAM · FORK	27
Fig. 18	SHIFT SHAFT · PEDAL	28

CHASSIS

Fig. 19	FRAME	29
Fig. 20	FRONT FENDER · REAR FENDER	31
Fig. 21	SIDE COVER · TOOL	32
Fig. 22	REAR ARM · SUSPENSION	34
Fig. 23	STEERING	36
Fig. 24	FRONT FORK	37
Fig. 25	FUEL TANK	39
Fig. 26	SEAT	41
Fig. 27	FRONT WHEEL	42
Fig. 28	REAR WHEEL	44


Fig. 29	HANDLEBAR · CABLE	46
Fig. 30	STAND · FOOTREST	47
Fig. 31	FLASHER LIGHT	49
Fig. 32	SPEEDOMETER · TACHOMETER	50
Fig. 33	HEADLIGHT	51
Fig. 34	TAILLIGHT	52
Fig. 35	ELECTRICAL 1	53
Fig. 36	ELECTRICAL 2	55
Fig. 37	HANDLE SWITCH · LEVER	56

REPAIR KIT

Fig. 38	REPAIR KIT	58
---------	------------------	----

INDEX

NUMERICAL INDEX
PARTS NAME INDEX

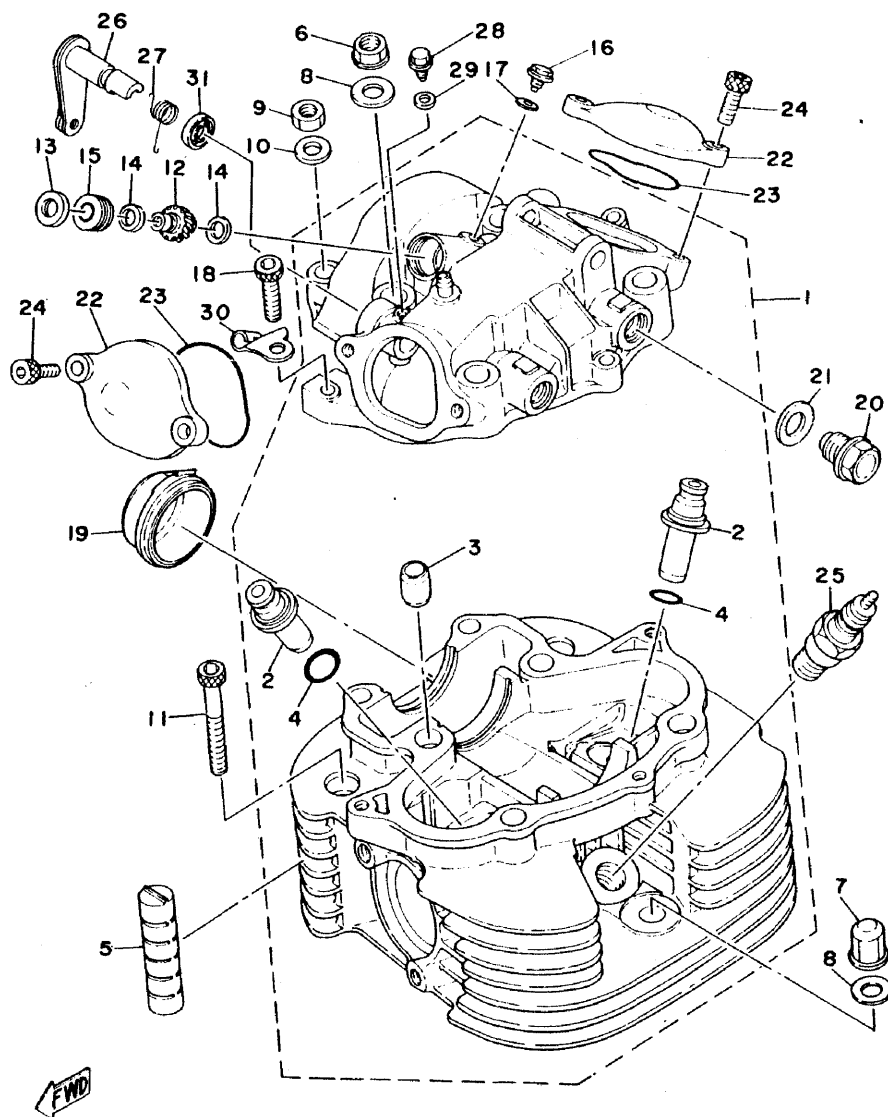


4R9110-1010

FIG. 1 CYLINDER HEAD

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	2Y0-11101-00-R4	CYLINDER HEAD ASSY	1	black
2	583-11133-11	.GUIDE, intake valve (1ST D/S)	2	
3	91830-24016	.PIN, dowel	2	
4	93210-14299	.O-RING	2	
5	583-11127-00	ABSORBER 3	2	
6	90179-10279	NUT	4	
7	90179-10277	NUT	1	
8	90201-10124	WASHER, Plate	5	
9	95303-08600	NUT	2	
10	90201-08649	WASHER, Plate	2	
11	91316-06055	BOLT	2	
12	1E6-17841-00	GEAR, driven (15T)	1	
13	93104-08055	OIL SEAL	1	
14	90201-08587	WASHER, Plate	2	
15	1E6-17843-00	BUSH, driven gear outer	1	
16	90109-06418	BOLT	1	
17	90430-06014	GASKET	1	
18	91316-06025	BOLT	3	
19	1T1-11197-00	PLUG, viewer	1	
20	90340-14038	PLUG, straight screw	2	
21	90430-14043	GASKET	2	
22	583-11186-00-R4	COVER, cylinder head side 2	2	black
23	93210-49296	O-RING	2	
24	91316-06018	BOLT	4	
25	94701-00117	PLUG, sPark (NGK BP-7ES)	1	
26	583-12288-00	CAM, decomp.	1	
27	90508-16303	SPRING, torsion	1	
28	90109-06418	BOLT	1	

FIG. 1 CYLINDER HEAD

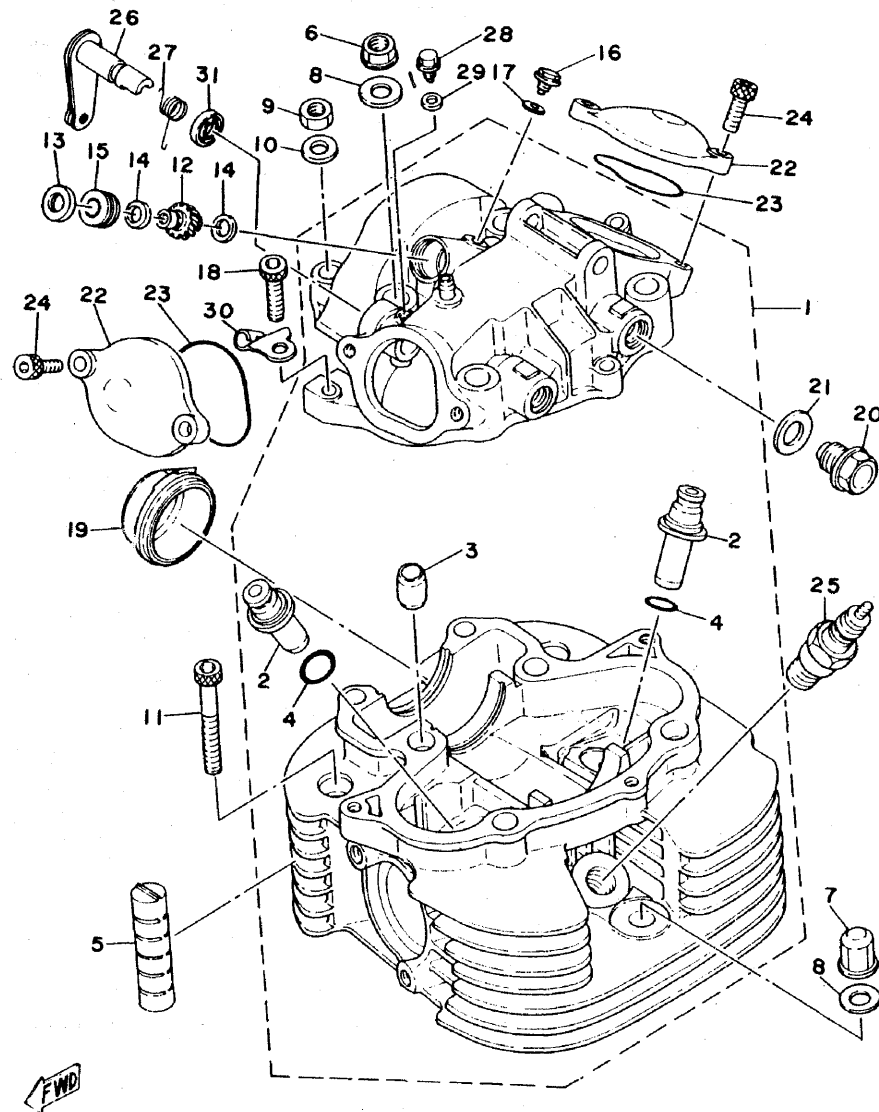

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	90430-06014	GASKET	1	
30	583-12283-00	BRACKET, decomp.	1	
31	93104-12054	OIL SEAL	1	

4R9110-1010

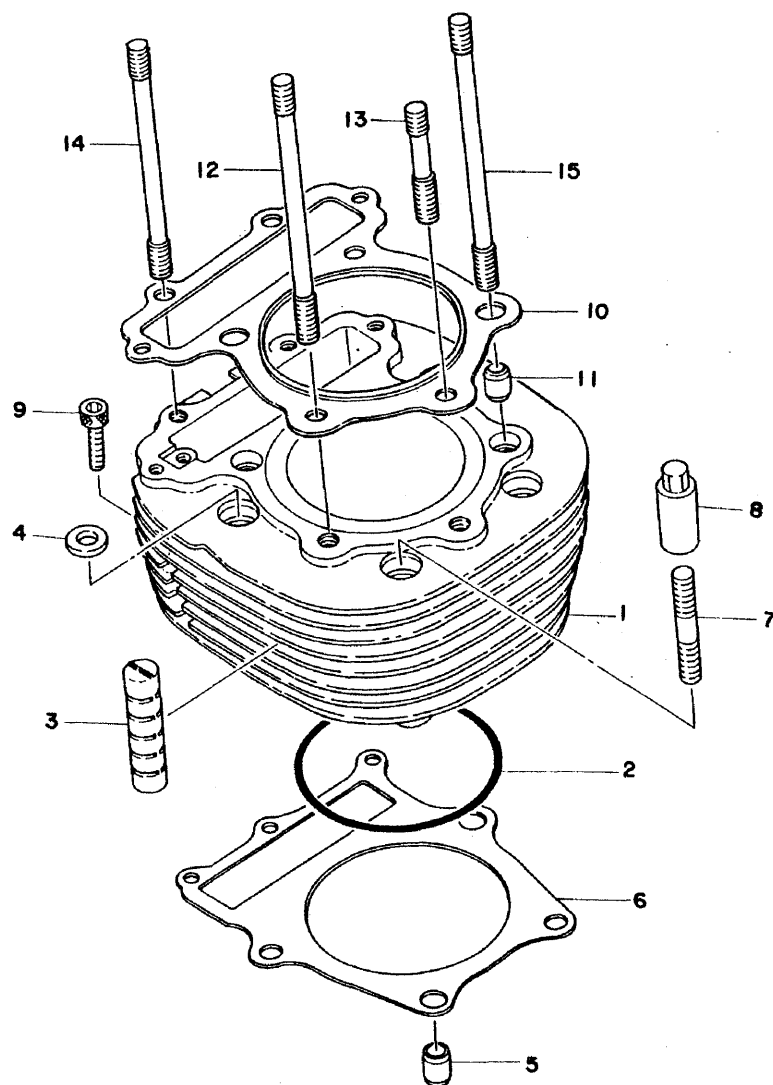



FIG. 2 CYLINDER

REF. NO.	PART NO.	DESCRIPTION	Q'TY.	REMARKS
1	583-11310-00	CYLINDER	1	
2	93210-92295	O-RING	1	
3	583-11127-00	ABSORBER 3	2	
4	90201-10590	WASHER, Plate	4	
5	91830-24016	PIN, dowel	2	
6	583-11351-00	GASKET, cylinder	1	
7	90116-10087	BOLT, stud	4	
8	90179-10201	NUT	4	
9	91316-06030	BOLT	3	
10	583-11181-01	GASKET, cylinder head 1	1	
11	91830-24016	PIN, dowel	2	
12	90116-10222	BOLT, stud	2	
13	90116-10223	BOLT, stud	1	
14	90116-08190	BOLT, stud	2	
15	90116-10225	BOLT, stud	2	



3H7700-0020

FIG. 3 CRANKSHAFT·PISTON

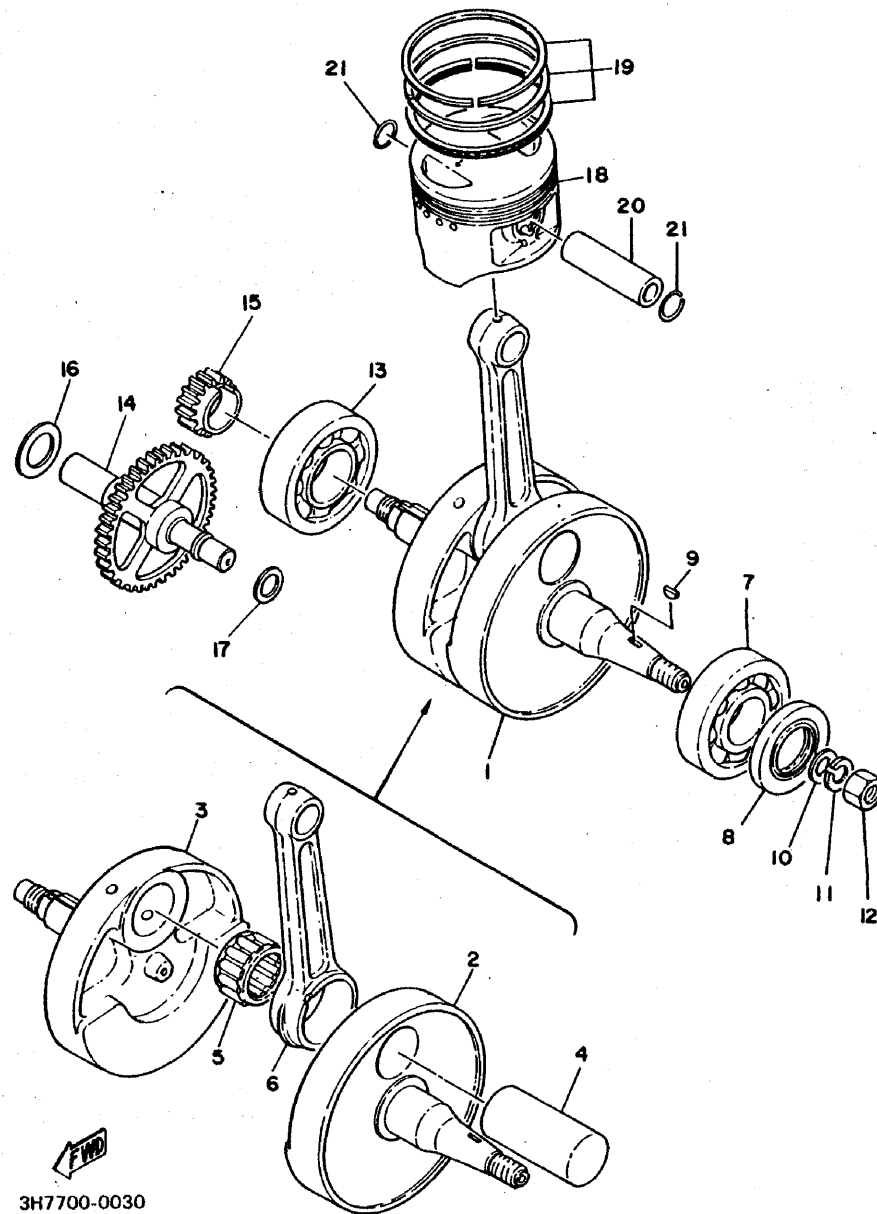

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	583-11400-00	CRANKSHAFT ASSY	1	
2	583-11412-00	.CRANK 1	1	
3	583-11422-00	.CRANK 2	1	
4	583-11681-00	.PIN, crank 1	1	
5	93310-635A5	.BEARING, cylindrical	1	
6	583-11651-00	.ROD, connecting	1	
7	93306-30622	BEARING	1	
8	93102-30145	OIL SEAL	1	
9	90280-05013	KEY, woodruff	1	
10	90201-12593	WASHER, Plate	1	
11	92901-12100	WASHER, sPring	1	
12	90170-12067	NUT	1	
13	93306-30702	BEARING (B6307)	1	
14	583-11150-00	BREAKER SHAFT ASSY	1	
15	583-11536-00	GEAR, drive (21T)	1	
16	90201-15234	WASHER, Plate	1	
17	90201-09572	WASHER, Plate	1	
18	583-11631-02-95	PISTON (STD)	1	UR
	583-11631-02-96	PISTON (STD)	1	UR
	583-11635-02	PISTON (1ST O/S 0.25MM)	1	AP
	583-11636-02	PISTON (2ND O/S 0.50MM)	1	AP
	583-11637-02	PISTON (3RD O/S 0.75MM)	1	AP
	583-11638-02	PISTON (4TH O/S 1.00MM)	1	AP
19	583-11610-01	PISTON RING SET (STD)	1	
	583-11610-11	PISTON RING SET (1ST O/S)	1	AP
	583-11610-21	PISTON RING SET (2ND O/S)	1	AP
	583-11610-31	PISTON RING SET (3RD O/S)	1	AP
	583-11610-41	PISTON RING SET (4TH O/S)	1	AP

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
20	583-11633-00	PIN, Piston	1	
21	93450-22027	CIRCLIP	2	





FIG. 4 VALVE

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	2J2-12111-01	VALVE, intake	1	
2	583-12121-00	VALVE, exhaust	1	
3	90501-31454	SPRING, comPression	2	
4	90501-44455	SPRING, comPression	2	
5	256-12116-01	SEAT, valve sPring	2	
6	341-12119-02	SEAL, valve stem	2	
7	256-12117-02	RETAINER, valve sPring	2	
8	341-12118-00	COTTER, valve	4	
9	583-12151-00	ARM, valve rocker	2	
10	583-12156-01	SHAFT, rocker	2	
11	583-12159-00	SCREW, valve adjusting	2	
12	90170-08173	NUT	2	

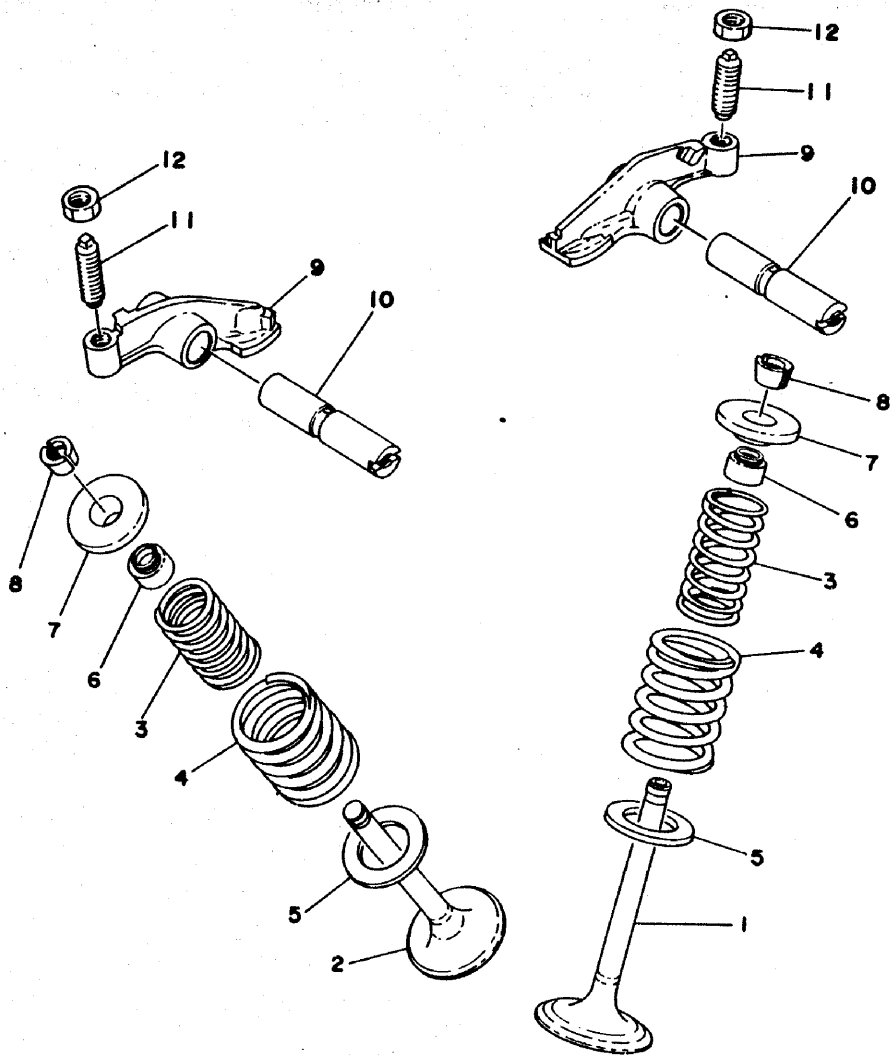

4R9110-1040


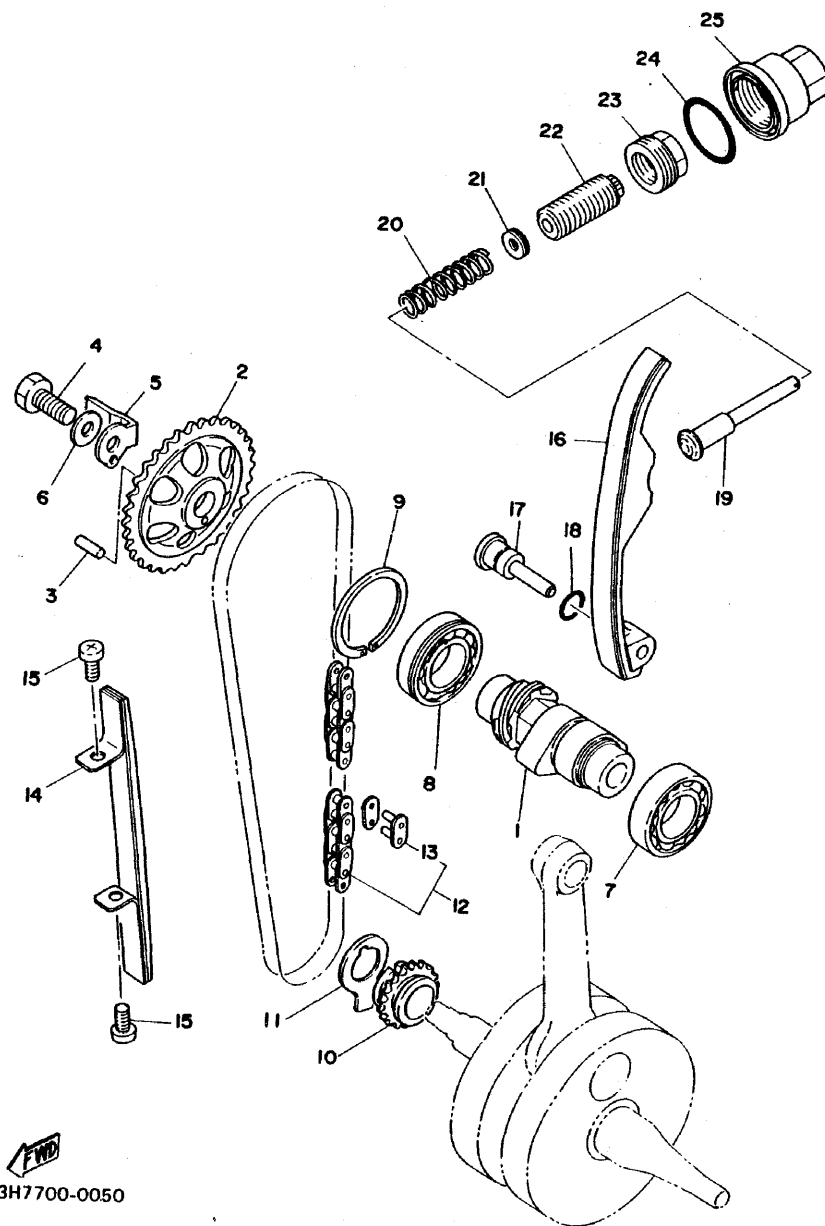


FIG. 5 CAMSHAFT.CHAIN


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	583-12171-01	CAMSHAFT 1	1	
2	583-12176-00	SPROCKET, cam chain (34T)	1	
3	93604-16092	PIN, dowel	1	
4	90101-10303	BOLT	1	
5	1T1-12279-00	PLATE	1	
6	90201-10591	WASHER, Plate	1	
7	93306-00502	BEARING (B6005)	1	
8	93306-00506	BEARING (B6005)	1	
9	93440-47044	CIRCLIP	1	
10	583-11549-00	SPROCKET, cam chain (17T)	1	
11	583-11533-00	PLATE, cam chain sProcket	1	
12	94500-02106	CHAIN (BF05M-106L)	1	tsubakimoto
13	94600-02001	.JOINT, chain	1	tsubakimoto
14	583-12231-00	GUIDE, stopPer 1	1	
15	92501-06014	SCREW, Pan head	2	
16	341-12241-03	GUIDE, stopPer 2	1	
17	583-12247-00	SHAFT, tensioner	1	
18	93210-12152	O-RING	1	
19	583-12217-00	ROD, chain tensioner	1	
20	90501-14095	SPRING, comPression	1	
21	2H0-12232-00	DAMPER	1	
22	90149-18100	SCREW	1	
23	90179-18199	NUT	1	
24	93210-32172	O-RING	1	
25	583-12212-00	CAP, chain tensioner	1	

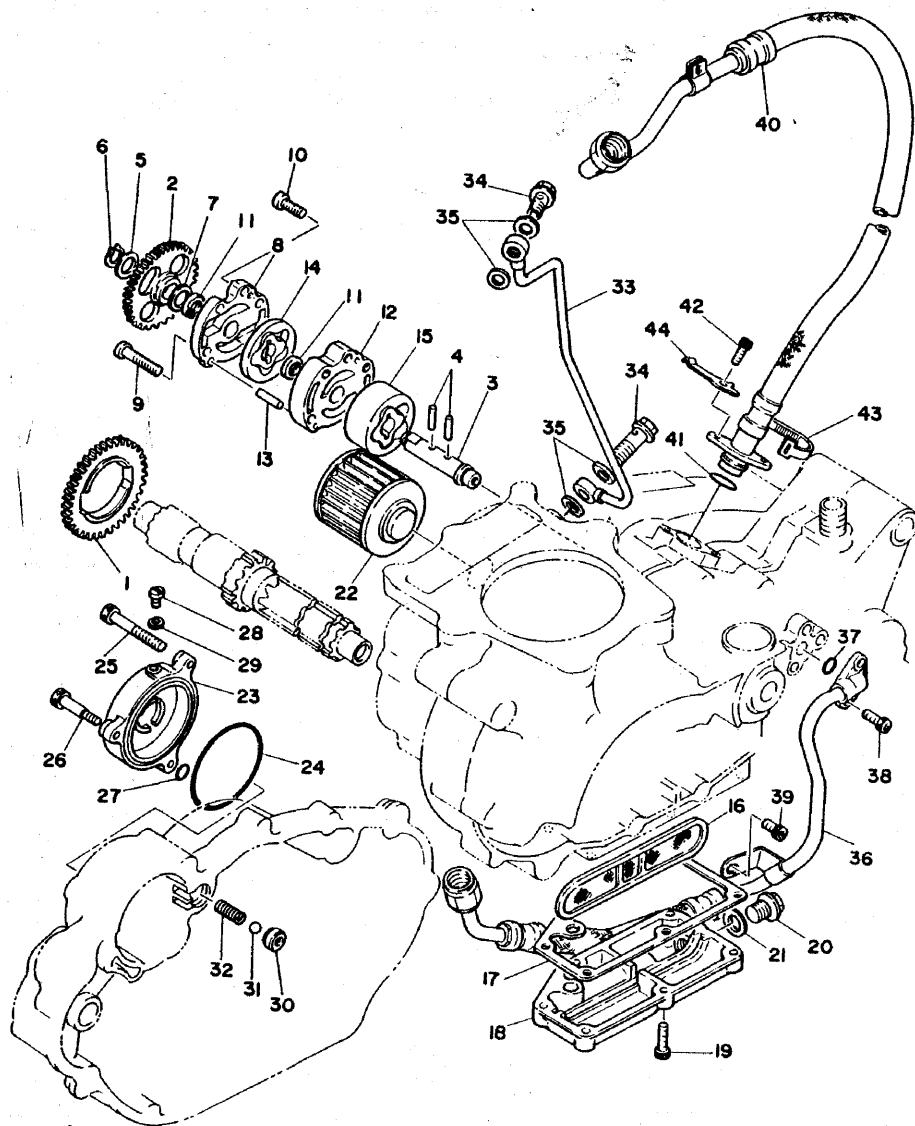

3H7700-0060

FIG. 6 OIL PUMP.OIL CLEANER

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	583-13324-00	GEAR, drive (42T)	1	
2	583-13325-00	GEAR, Pump driven (41T)	1	
3	583-13314-00	SHAFT, Pump	1	
4	93603-17070	PIN, dowel	2	
5	90201-10119	WASHER, Plate	1	
6	93410-10025	CIRCLIP	1	
7	90201-12166	WASHER, Plate	1	
8	583-13316-02	COVER, Pump	1	
9	92501-06030	SCREW, Pan head	3	
10	92501-06018	SCREW, Pan head	2	
11	93104-11038	OIL SEAL	2	
12	583-13336-02	HOUSING, rotor	1	
13	93604-22050	PIN, dowel	2	
14	583-13310-01	ROTOR ASSY 1	1	
15	583-13320-00	ROTOR ASSY 2	1	
16	583-13411-00	STRAINER, oil	1	
17	583-13414-00	GASKET, strainer cover	1	
18	583-13417-01	COVER, strainer	1	
19	91316-06020	BOLT	6	
20	90340-14009	PLUG, straight screw	1	
21	214-11198-01	GASKET	1	
22	4X7-13440-00	ELEMENT ASSY, oil cleaner	1	
23	583-13447-00	COVER, oil element	1	
24	93210-64297	O-RING	1	
25	91316-06060	BOLT	2	
26	90109-06511	BOLT	1	
27	93210-07135	O-RING	1	
28	90149-05110	SCREW	1	

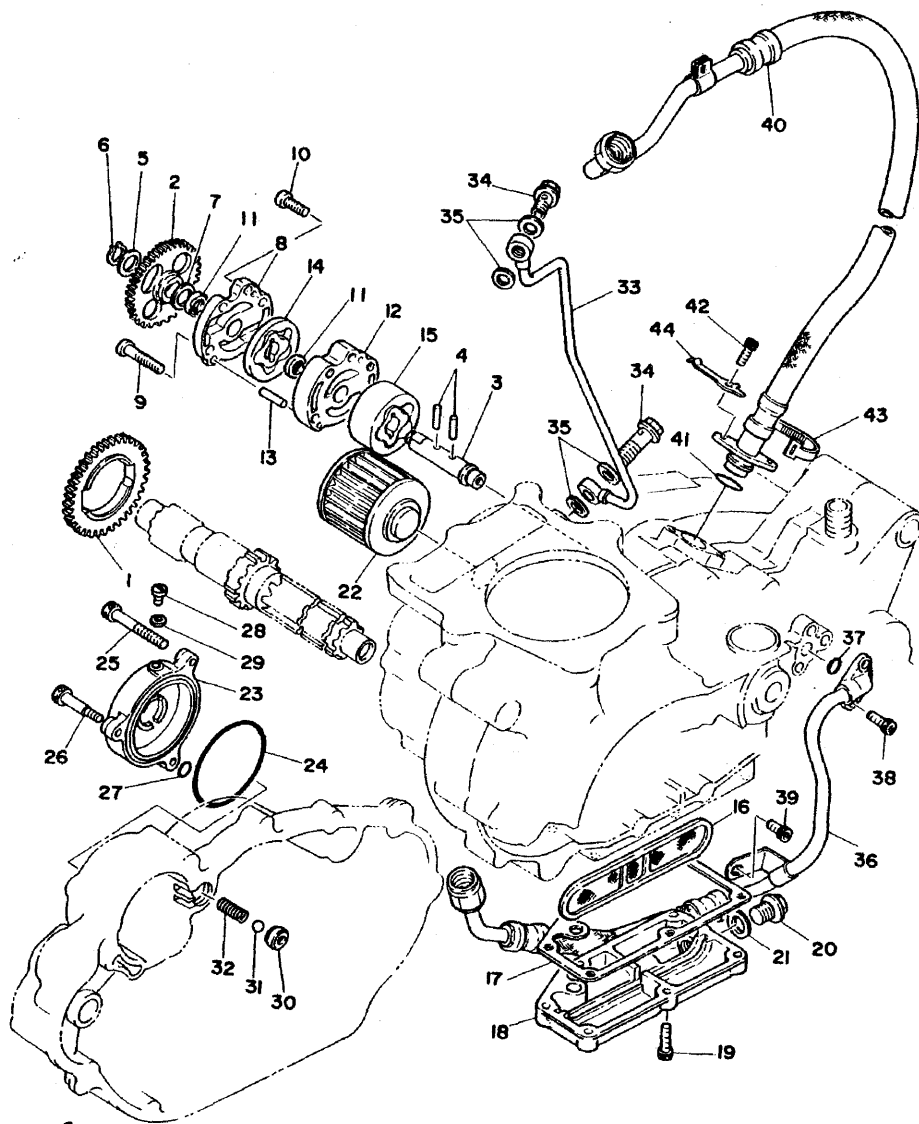

3H7700-0060

FIG. 6 OIL PUMP.OIL CLEANER

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	90430-05126	GASKET	1	
30	583-13113-00	SEAT, check ball	1	
31	93503-08007	BALL	1	
32	90501-05378	SPRING, compression	1	
33	583-13161-01	PIPE, delivery '1	1	
34	90401-08038	BOLT, union	2	
35	90430-08119	GASKET	4	
36	583-13464-00	HOSE, oil 1	1	
37	93210-10197	O-RING	1	
38	91316-06015	BOLT	2	
39	91316-06012	BOLT	1	
40	583-13465-02	HOSE, oil 2	1	
41	93210-15171	O-RING	1	
42	91316-06015	BOLT	2	
43	437-83936-00	BAND, switch cord	1	
44	90465-06077	CLAMP	1	

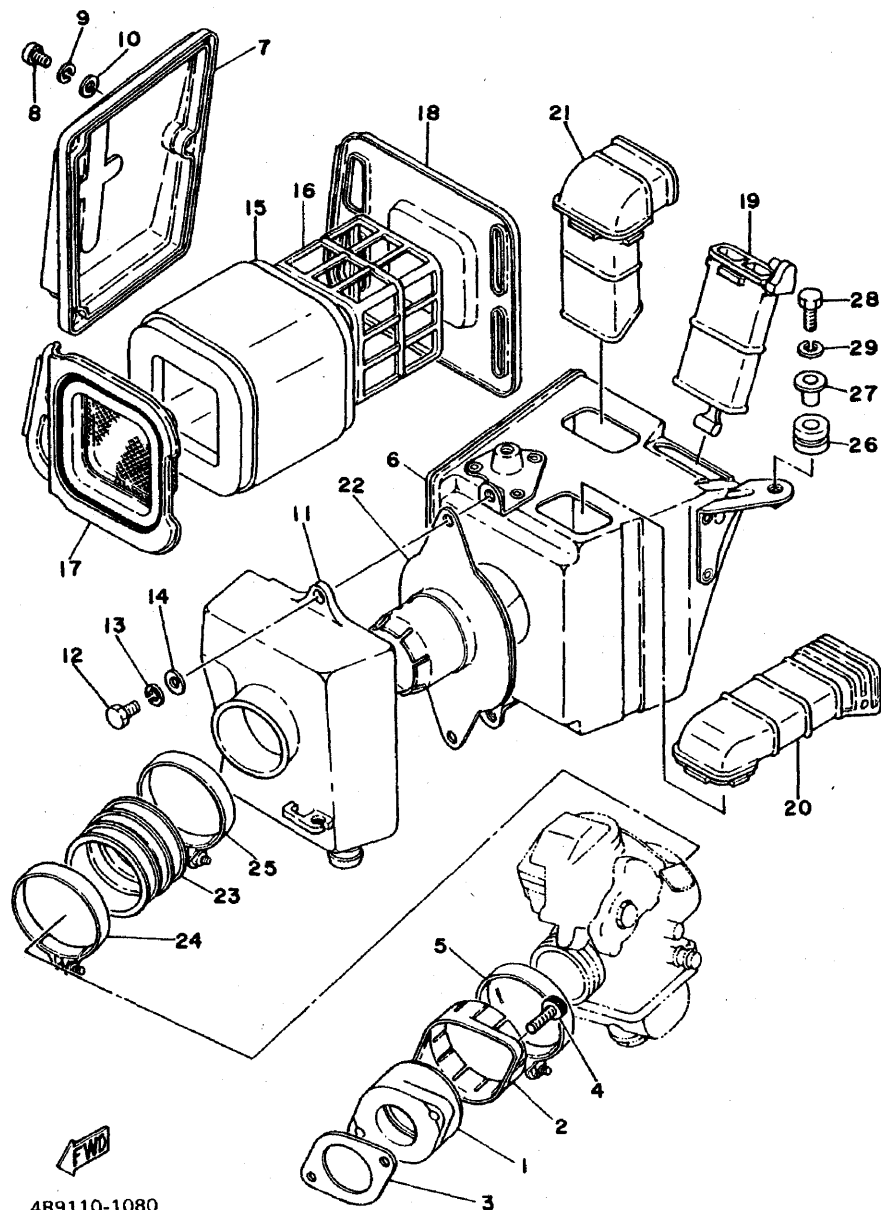



FIG. 7 INTAKE

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	583-13565-01	JOINT, carburetor	1	
2	256-13564-00	COVER, manifold	1	
3	583-13556-01	GASKET, manifold	1	
4	91316-06020	BOLT	2	
5	90460-58124	CLAMP, hose	1	
6	583-14411-01	CASE, air cleaner 1	1	
7	583-14422-00	CAP, cleaner case 2	1	
8	98501-05012	SCREW, Pan head	3	
9	92901-05100	WASHER, sPring	3	
10	92901-05600	WASHER, Plate	3	
11	583-14421-00	CASE, air cleaner 2	1	
12	97301-06020	BOLT	2	
13	92901-06100	WASHER, sPring	2	
14	92901-06600	WASHER, Plate	2	
15	583-14451-09	ELEMENT, air cleaner	1	
16	583-14458-00	GUIDE	1	
17	583-14468-01	PLATE, element fitting	1	
18	583-14472-00	PLATE, element	1	
19	583-14437-00	DUCT	1	
20	583-14431-00	SILENCER, intake 1	1	
21	583-14441-00	SILENCER, intake 2	1	
22	583-14485-00	PIPE, Joint	1	
23	583-14453-00	JOINT, air cleaner 1	1	
24	90460-58015	CLAMP, hose	1	
25	90460-61063	CLAMP, hose	1	
26	90480-14102	GROMMET	2	
27	90387-07391	COLLAR	2	
28	97301-06025	BOLT	2	

4R9110-1080

FIG. 7 INTAKE

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	92901-06100	WASHER, sPring	2	

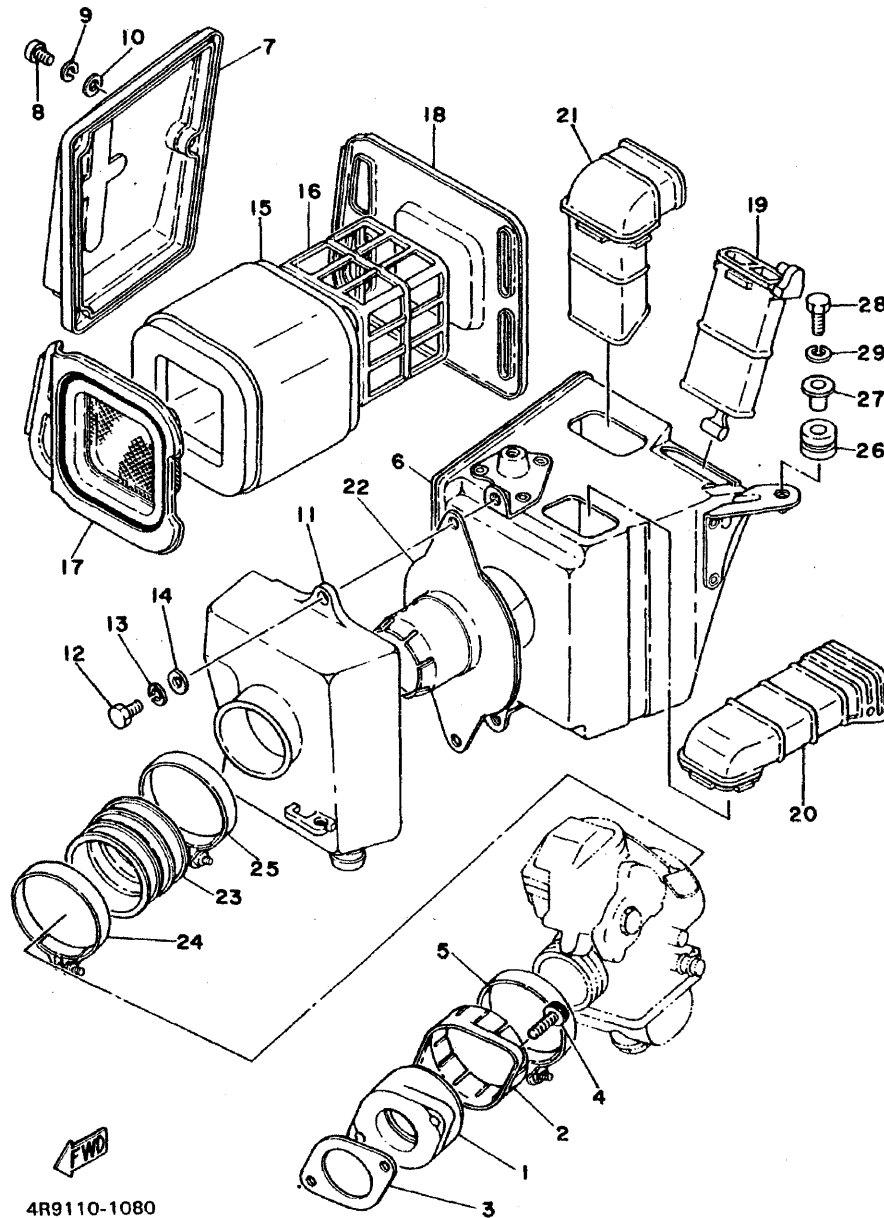

4R9110-1080


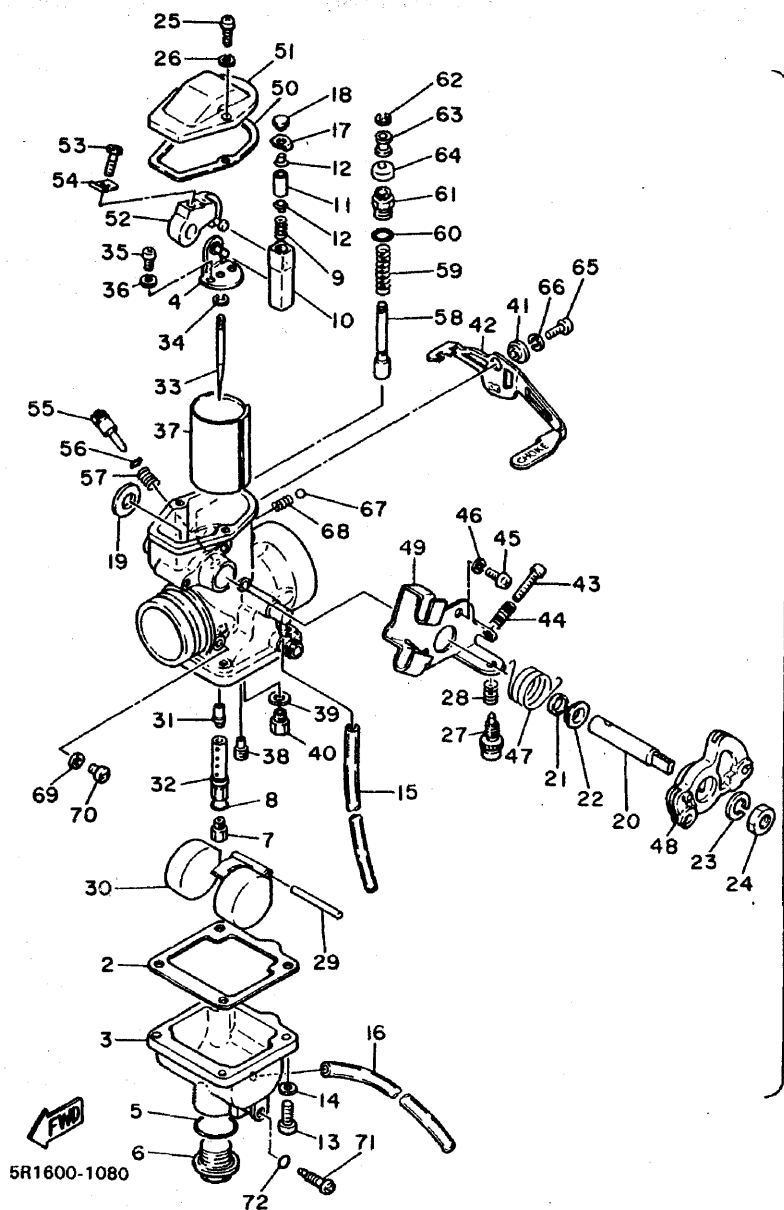


FIG. 8 CARBURETOR


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	3H7-14101-01	CARBURETOR ASSY 1	1	
2	583-14184-00	.GASKET, float chamber	1	
3	2Y0-14181-00-12	.BODY, float chamber 1	1	
4	583-14291-00	.BRACKET 1	1	
5	558-14147-00	.O-RING	1	
6	2Y0-14115-00	.PLUG, screw	1	
7	137-14143-44	.JET, main (#220)	1	UR STD
	137-14143-42	.JET, main (#210)	1	UR
	137-14143-46	.JET, main (#230)	1	UR
8	583-14561-00	.O-RING	1	
9	1T2-14933-00	.SPRING, diaPhraGm	1	
10	583-14274-00	.CONNECTOR	1	
11	583-14386-00	.PIN	1	
12	583-14558-00	.PIN	2	
13	98501-05016	.SCREW, Pan head	4	
14	92902-05100	.WASHER, sPring	4	
15	1E6-14197-00	.PIPE	1	
16	432-14197-00	.PIPE	1	
17	583-14951-00	.WASHER	1	
18	583-14216-00	.SCREW	1	
19	583-14264-00	.SPACER	1	
20	583-14215-00	.SHAFT, throttle lever	1	
21	583-14239-01	.SEAL	1	
22	583-14265-00	.WASHER	1	
23	92902-08100	.WASHER, sPring	1	
24	812-14594-00	.NUT	1	
25	98502-04014	.SCREW, Pan head	2	
26	92902-04100	.WASHER, sPring	2	

FIG. 8 CARBURETOR

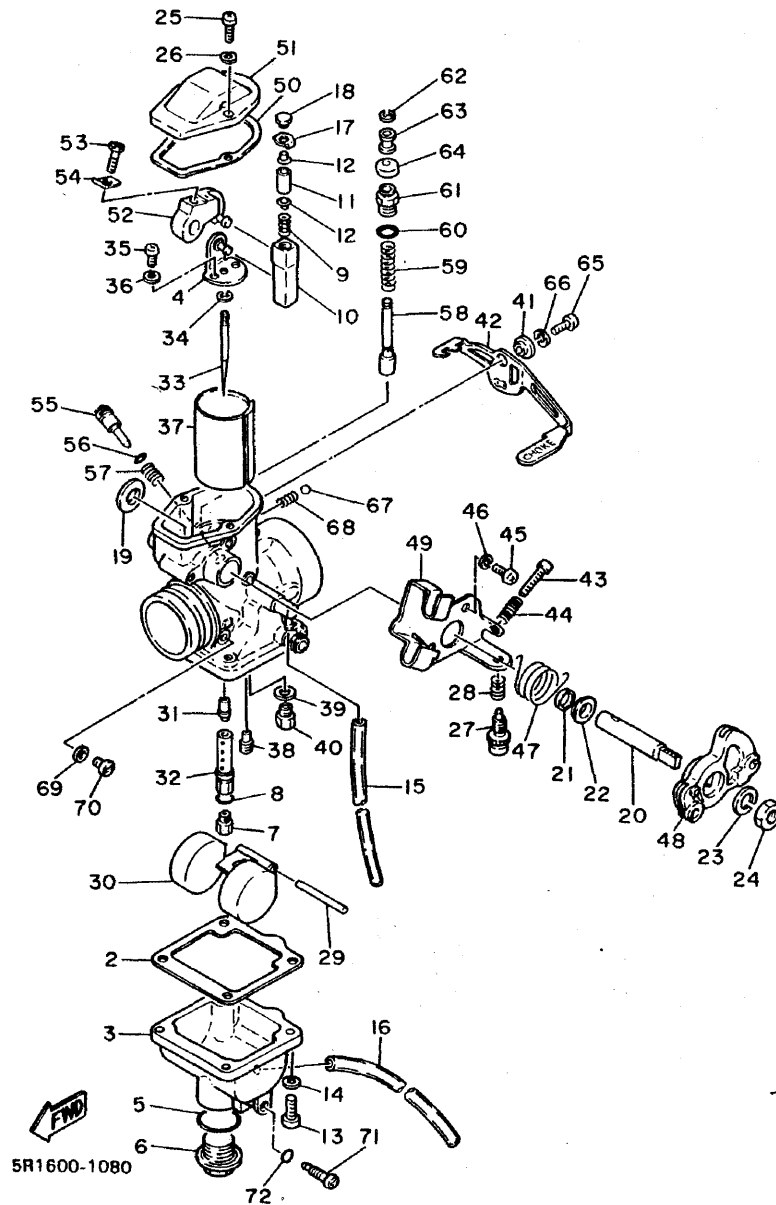

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
27	2J2-14121-00	•SCREW, throttle stop	1	
28	2J2-14133-00	•SPRING, throttle stop	1	
29	127-14186-00	•PIN, float	1	
30	583-14185-00	•FLOAT	1	
31	583-14141-52	•NOZZLE, main	1	
32	583-14148-00	•PIPE	1	
33	1T1-14116-02	•NEEDLE	1	
34	164-14137-00	•CLIP	1	
35	98502-04012	•SCREW, Pan head	2	
36	92902-04100	•WASHER, spring	2	
37	583-14112-40	•VALVE, throttle 1	1	
38	193-14142-30	•JET, Pilot (#30.0)	1	
39	214-14195-00	•WASHER, needle valve	1	
40	168-14190-28	•NEEDLE VALVE ASSY	1	
41	583-14594-00	•COLLAR	1	
42	2Y0-14175-00	•LEVER, starter 1	1	
43	583-14245-00	•SCREW, guide	1	
44	583-14133-00	•SPRING, throttle stop	1	
45	98502-05012	•SCREW, Pan head	2	
46	92902-05100	•WASHER, spring	2	
47	583-14131-01	•SPRING, throttle valve	1	
48	583-14573-00	•LEVER	1	
49	2J2-14571-00	•BRACKET, throttle	1	
50	583-14536-00	•GASKET	1	
51	583-14158-00	•TOP, mixing chamber	1	
52	583-14292-00	•LEVER, throttle valve	1	
53	583-14592-00	•SCREW	1	
54	583-14597-00	•WASHER	1	

FIG. 8 CARBURETOR

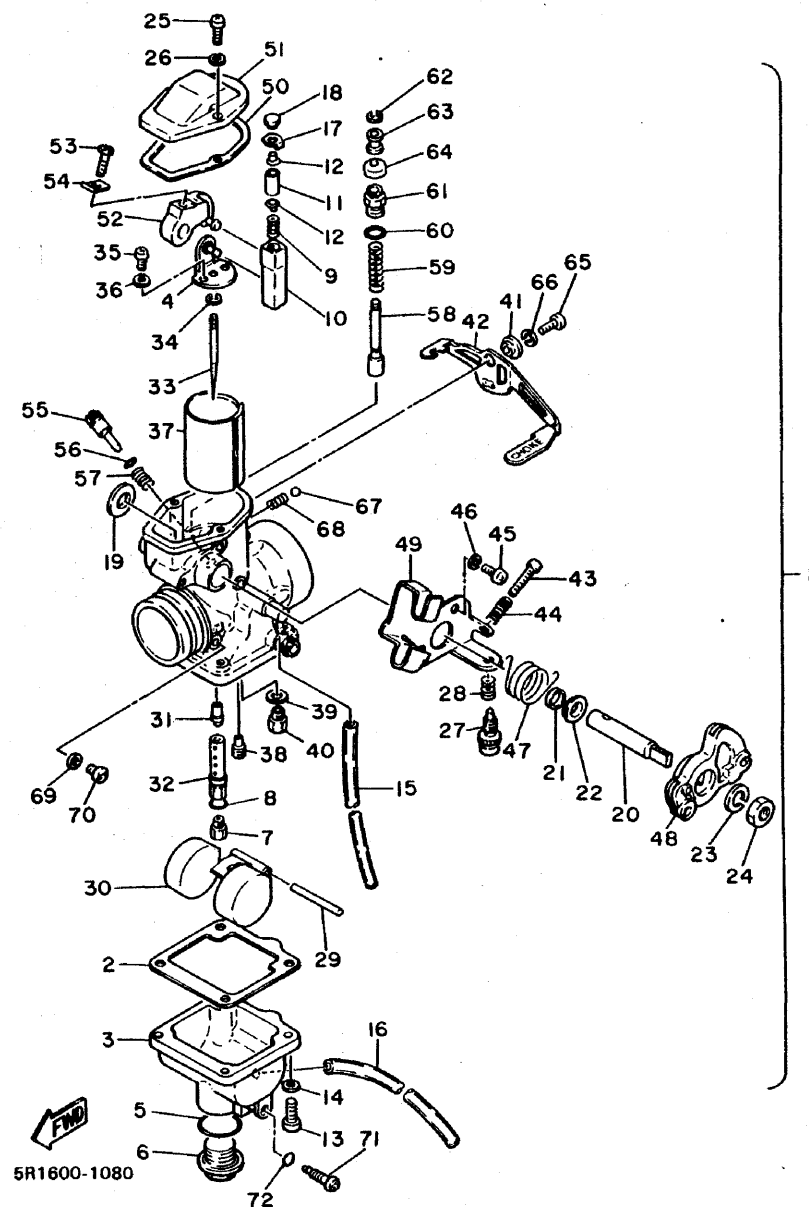

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
55	525-14123-00	•SCREW, air adjusting	1	
56	354-14147-00	•O-RING	1	
57	127-14134-00	•SPRING, air adjusting	1	
58	583-14171-01	•PLUNGER, starter	1	
59	500-14135-00	•SPRING, Plunger	1	
60	583-14562-00	•O-RING	1	
61	583-14174-00	•CAP, Plunger	1	
62	737-14137-00	•CLIP	1	
63	583-14918-00	•RING	1	
64	802-14173-00	•COVER, Plunger cap	1	
65	92501-06012	•SCREW, Pan head	1	
66	92902-06100	•WASHER, spring	1	
67	93501-08001	•BALL	1	
68	583-14589-00	•SPRING	1	
69	584-14956-00	•WASHER	1	
70	341-14991-00	•SCREW	1	
71	2L1-14191-00	•PLUG, drain	1	
72	214-14147-00	•O-RING	1	

XT560A21

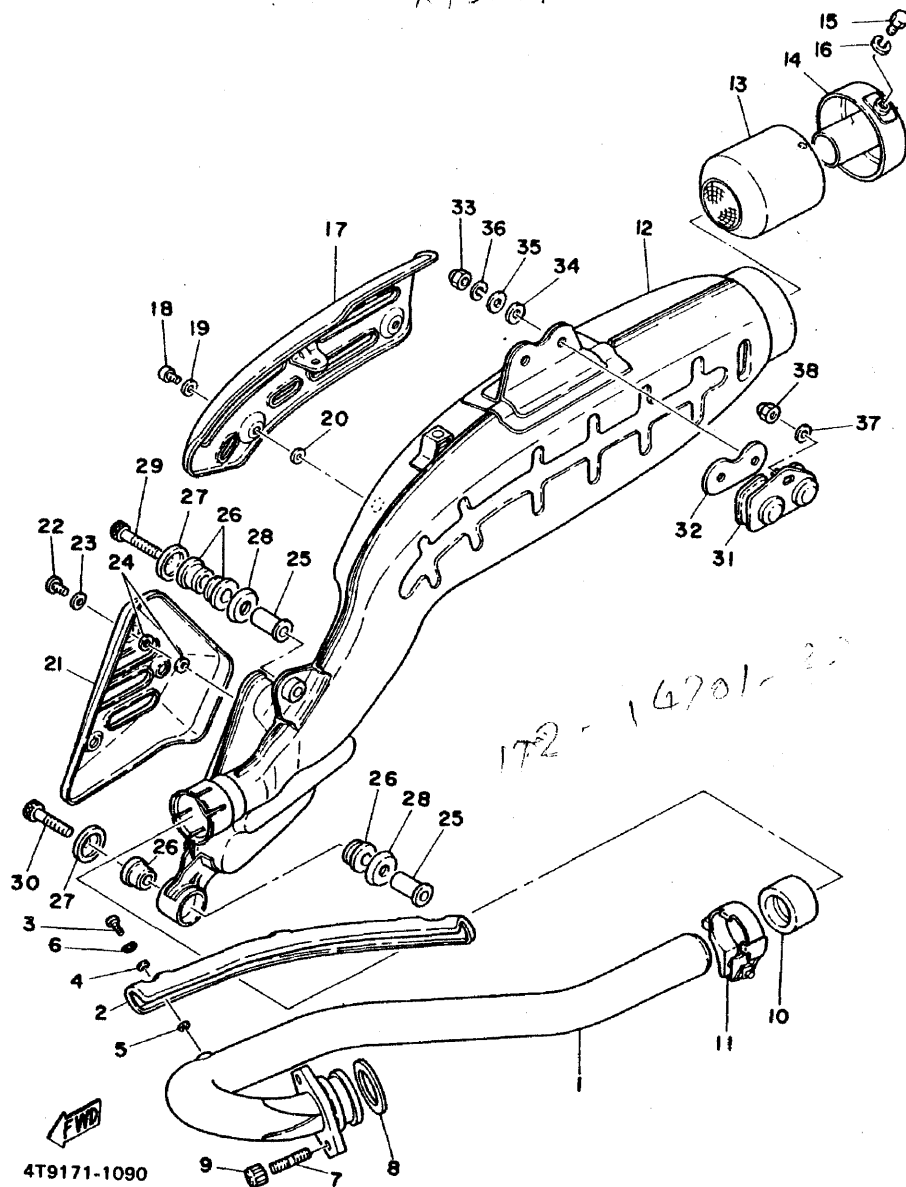


FIG. 9 EXHAUST

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	1T1-14611-02	PIPE, exhaust 1	1	
2	1T1-14628-00	PROTECTOR, exhaust Pipe	1	
3	98906-06010	SCREW, bind	2	
4	583-14766-00	WASHER, Protector	2	
5	1E6-14766-01	WASHER, Protector	2	
6	90206-06060	WASHER, wave	2	
7	95621-08615	BOLT, stud	2	
8	90430-38054	GASKET	1	
9	90179-08004	NUT	2	
10	1T1-14714-01	GASKET, muffler	1	
11	1T1-14788-00	BAND, silencer	1	
12	1T2-14711-32	MUFFLER 1	1	
13	*	ARRESTER, sPark	1	LM
14	1T1-14752-01	PIPE, outlet	1	
15	97321-06010	BOLT	2	
16	92901-06100	WASHER, sPring	2	
17	1T1-14718-00	PROTECTOR, muffler 1	1	
18	98906-06010	SCREW, bind	3	
19	583-14766-00	WASHER, Protector	3	
20	1E6-14766-01	WASHER, Protector	3	
21	1T2-14728-00	PROTECTOR, muffler 2	1	
22	98906-06012	SCREW, bind	3	
23	583-14766-00	WASHER, Protector	3	
24	1E6-14766-01	WASHER, Protector	6	
25	90387-08572	COLLAR	2	
26	1T1-14747-01	DAMPER, muffler	4	
27	90209-08162	WASHER	2	
28	90209-12163	WASHER	2	

FIG. 9 EXHAUST

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	91316-08050	BOLT	1	
30	90110-08018	BOLT, hexagon socket head	1	
31	1T1-14791-01	STAY, muffler	1	
32	1T1-14755-01	GASKET, silencer	1	
33	95601-08100	NUT, u	2	
34	90202-08103	WASHER, Plate	2	
35	90201-08326	WASHER, Plate	2	
36	92901-08100	WASHER, sPring	3	
37	92901-08600	WASHER, Plate	1	
38	95303-08800	NUT, crown	1	


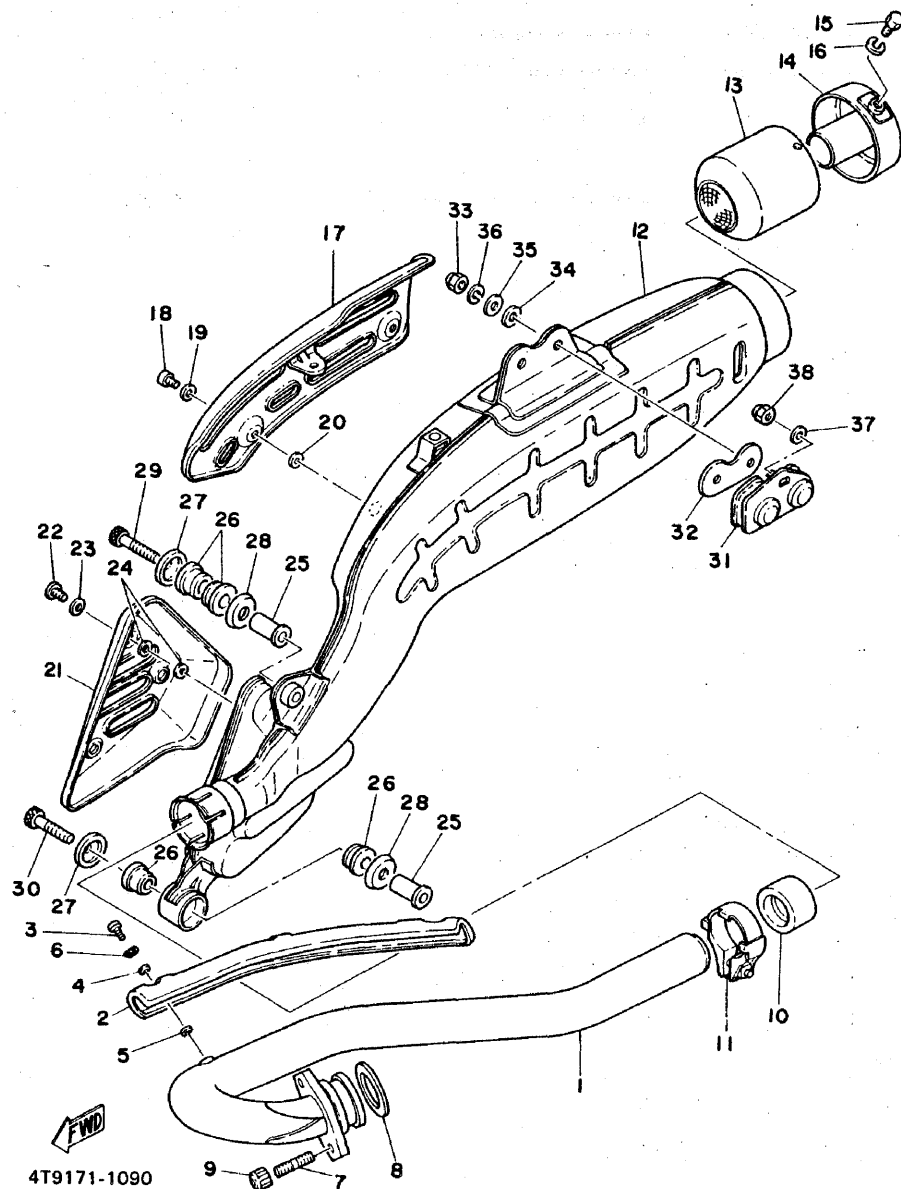




FIG. 10 CRANKCASE

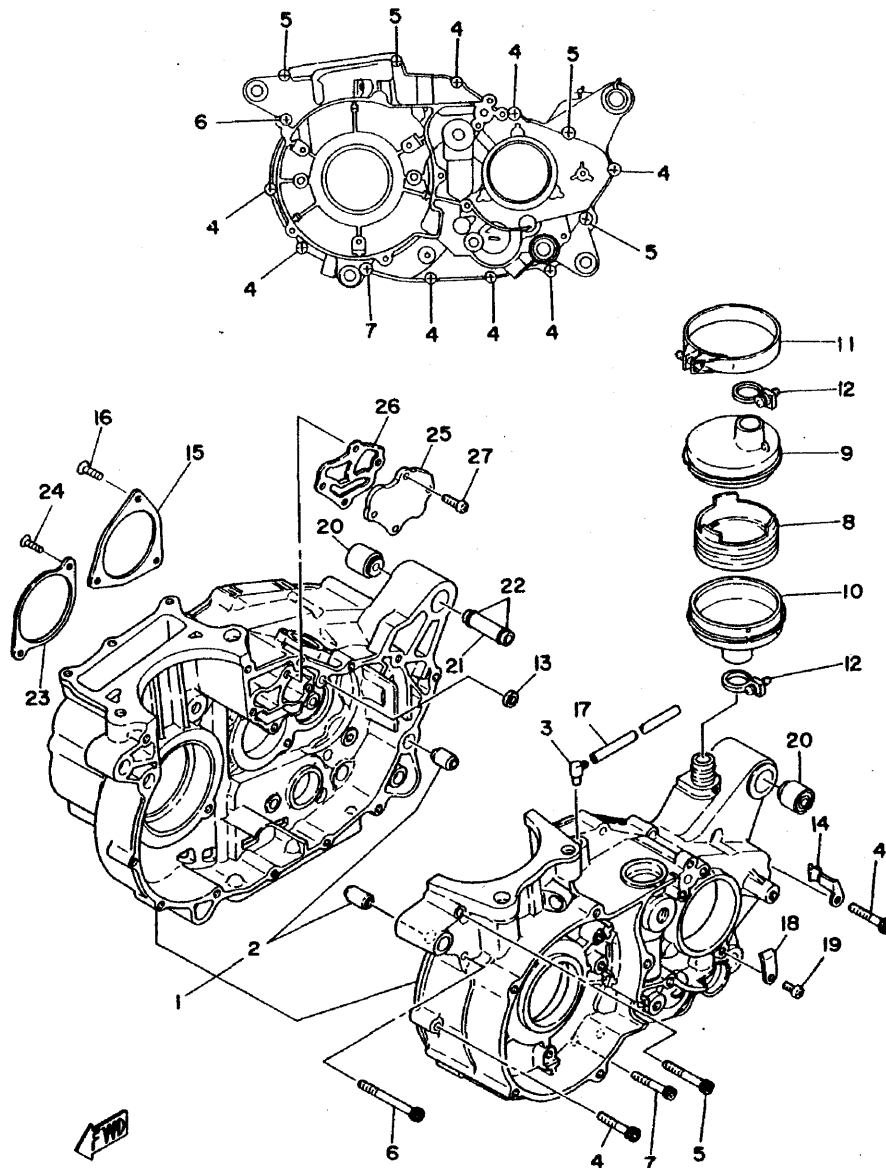

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	2Y0-15100-00	CRANKCASE ASSY	1	
2	91810-05016	.PIN, dowel	2	
3	583-15371-00	BREATHER	1	
4	91316-06035	BOLT	8	
5	91316-06045	BOLT	4	
6	91316-06065	BOLT	1	
7	91316-06055	BOLT	1	
8	583-15358-00	SEPARATOR, oil	1	
9	583-15346-00	BREATHER 1	1	
10	583-15347-00	BREATHER 2	1	
11	90460-71017	CLAMP, hose	1	
12	90460-22083	CLAMP, hose	2	
13	90430-09121	GASKET	1	
14	90465-05084	CLAMP	1	
15	363-15381-00	PLATE, bearing cover	1	
16	98701-05012	SCREW, flat head	3	
17	90445-07039	HOSE	1	
18	90465-05075	CLAMP	1	
19	92501-06012	SCREW, Pan head	1	
20	583-15316-00	DAMPER, engine mount 1	2	
21	583-15317-01	SPACER, engine mount	1	
22	93210-12095	O-RING	2	
23	583-15383-00	PLATE, bearing cover	1	
24	92701-06015	SCREW, flat head	2	
25	583-15426-00	COVER	1	
26	583-15466-00	GASKET 2	1	
27	92501-06018	SCREW, Pan head	4	

4T9700-1100

FIG. 11 CRANKCASE COVER

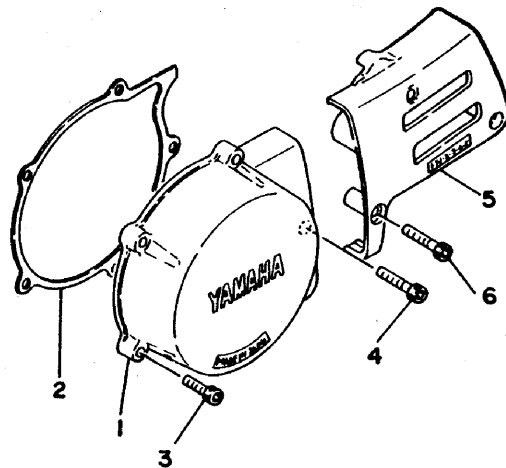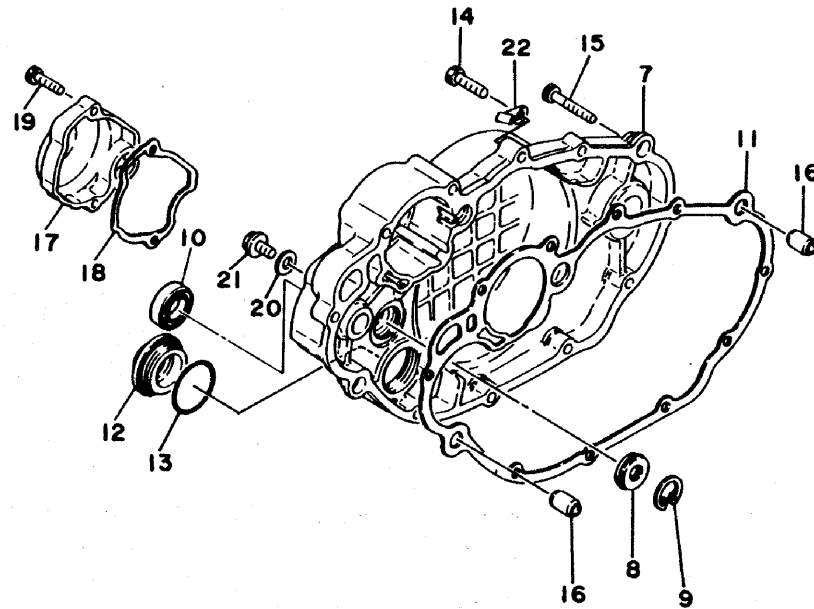


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	583-15411-00	COVER, crankcase 1	1	
2	583-15451-00	GASKET, crankcase cover	1	
3	91316-06025	BOLT	4	
4	91316-06035	BOLT	1	
5	583-15421-00	COVER, crankcase 2	1	
6	91316-06035	BOLT	3	
7	583-15431-02-98	COVER, crankcase 3	1	
8	93101-14089	OIL SEAL	1	
9	93420-25002	CIRCLIP	1	
10	93102-15147	OIL SEAL	1	
11	583-15462-00	GASKET, crankcase cover 3	1	
12	583-15425-00	COVER, generator 2	1	
13	93210-35173	O-RING	1	
14	91316-06030	BOLT	8	
15	91316-06040	BOLT	2	
16	91830-22016	PIN, dowel	2	
17	583-15417-00	COVER, cap	1	
18	583-15457-00	GASKET	1	
19	91316-06025	BOLT	2	
20	90430-10027	GASKET	1	
21	90340-10003	PLUG, straight screw	1	
22	90465-08076	CLAMP	1	



4T9171-1110

FIG. 12 C.D.I MAGNETO

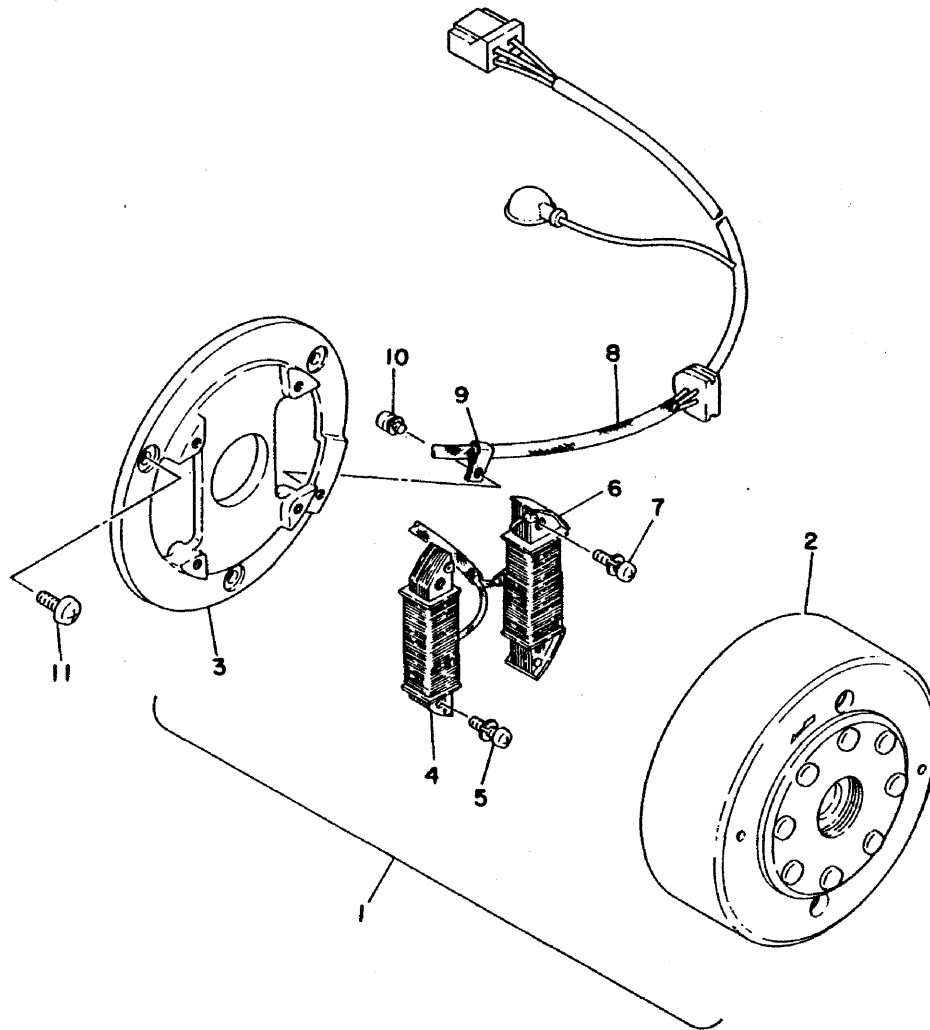

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	2H0-81300-50	FLYWHEEL MAGNETO ASSY	1	
2	2H0-81350-50	•ROTOR ASSY	1	
3	583-81309-50	•BASE, magneto	1	
4	583-81311-50	•COIL, ignition 1	1	
5	583-81345-50	•SCREW, Pan head	2	
6	2H0-81313-50	•COIL, lighting 1	1	
7	1E6-81345-50	•SCREW, Pan head	2	
8	2H0-81315-50	•LEAD WIRE ASSY	1	
9	1E6-81328-50	•CLAMP	1	
10	583-81346-50	•SCREW, Pan head	1	
11	92502-06016	SCREW, Pan head	3	



3H7700-0120

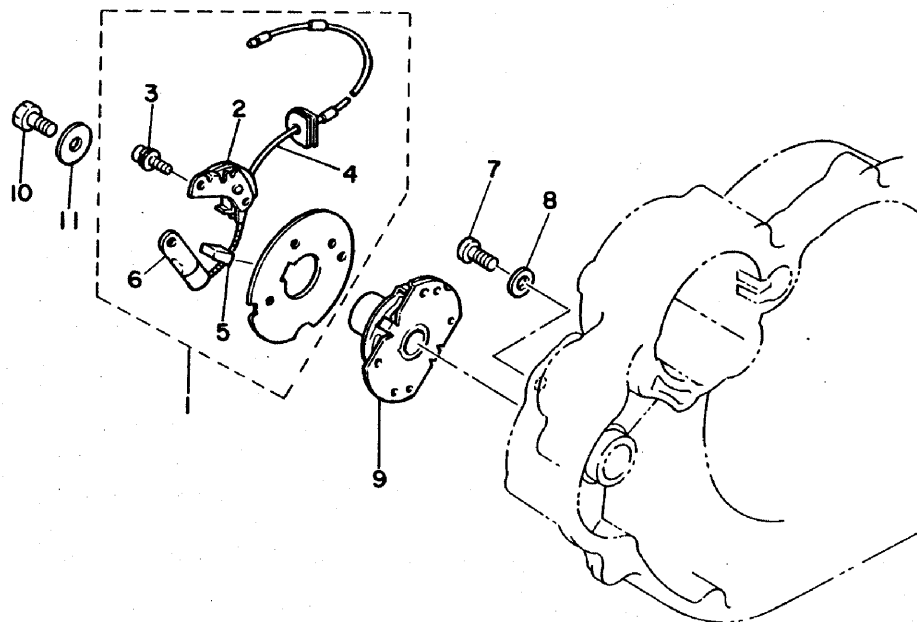


FIG. 13 BREAKER-GOVERNOR

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	583-81620-50	BREAKER PLATE ASSY	1	
2	583-81621-50	.CONTACT BREAKER ASSY	1	
3	583-81645-50	.SCREW	3	
4	583-81615-50	.WIRE, lead	1	
5	583-81631-50	.LUBRICATOR	1	
6	583-81625-50	.CONDENCER	1	
7	97801-06014	SCREW, Pan head	2	
8	92901-06200	WASHER, Plain	2	
9	583-81653-50	GOVERNOR ASSY	1	
10	97301-06016	BOLT	1	
11	90201-06060	WASHER, Plate	1	



3H7700-0130

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	1T1-15620-00	KICK CRANK ASSY	1	
2	583-15621-00	•BOSS, kick crank	1	
3	93507-32009	•BALL	1	
4	90501-12081	•SPRING, comPression	1	
5	90201-15234	•WASHER, Plate	1	
6	93430-10016	•CIRCLIP	1	
7	1T1-15618-00	•COVER, kick lever	1	
8	97321-08030	BOLT	1	
9	583-15661-00	AXLE, kick	1	
10	583-15671-00	WHEEL, ratchet	1	
11	90501-23143	SPRING, comPression	1	
12	363-15676-00	COVER, sPring	1	
13	93410-19015	CIRCLIP	1	
14	90201-25287	WASHER, Plate	2	
15	93440-25020	CIRCLIP	1	
16	583-15641-00	GEAR, kick (29T)	1	
17	93440-25019	CIRCLIP	1	
18	583-15676-00	COVER, sPring	1	
19	90508-32280	SPRING, torsion	1	
20	90560-25154	SPACER	1	
21	93410-25010	CIRCLIP	1	
22	90201-25290	WASHER, Plate	1	
23	90201-20278	WASHER, Plate	1	
24	583-15674-00	GUIDE, ratchet wheel	1	
25	363-15686-00	WASHER, lock	1	
26	434-15668-00	STOPPER	1	
27	97321-06016	BOLT	3	
28	583-15651-00	GEAR, sPcket idle (27T)	1	






FIG. 14 KICK STARTER



REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	90201-17255	WASHER, Plate	1	
30	93410-17008	CIRCLIP	1	
31	583-15631-00	GEAR, kick Pinion (19T)	1	
32	93102-25064	OIL SEAL	1	

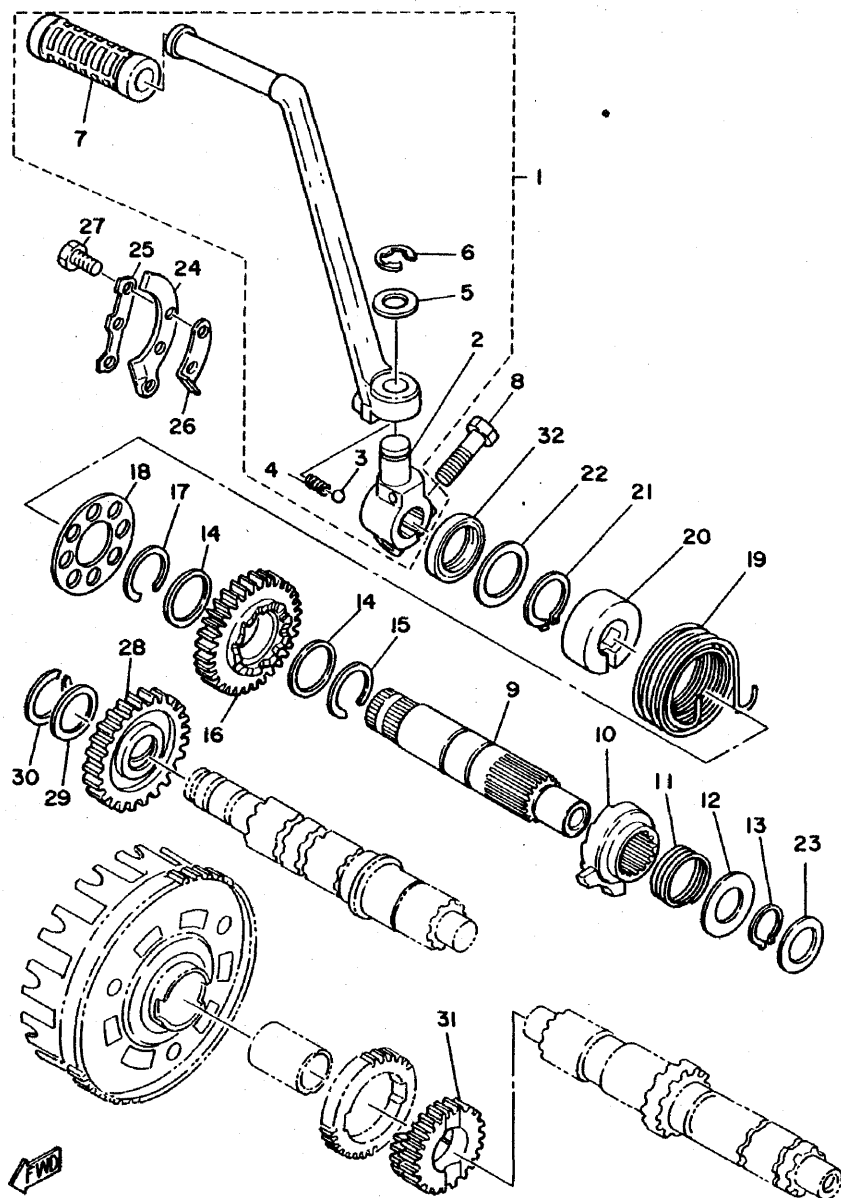

3H7700-0140

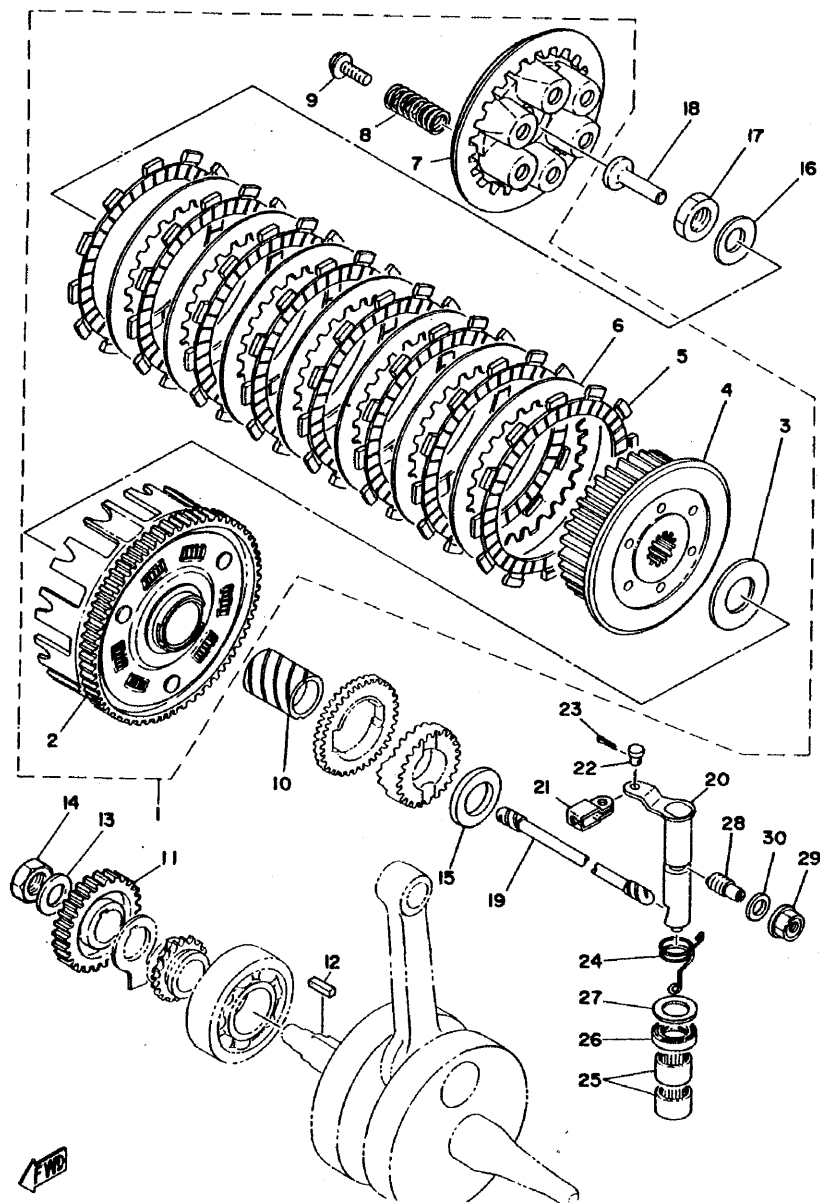


3H7700-0150

FIG. 15 CLUTCH

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	583-16301-00	CLUTCH ASSY	1	
2	583-16150-00	.PRIMARY DRIVEN GEAR COMP.(77T)	1	
3	170-16164-00	.PLATE, thrust 2	1	
4	583-16371-00	.BOSS, clutch	1	
5	583-16321-00	.PLATE, friction	8	
6	360-16325-00	.PLATE, clutch 2	7	
7	498-16351-00	.PLATE, Pressure 1	1	
8	90501-23391	.SPRING, compression	6	
9	90159-06010	.SCREW, with washer	6	
10	90560-25153	SPACER	1	
11	583-16111-00	GEAR, Primary drive (30T)	1	
12	90282-07021	KEY, straight	1	
13	90208-16019	WASHER, conical spring	1	
14	90170-16182	NUT	1	
15	363-16154-00	PLATE, thrust 1	1	
16	214-16119-00	SPRING, belleville	1	
17	90170-18086	NUT	1	
18	174-16356-00	ROD, Push 1	1	
19	583-16357-01	ROD, Push 2	1	
20	583-16382-00	AXLE, Push lever	1	
21	214-16389-00	JOINT	1	
22	90240-06005	PIN, clevis	1	
23	91401-10010	PIN, cotter	1	
24	90508-12279	SPRING, torsion	1	
25	93315-11720	BEARING, cylindrical	2	
26	93102-17148	OIL SEAL	1	
27	90201-17327	WASHER, Plate	1	
28	364-16343-00	SCREW, adjusting	1	

FIG. 15 CLUTCH

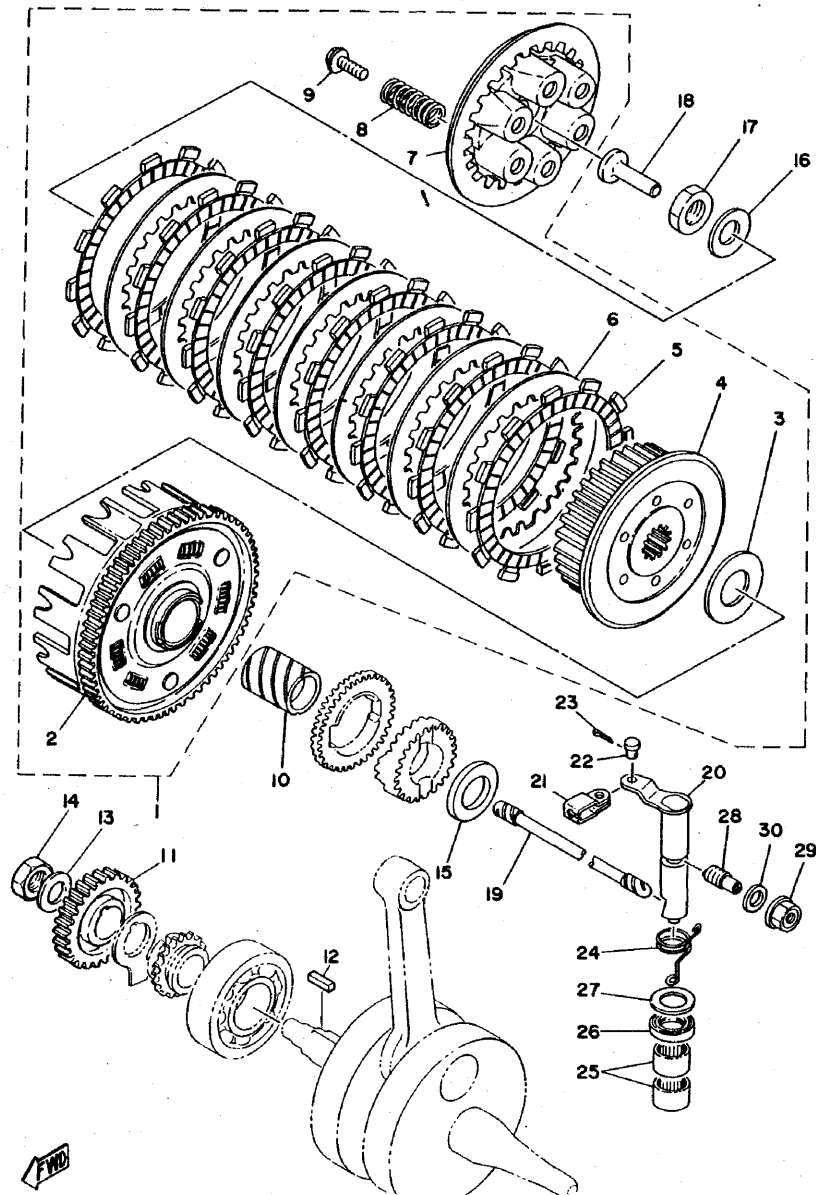

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	583-16344-00	NUT, adjusting	1	
30	90201-12172	WASHER, Plate	1	

FWO
3H7700-0150


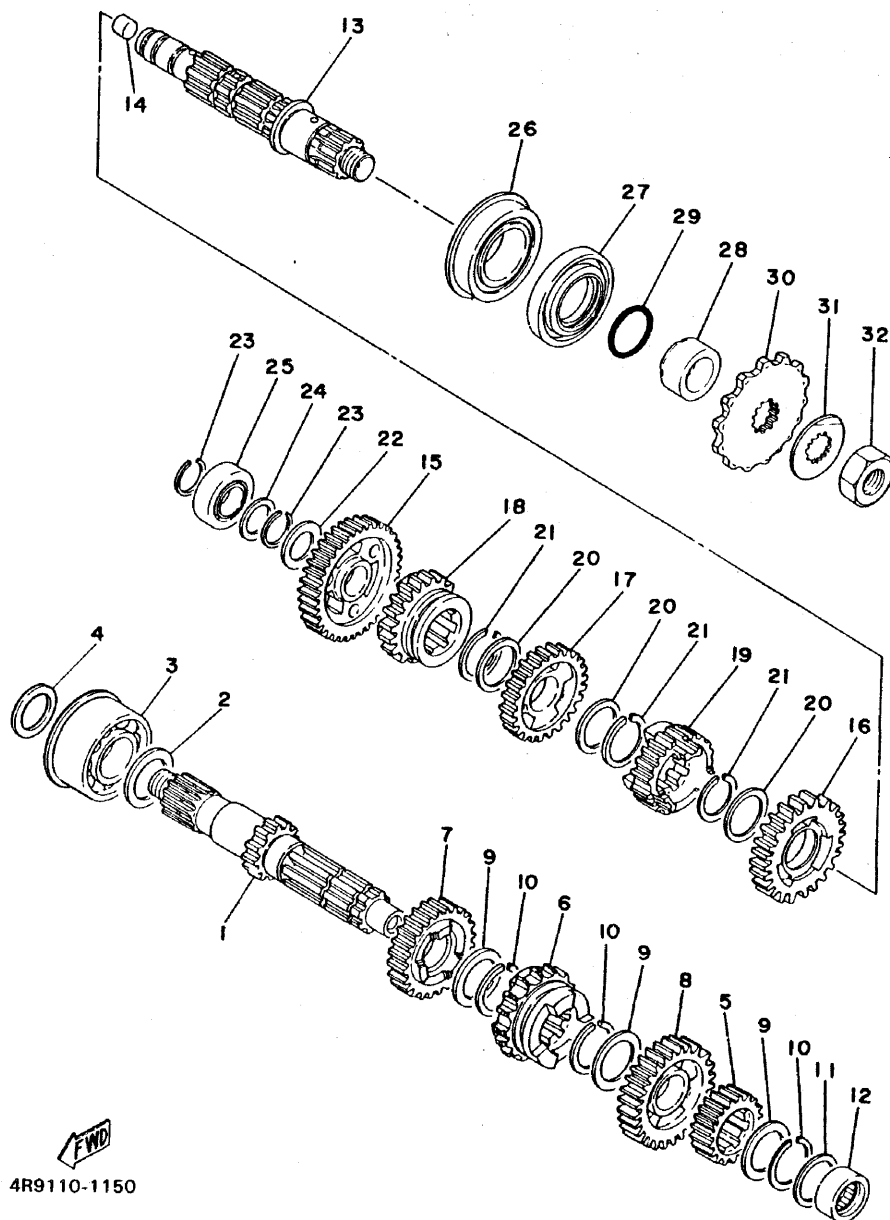


FIG. 16 TRANSMISSION

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	583-17411-01	AXLE, main (14T)	1	
2	168-17428-01-05	SHIM 2 (0.5T)	1	
3	93306-20546	BEARING	1	
4	90201-252A4	WASHER, Plate	1	
5	583-17121-00	GEAR, 2nd Pinion (18T)	1	
6	583-17131-02	GEAR, 3rd Pinion (21T)	1	
7	583-17141-00	GEAR, 4th Pinion (24T)	1	
8	583-17151-01	GEAR, 5th Pinion (27T)	1	
9	90201-25287	WASHER, Plate	3	
10	93440-25020	CIRCLIP	3	
11	90201-20266	WASHER, Plate	1	
12	93311-42012	BEARING, cylindrical	1	
13	2H0-17421-00	AXLE, drive	1	
14	90338-09066	PLUG	1	
15	583-17211-00	GEAR, 1st wheel (33T)	1	
16	583-17221-00	GEAR, 2nd wheel (28T)	1	
17	583-17231-01	GEAR, 3rd wheel (25T)	1	
18	583-17241-00	GEAR, 4th wheel (22T)	1	
19	583-17251-01	GEAR, 5th wheel (21T)	1	
20	90201-25287	WASHER, Plate	3	
21	93440-25020	CIRCLIP	3	
22	90201-20278	WASHER, Plate	1	
23	93410-20038	CIRCLIP	2	
24	90201-20266	WASHER, Plate	1	
25	93313-32008	BEARING, cylindrical	1	
26	93306-30517	BEARING (B6305)	1	
27	93102-35180	OIL SEAL	1	
28	90387-25507	COLLAR	1	


FIG. 16 TRANSMISSION

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	93210-22298	O-RING	1	
30	214-17461-60	SPROCKET, drive (16T)	1	
31	90215-21022	WASHER, lock	1	
32	90179-18020	NUT	1	

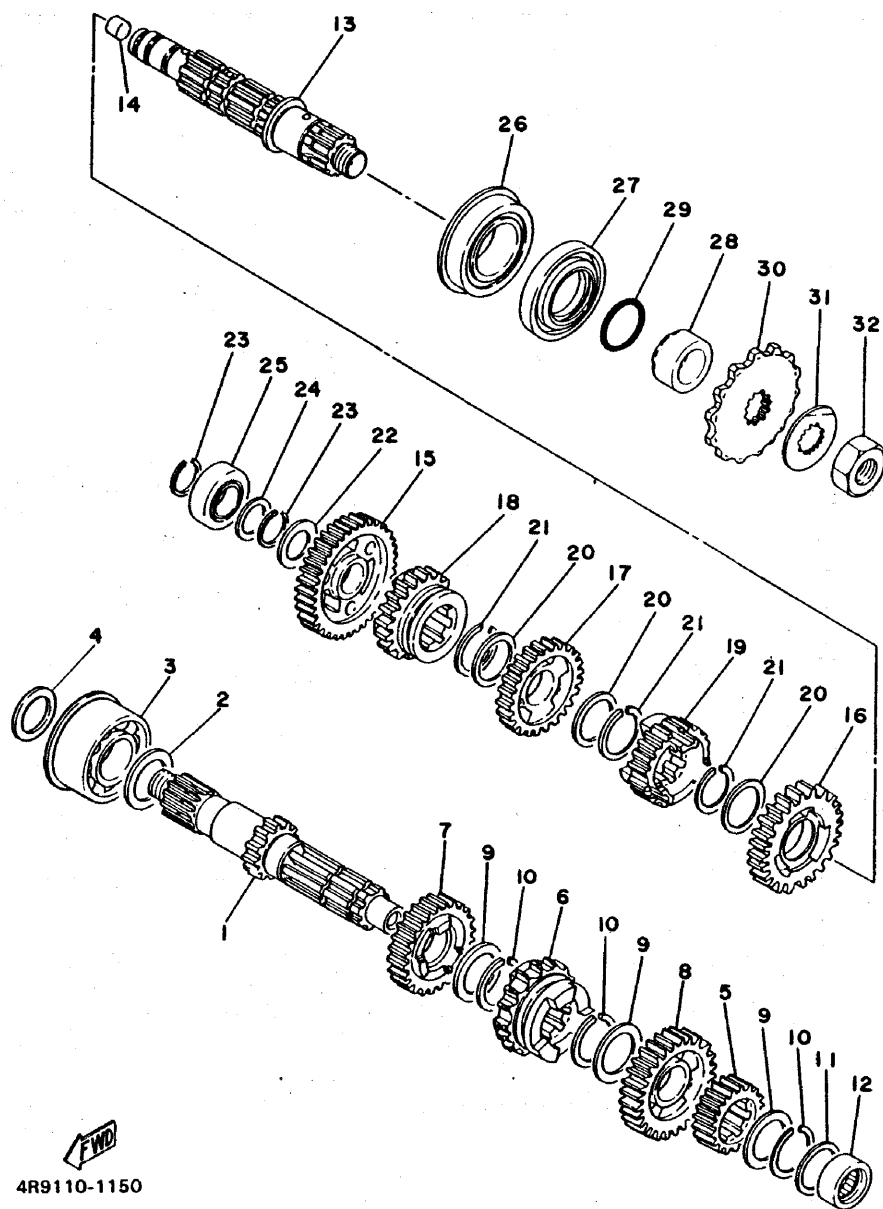

4R9110-1150

FIG. 17 SHIFT CAM-FORK

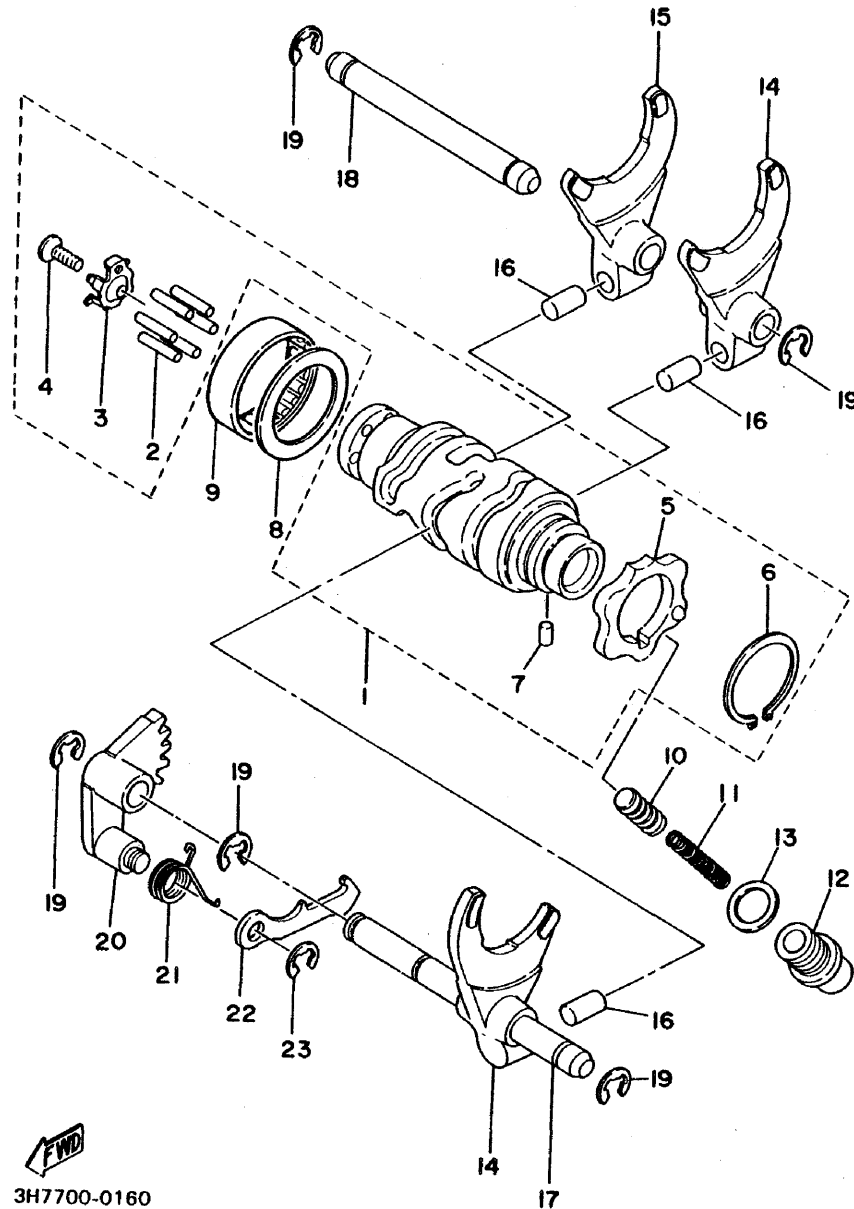

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	2J2-18540-00	SHIFT CAM ASSY	1	
2	93604-18100	.PIN, dowel	6	
3	434-18561-00	.PLATE, side 1	1	
4	98701-05012	.SCREW, flat head	1	
5	2J2-18141-00	.PLATE, stopPer	1	
6	93410-30012	.CIRCLIP	1	
7	93604-08071	.PIN, dowel	1	
8	90201-32673	WASHER, Plate	1	
9	93315-23208	BEARING, cylindrical	1	
10	1J7-18547-00	STOPPER, cam	1	
11	90501-10062	SPRING, comPression	1	
12	90149-14031	SCREW	1	
13	137-15353-00	GASKET, drain	1	
14	364-18511-00	FORK, shift 1	2	
15	363-18511-00	FORK, shift 1	1	
16	90250-08017	PIN, straight	3	
17	363-18531-00	BAR, shift fork Guide 1	1	
18	363-18535-00	BAR, shift fork Guide 2	1	
19	93430-08006	CIRCLIP	5	
20	434-18122-00	LEVER, shift 2	1	
21	90508-08334	SPRING, torsion	1	
22	498-18151-03	LEVER, shift 3	1	
23	93430-07012	CIRCLIP	1	


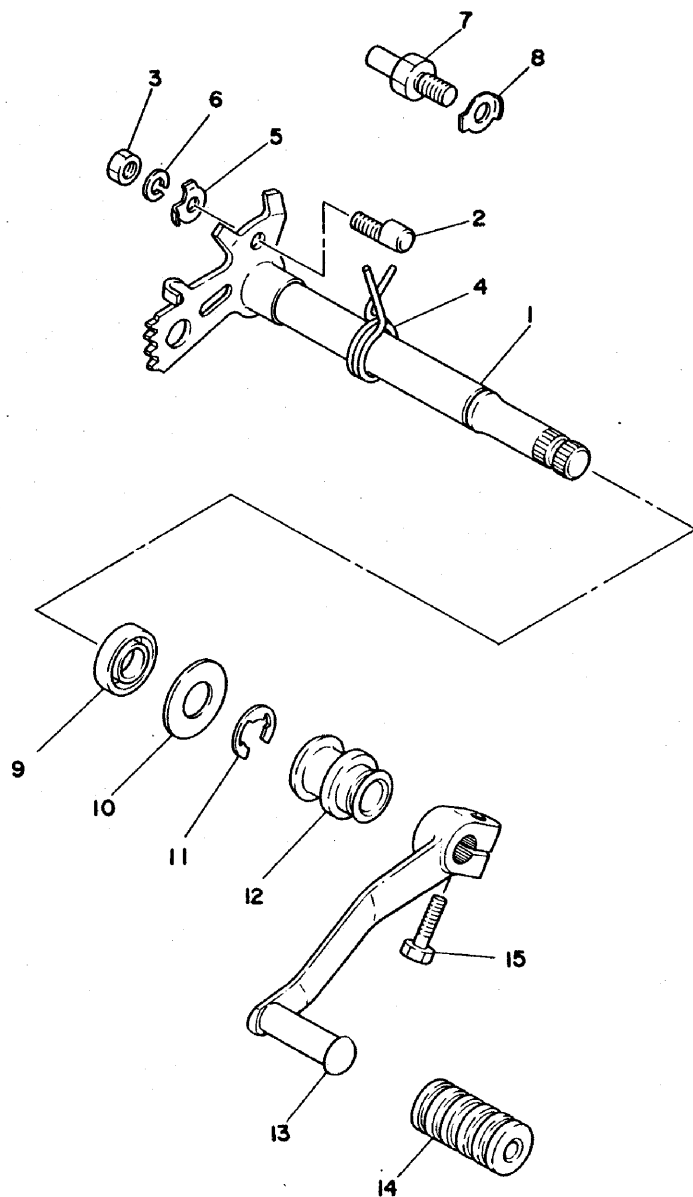


FIG. 18 SHIFT SHAFT.PEDAL

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	2J2-18103-00	SHIFT SHAFT COMP.	1	
2	90149-06017	SCREW	1	
3	95301-06600	NUT	1	
4	90508-32052	SPRING, torsion	1	
5	90215-06016	WASHER, lock	1	
6	92901-06100	WASHER, sPring	1	
7	278-18127-00	STOPPER, screw	1	
8	90215-08115	WASHER, lock	1	
9	93109-14010	OIL SEAL	1	
10	90201-14220	WASHER, Plate	1	
11	93430-12009	CIRCLIP	1	
12	583-18131-00	BOOT, sealing	1	
13	583-18111-01-93	PEDAL, shift	1	chrome-Plated
14	132-18113-01	COVER, shift Pedal	1	
15	97321-06020	BOLT	1	



3H7700-0180

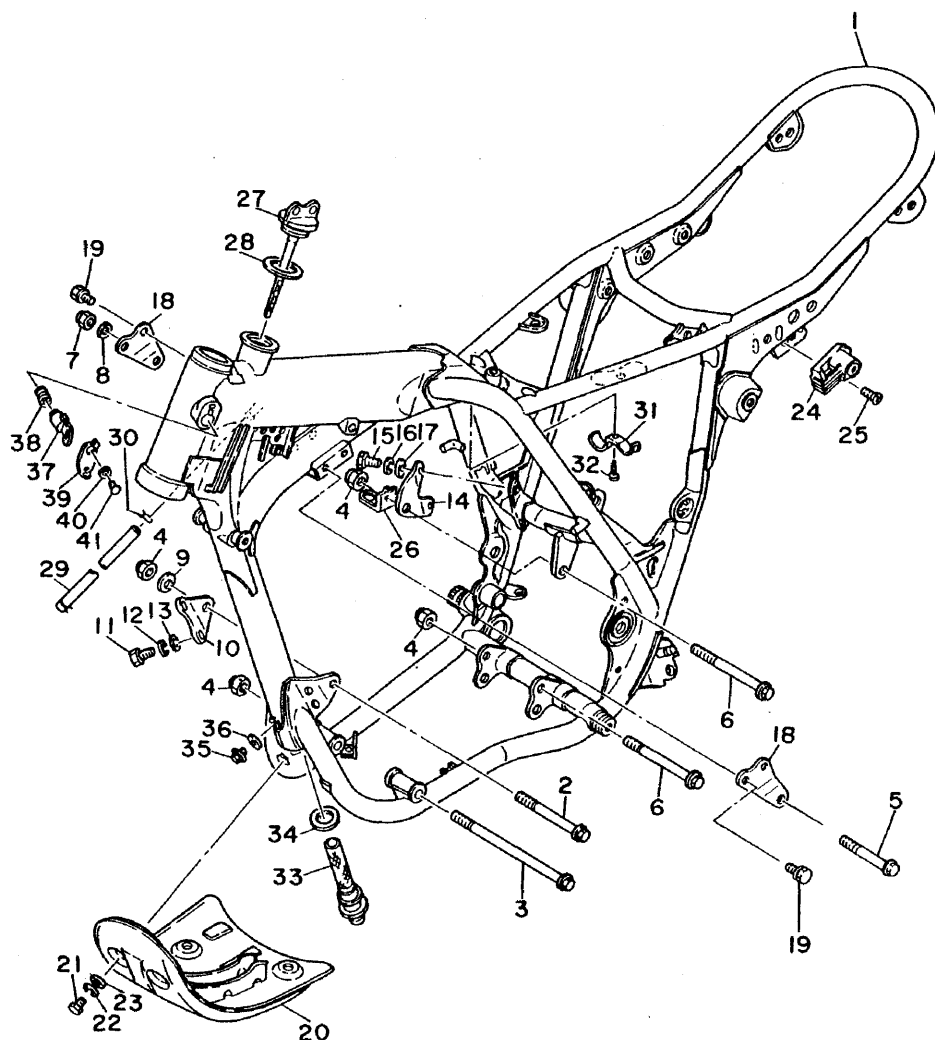

4T9700-1190

FIG. 19 FRAME

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	3H7-21110-00-33	FRAME COMP	1	yamaha black
2	90105-10039	BOLT, washer based	1	
3	90105-10063	BOLT, washer based	1	
4	90185-10035	NUT, self-locking	4	
5	90105-08064	BOLT, washer based	1	
6	90105-10051	BOLT, washer based	2	
7	90185-08054	NUT, self-locking	1	
8	90208-08011	WASHER, conical spring	1	
9	90201-10126	WASHER, Plate	1	
10	583-21316-00	STAY, engine mount	1	
11	97321-08025	BOLT	2	
12	92901-08100	WASHER, spring	2	
13	92901-08600	WASHER, Plate	2	
14	1T1-21317-00	STAY, engine mount rear	1	
15	97321-08025	BOLT	2	
16	92901-08100	WASHER, spring	2	
17	92901-08600	WASHER, Plate	2	
18	583-21315-00	STAY, engine 2	2	
19	90105-08066	BOLT, washer based	4	
20	1T1-21471-01	PROTECTOR, engine	1	
21	97301-06014	BOLT	5	
22	92901-06100	WASHER, spring	5	
23	90201-06557	WASHER, Plate	5	
24	1E6-21308-00	HELMET HANGER ASSY	1	
25	92701-06018	SCREW, flat head	1	
26	1T2-21441-00	BRACKET, stop switch	1	
27	583-21771-00	BODY, cap	1	
28	90430-27124	GASKET	1	


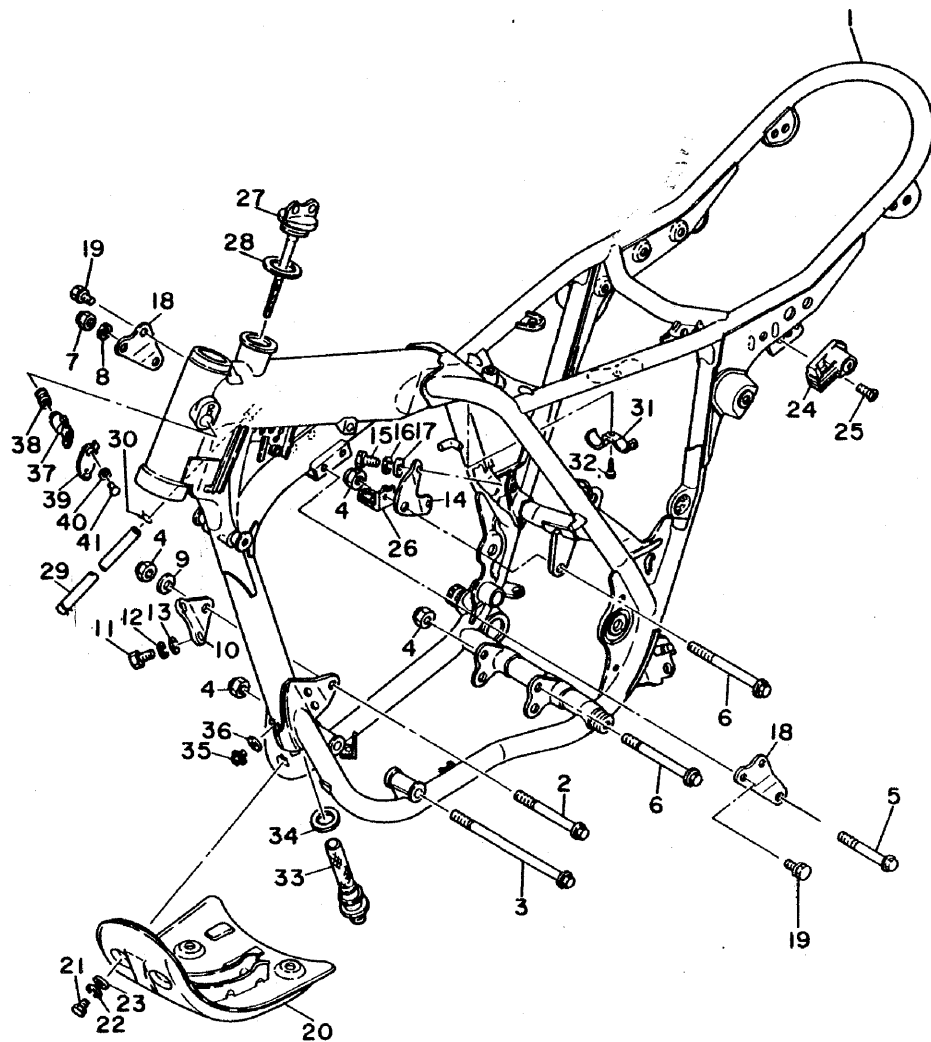


FIG. 19 FRAME

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	90445-11289	HOSE	1	
30	90467-10008	CLIP	2	
31	583-21755-00	CLAMP	1	
32	97701-50110	SCREW, Panhead tapping	1	
33	583-21756-00	NET, filter	1	
34	90430-22123	GASKET	1	
35	95801-08012	BOLT, flange	1	
36	90430-08119	GASKET	1	
37	1E6-23408-00	STEERING LOCK ASSY	1	
38	90502-09024	SPRING, conical	1	
39	584-23484-01	CAP, handle lock	1	
40	90208-04029	WASHER, conical spring	1	
41	90269-04003	RIVET	1	



4T9700-1190

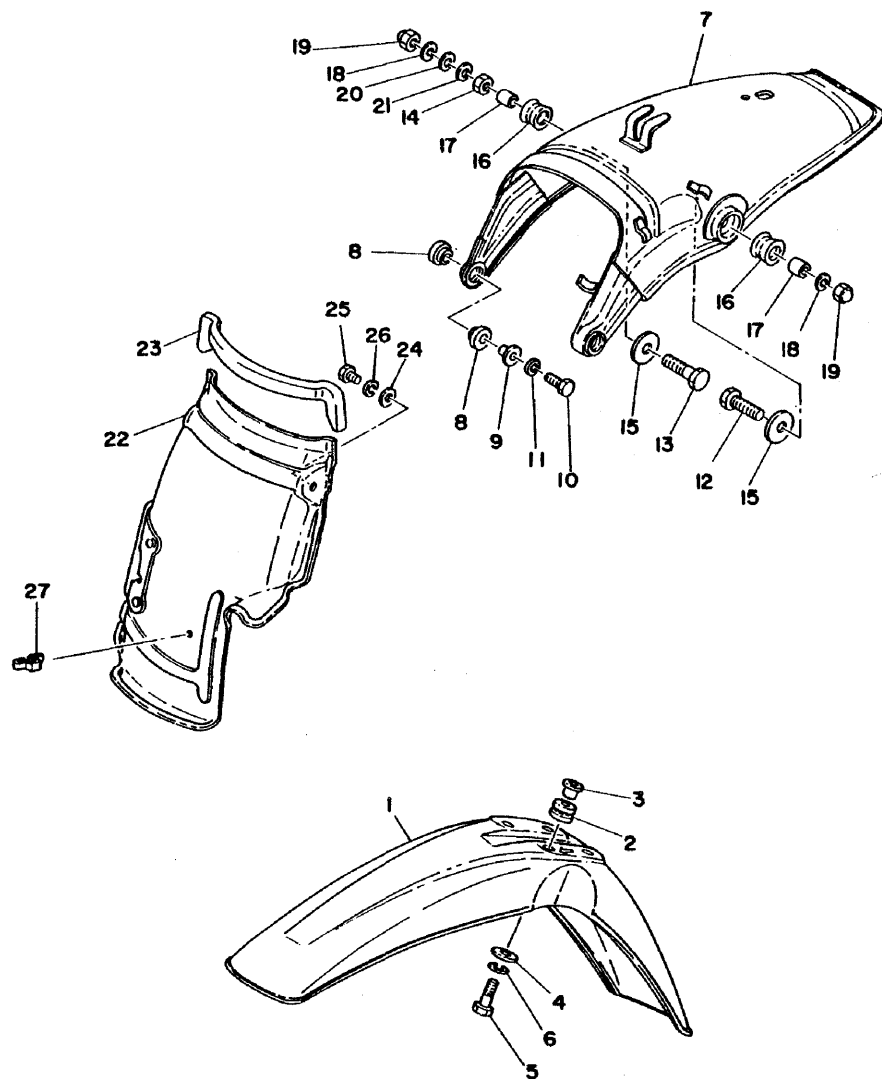


FWD
3H7700-0200

FIG. 20 FRONT FENDER-REAR FENDER

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	3H6-21511-00	FENDER, front	1	clean white
2	90480-14198	GROMMET	4	
3	90387-06388	COLLAR	4	
4	90201-06067	WASHER, Plate	4	
5	97301-06030	BOLT	4	
6	92901-06100	WASHER, sPring	4	
7	1E6-21610-01-36	REAR FENDER COMP.	1	clean white
8	1E6-21638-00	DAMPER 1	4	
9	90387-07391	COLLAR	2	
10	97321-06025	BOLT	2	
11	92901-06100	WASHER, sPring	2	
12	97301-08035	BOLT	1	
13	97321-08045	BOLT	1	
14	95301-08600	NUT	1	
15	90201-08114	WASHER, Plate	2	
16	1E6-21639-00	DAMPER 2	2	
17	90387-08258	COLLAR	2	
18	92901-08100	WASHER, sPring	2	
19	95303-08800	NUT, crown	2	
20	92901-08200	WASHER, Plain	1	
21	90201-08326	WASHER, Plate	1	
22	1T1-21620-00	MUD GUARD COMP.	1	
23	583-21746-00	SEAL, box	1	
24	90201-06067	WASHER, Plate	3	
25	97321-06014	BOLT	3	
26	92901-06100	WASHER, sPring	3	
27	90464-08020	CLAMP	1	

FIG. 21 SIDE COVER. TOOL

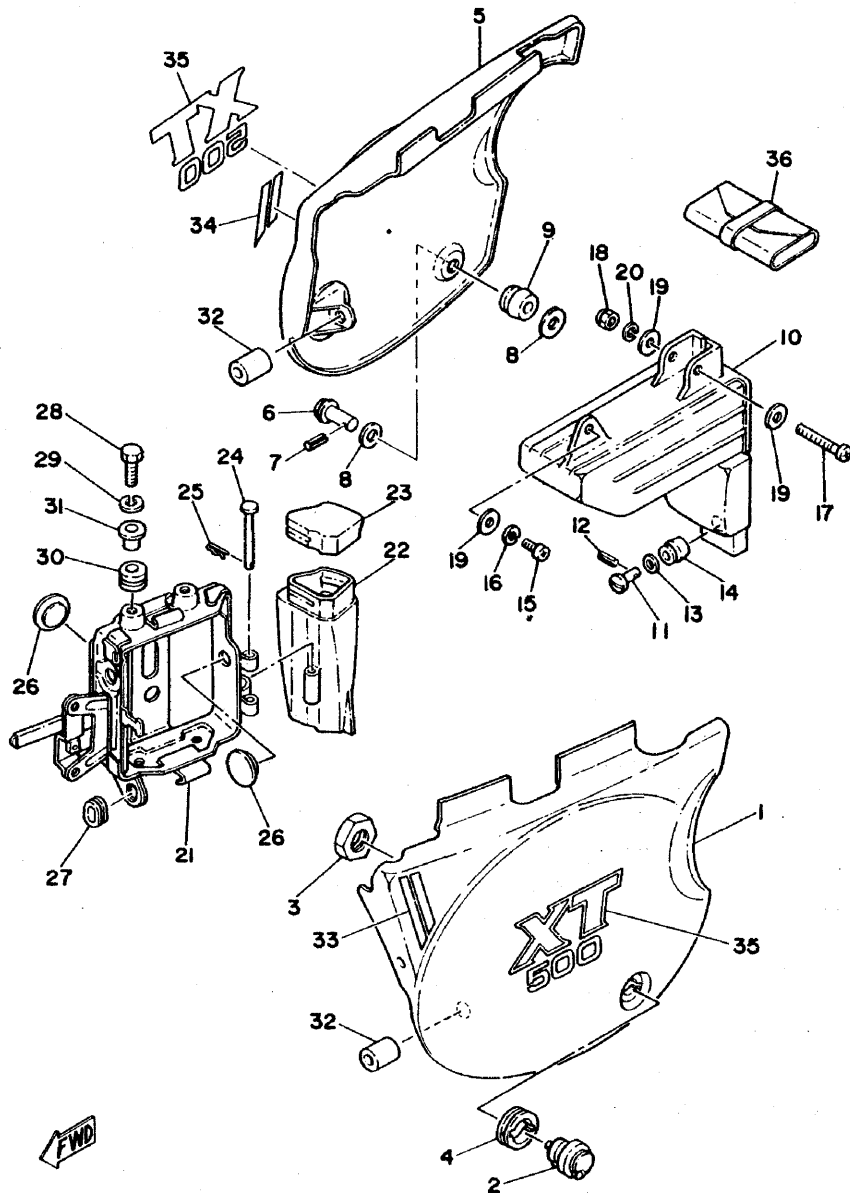

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	4T9-21711-00-20	COVER, side 1	1	crystal silver
2	1E6-21708-00	SIDE COVER LOCK ASSY	1	
3	90170-22187	NUT	1	
4	90480-24186	GROMMET	1	
5	4R9-21721-00-20	COVER, side 2	1	crystal silver
6	583-21714-00	KNOB, side cover 1	1	
7	91609-25018	PIN, sPring	1	
8	90201-06063	WASHER, Plate	2	
9	583-21747-00	DAMPER	1	
10	1T2-21171-00	BOX, tool	1	
11	583-21714-00	KNOB, side cover 1	1	
12	91609-25018	PIN, sPring	1	
13	90201-06063	WASHER, Plate	1	
14	583-21747-00	DAMPER	1	
15	92506-06014	SCREW, Pan head	1	
16	92906-06100	WASHER, sPring	1	
17	92506-06045	SCREW, Pan head	1	
18	95301-06600	NUT	1	
19	90201-06067	WASHER, Plate	3	
20	92901-06100	WASHER, sPring	1	
21	2H0-21240-00	BOX COMP.	1	
22	1E6-21245-00	BOX	1	
23	1E6-21399-00	CAP, battery box	1	
24	91701-05055	PIN, clevis	1	
25	90468-10050	CLIP	1	
26	371-82121-00	PAD, battery	4	
27	90480-01176	GROMMET	1	
28	97301-06025	BOLT	2	

4T9171-1210


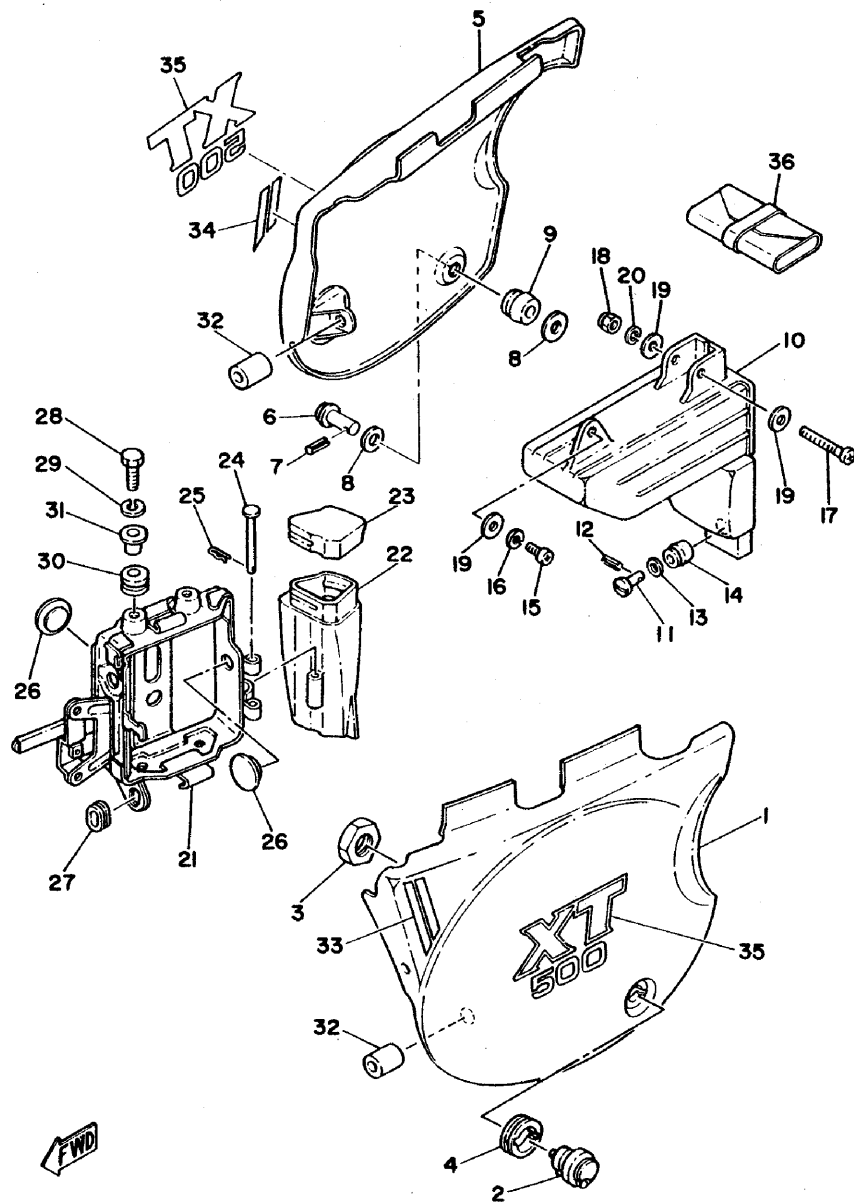


FIG. 21 SIDE COVER. TOOL

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	92901-06100	WASHER, sPring	2	
30	90480-14102	GROMMET	2	
31	90387-07391	COLLAR	2	
32	90445-11418	HOSE	2	
33	4R9-21783-00	EMBLEM 3	1	
34	4R9-21784-00	EMBLEM 4	1	
35	4R9-21785-00	EMBLEM 5	2	
36	1E6-28100-10	TOOL KIT	1	

FIG. 22 REAR ARM SUSPENSION

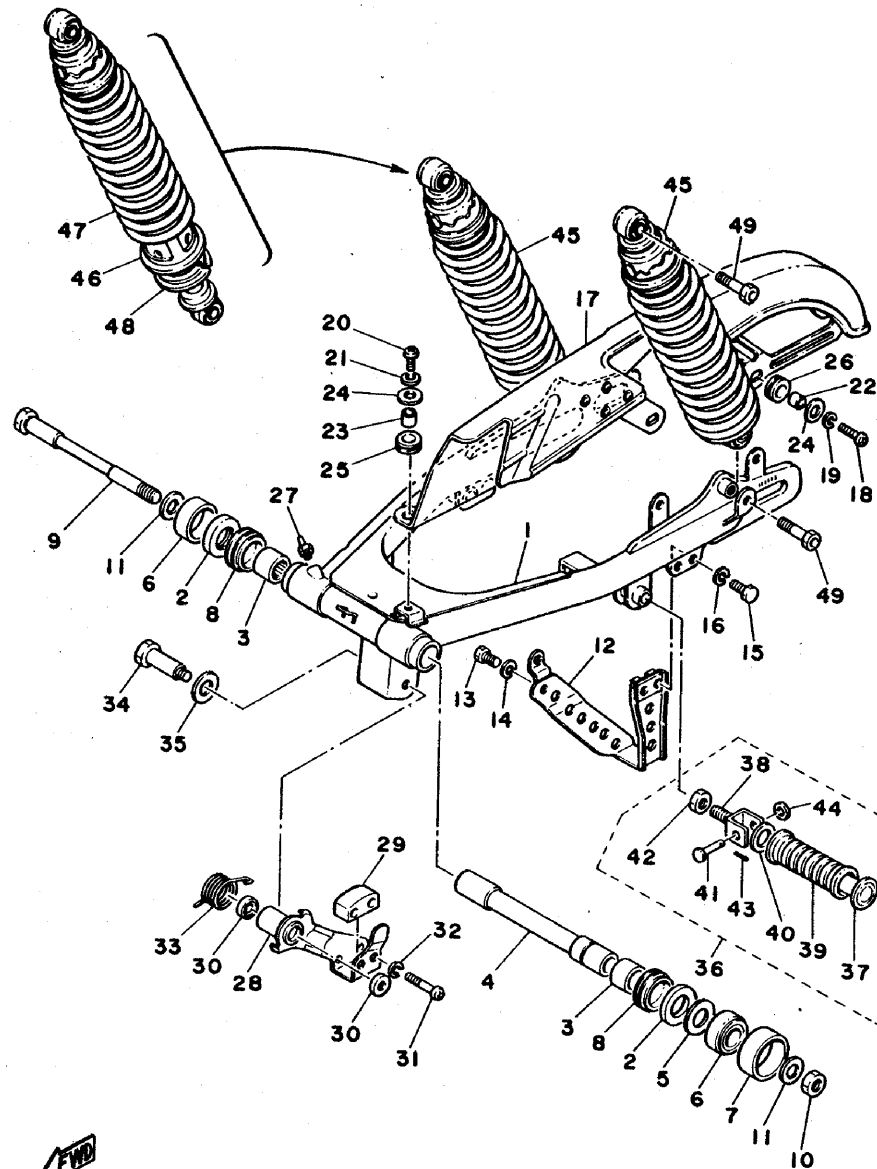

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	3H7-22110-00-33	REAR ARM COMP.	1	yamaha black
2	93342-22205	BEARING	2	
3	93317-22208	BEARING, cylindrical	2	
4	483-22124-00	BUSH 2	1	
5	648-45533-00-03	SHIM (0.3T)	1	UN
6	2K8-22129-00	COVER, thrust 2	2	
7	431-22151-03	SEAL, guard	1	
8	93108-35004	OIL SEAL	2	
9	583-22141-01	SHAFT, Pivot	1	
10	95601-16100	NUT, u	1	
11	90208-16019	WASHER, conical sPring	2	
12	1U6-22318-00-33	GUARD, chain	1	yamaha black
13	97301-08016	BOLT	1	
14	92901-08100	WASHER, sPring	1	
15	97301-06016	BOLT	2	
16	92901-06100	WASHER, sPring	2	
17	1U6-22311-00-33	CASE, chain	1	yamaha black
18	98501-05016	SCREW, Pan head	2	
19	92901-05100	WASHER, sPring	2	
20	98501-05018	SCREW, Pan head	2	
21	92901-05100	WASHER, sPring	2	
22	90560-05001	SPACER	2	
23	90387-05009	COLLAR	2	
24	90201-06407	WASHER, Plate	4	
25	90480-12188	GROMMET	2	
26	90480-08216	GROMMET	2	
27	93700-06004	NIPPLE, Grease	1	
28	2Y0-22179-00	ARM, tensioner	1	



4E5300-0220


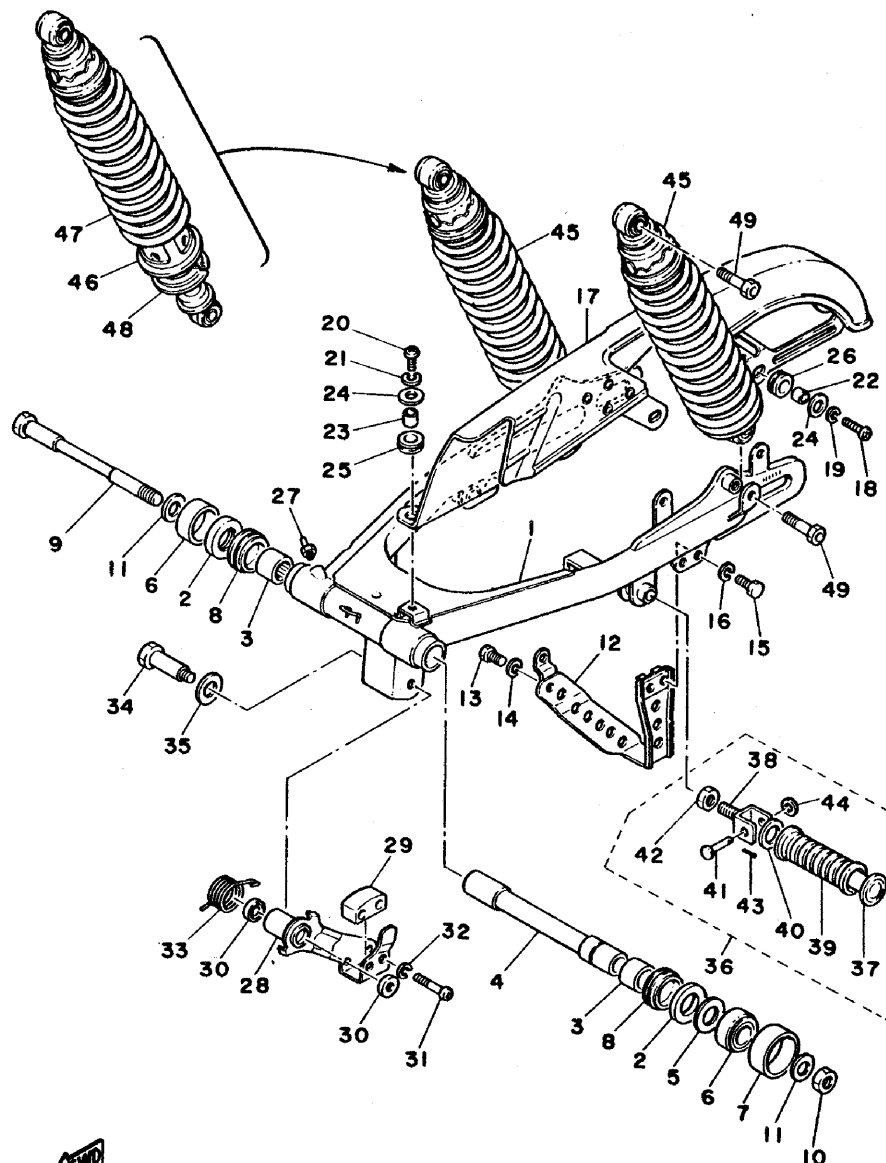


FIG. 22 REAR ARM SUSPENSION


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	2N0-22178-00	TENSIONER	1	
30	93104-14044	OIL SEAL	2	
31	98501-05040	SCREW, Pan head	2	
32	92901-05100	WASHER, sPring	2	
33	90508-35387	SPRING, torsion	1	
34	90109-10533	BOLT	1	
35	90201-14577	WASHER, Plate	1	
36	1E6-27430-00	REAR FOOTREST ASSY 1	2	
37	465-27431-00	•FOOTREST, rear 1	1	
38	120-27432-02	•BRACKET 1	1	
39	120-27433-00	•COVER, rear footrest	1	
40	90201-20279	•WASHER, Plate	1	
41	90240-06052	•PIN, clevis	1	
42	95301-12700	•NUT	1	
43	91401-20015	•PIN, cotter	1	
44	90201-06055	•WASHER, Plate	1	
45	3H7-22210-00	SHOCK ABSORBER ASSY, rear	2	
46	1T1-22211-00	•GUIDE, sPring	1	
47	1T1-22212-00	•SPRING	1	
48	583-22214-00	•SEAT, sPring	1	
49	90109-10420	BOLT	4	

FIG. 23 STEERING

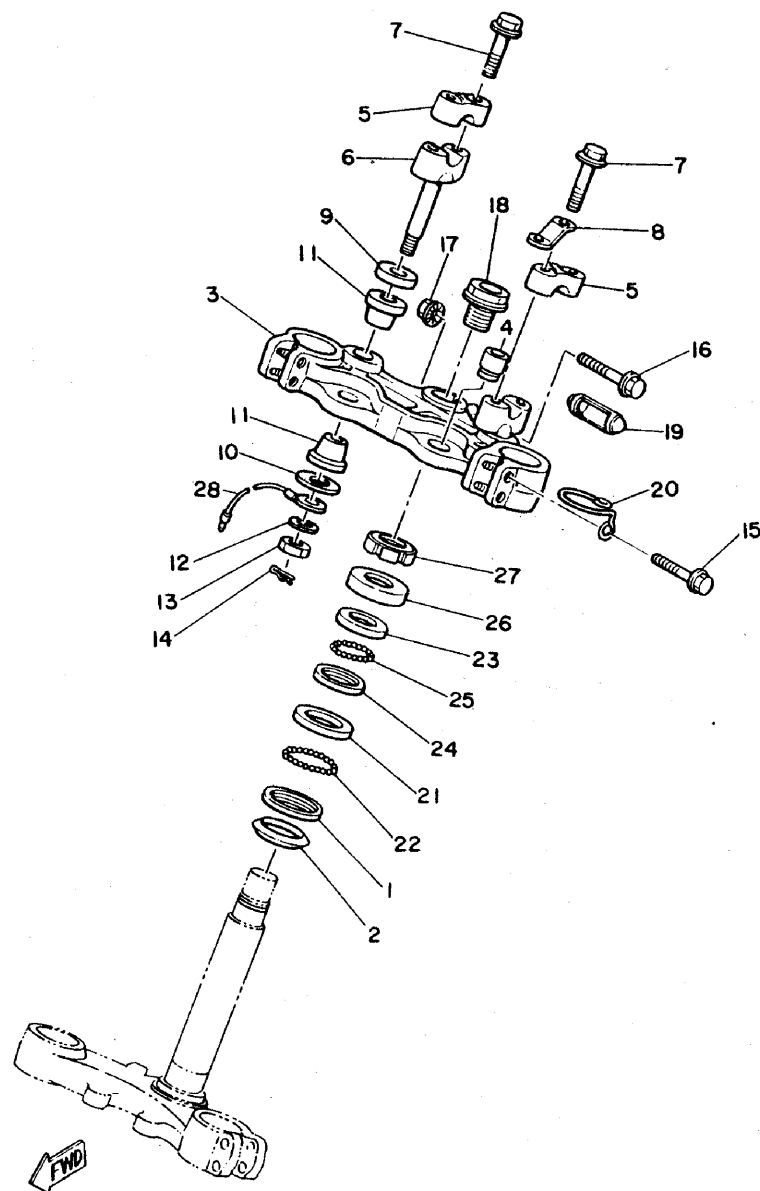

4R9110-1230

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	156-23411-00	RACE, ball 1	1	
2	164-23462-00	SEAL, steering	1	
3	3H7-23435-00-98	CROWN, handle	1	low gloss black
4	1E6-23445-00	DAMPER	2	
5	1E6-23441-00-98	HOLDER, handle upper	2	low gloss black
6	1E6-23442-00	HOLDER, handle lower	2	
7	90105-08091	BOLT, washer based	4	
8	1T2-23389-00	GUIDE, cable	1	
9	90201-12195	WASHER, Plate	2	
10	90201-10322	WASHER, Plate	2	
11	1E6-23434-00	HOLDER, damper	4	
12	92901-10100	WASHER, spring	2	
13	95301-10700	NUT	2	
14	90468-12006	CLIP	2	
15	95821-08040	BOLT, flange	4	
16	95821-08055	BOLT, flange	1	
17	95701-08100	NUT, flange	1	
18	90105-14102	BOLT, washer based	1	
19	583-23469-00	CAP, bolt	1	
20	1E6-23317-00	HOLDER, cable	1	
21	156-23412-00	RACE, ball 2	1	
22	93501-04011	BALL	19	
23	122-23411-00	RACE, ball 1	1	
24	122-23412-00	RACE, ball 2	1	
25	93503-16010	BALL	22	
26	2Y0-23416-00	COVER, ball race 2	1	
27	90179-25033	NUT	1	
28	584-82519-00	WIRE, earth lead	1	

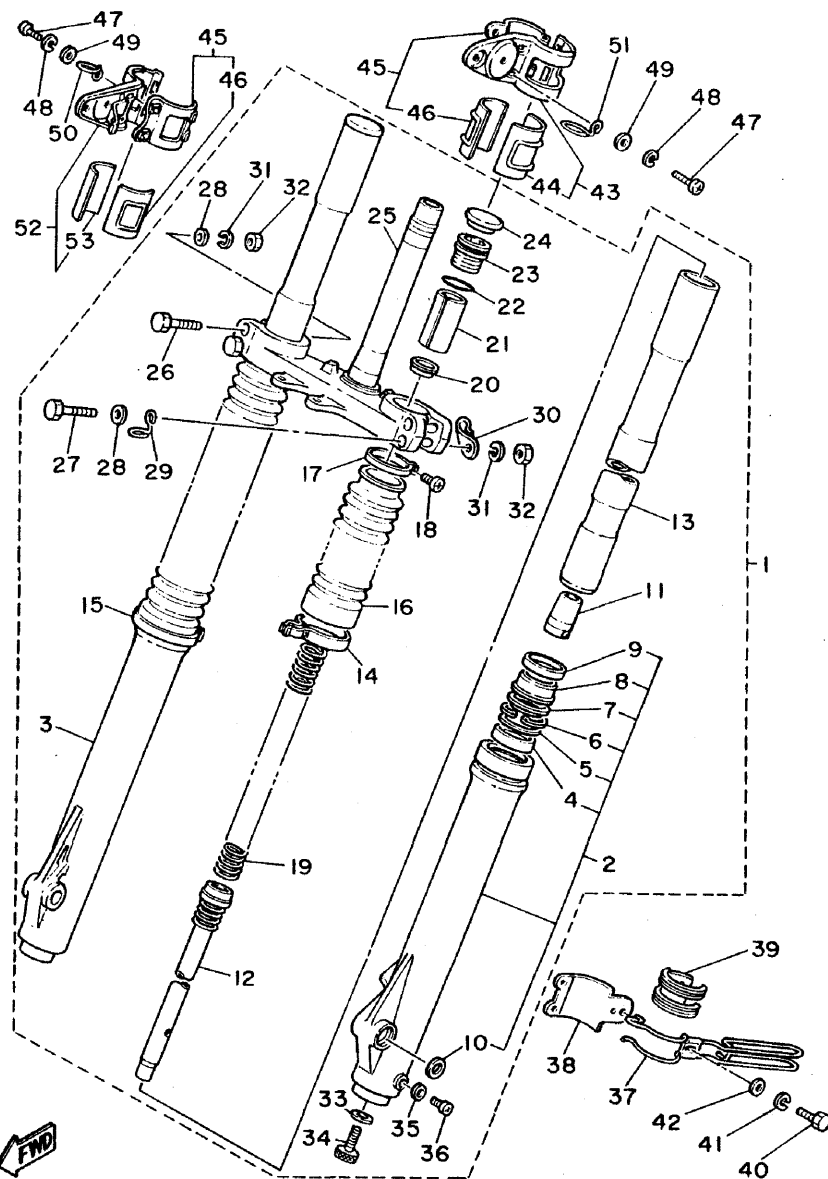


5R1600-1240

FIG. 24 FRONT FORK


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	3H7-23101-00	FRONT FORK ASSY	1	
2	2W6-23126-00	•TUBE, outer 1	1	
3	2W6-23136-00	•TUBE, outer 2	1	
4	1K7-23145-00	••OIL SEAL	2	
5	509-23146-L0	••WASHER, oil seal	2	
6	1W1-23156-L0	••CLIP, oil seal	2	
7	1W1-23153-L0	••RING, snap	2	
8	1G8-23144-L1	••SEAL, dust	2	
9	1W1-23148-L0	••COVER, dust seal	2	
10	1W1-23168-L0	••WASHER, outer tube	2	
11	2Y0-23173-00	•SPINDLE, taPer	2	
12	2Y0-23170-00	•CYLINDER COMP., front fork	2	
13	3H7-23124-00	•TUBE, inner 1	2	
14	1W1-23318-L0	•HOLDER, cable 1	1	
15	509-23489-L0	•BAND	1	
16	2N6-23191-00	•BOOT	2	
17	341-92090-60	•BAND, boot	2	
18	509-23194-L0	•SCREW, boot band	2	
19	3H7-23141-00	•SPRING, front fork	2	
20	583-23142-00	•SEAT, sPrin& upper	2	
21	1W6-23118-10	•SPACER	2	
22	240-23114-00	•GASKET	2	
23	1U6-23111-M1	•BOLT, cap	2	
24	1U6-23168-M0	•CAP, front fork	2	
25	3H7-23340-00-33	•UNDER BRACKET COMP.	1	yamaha black
26	90109-08397	•BOLT	3	
27	90101-08340	•BOLT	1	
28	90201-08544	•WASHER, Plate	5	

FIG. 24 FRONT FORK

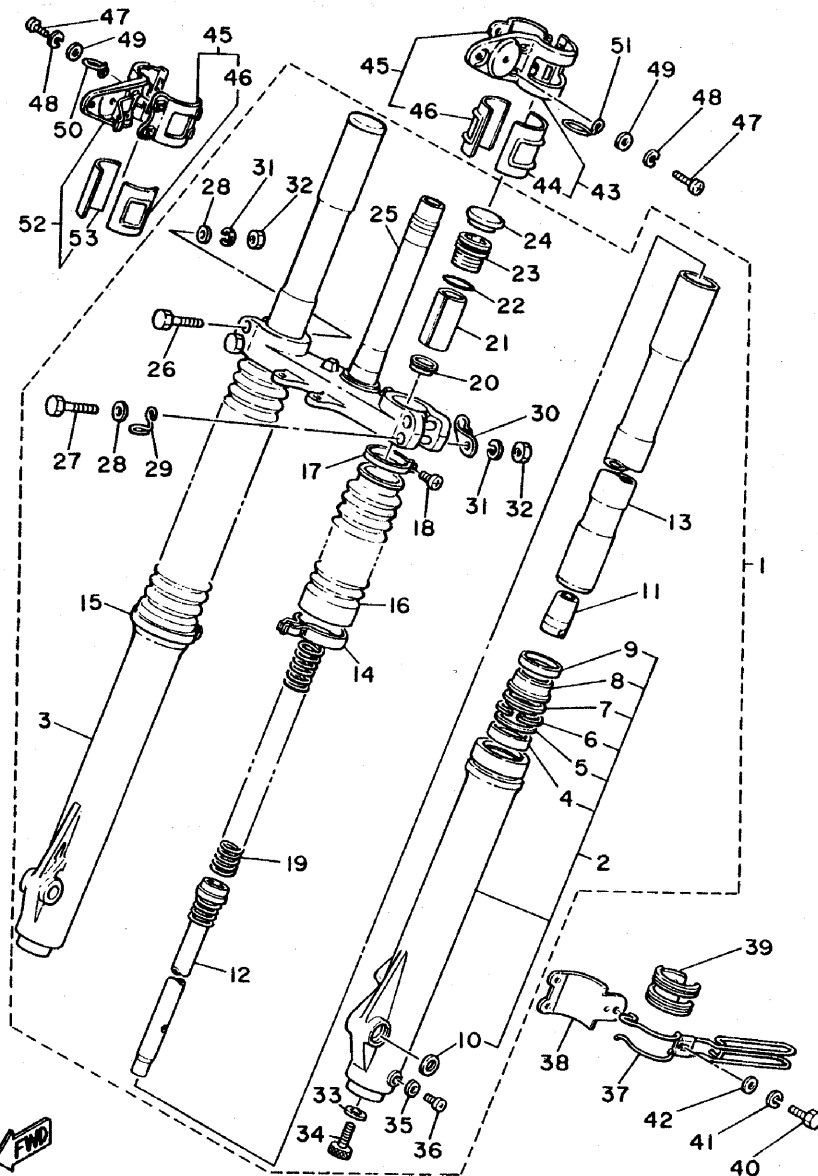

5R1600-1240

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	1E6-23317-10	•HOLDER, cable	1	
30	90462-08024	•CLAMP	1	
31	92901-08100	•WASHER, sPring	4	
32	95311-08600	•NUT	4	
33	509-23158-L0	•GASKET	2	
34	278-23181-50	•BOLT, hexagon socket head	2	
35	122-23129-00	•GASKET, drain Plug	2	
36	122-23119-01	•PLUG, drain	2	
37	1T2-23318-00	HOLDER, cable 1	1	
38	1E6-23319-00	HOLDER, cable 2	1	
39	559-21541-00	DAMPER 1	1	
40	97301-06020	BOLT	1	
41	92901-06100	WASHER, sPring	1	
42	92901-06600	WASHER, Plate	1	
43	3H7-23121-00-33	COVER, upper 1	1	yamaha black
44	1N5-23138-00	•GASKET, upper cover 2	1	
45	3H7-23131-00-33	COVER, upper 2	2	yamaha black
46	1N5-23137-00	•GASKET, upper cover 1	1	
47	92501-06020	SCREW, Pan head	4	
48	92901-06100	WASHER, sPring	4	
49	92901-06600	WASHER, Plate	4	
50	1E6-23389-00	GUIDE, cable	1	
51	90468-23097	CLIP	1	
52	3H7-23122-00-33	COVER, outer 1	1	yamaha black
53	1N5-23138-00	•GASKET, upper cover 2	1	

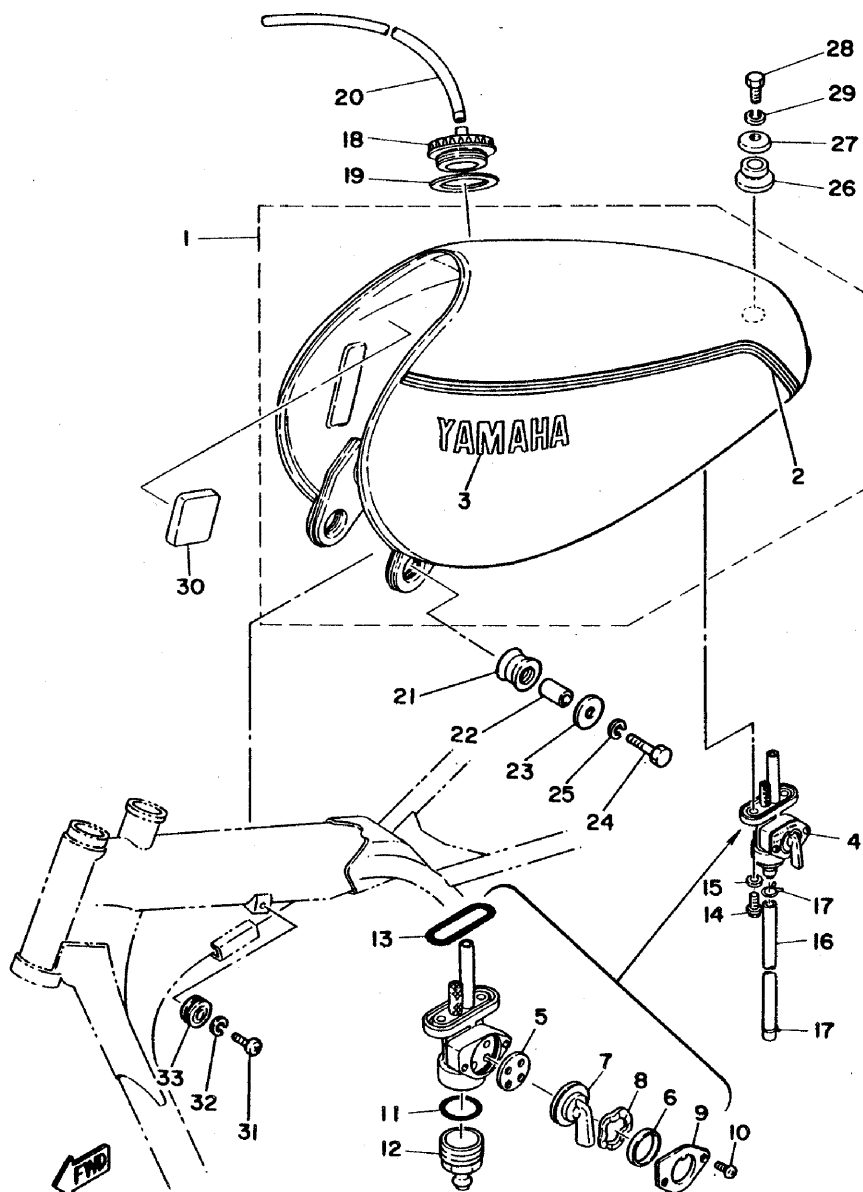


4R9110-1240

FIG. 25 FUEL TANK

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	3H7-24110-00-03	FUEL TANK COMP.	1	crystal silver
2	4R9-24240-00	.GRAPHIC SET	1	
3	4R9-24161-00	.EMBLEM 1	2	
4	498-24500-01	FUEL COCK ASSY, J	1	
5	498-24523-00	.VALVE	1	
6	498-24528-00	.WASHER	1	
7	498-24524-01	.LEVER, cock	1	
8	90206-18025	.WASHER, wave	1	
9	498-24525-00	.PLATE, lever fitting	1	
10	214-24535-00	.SCREW, lever fitting	2	
11	498-24522-00	.GASKET	1	
12	498-24521-00	.CUP, filter	1	
13	214-24512-00	.GASKET	1	
14	90149-06008	SCREW	2	
15	90202-06010	WASHER, Plate	2	
16	90445-11288	HOSE	1	
17	90467-10008	CLIP	2	
18	2A6-24611-00	BODY, caP	1	
19	1W1-24612-00	GASKET, caP	1	
20	90445-09119	HOSE	1	
21	90480-22177	GROMMET	2	
22	90387-09506	COLLAR	2	
23	90201-06073	WASHER, Plate	2	
24	97321-06030	BOLT	2	
25	92901-06100	WASHER, sPring	2	
26	90480-22054	GROMMET	1	
27	90209-08097	WASHER	1	
28	97301-08016	BOLT	1	

FIG. 25 FUEL TANK

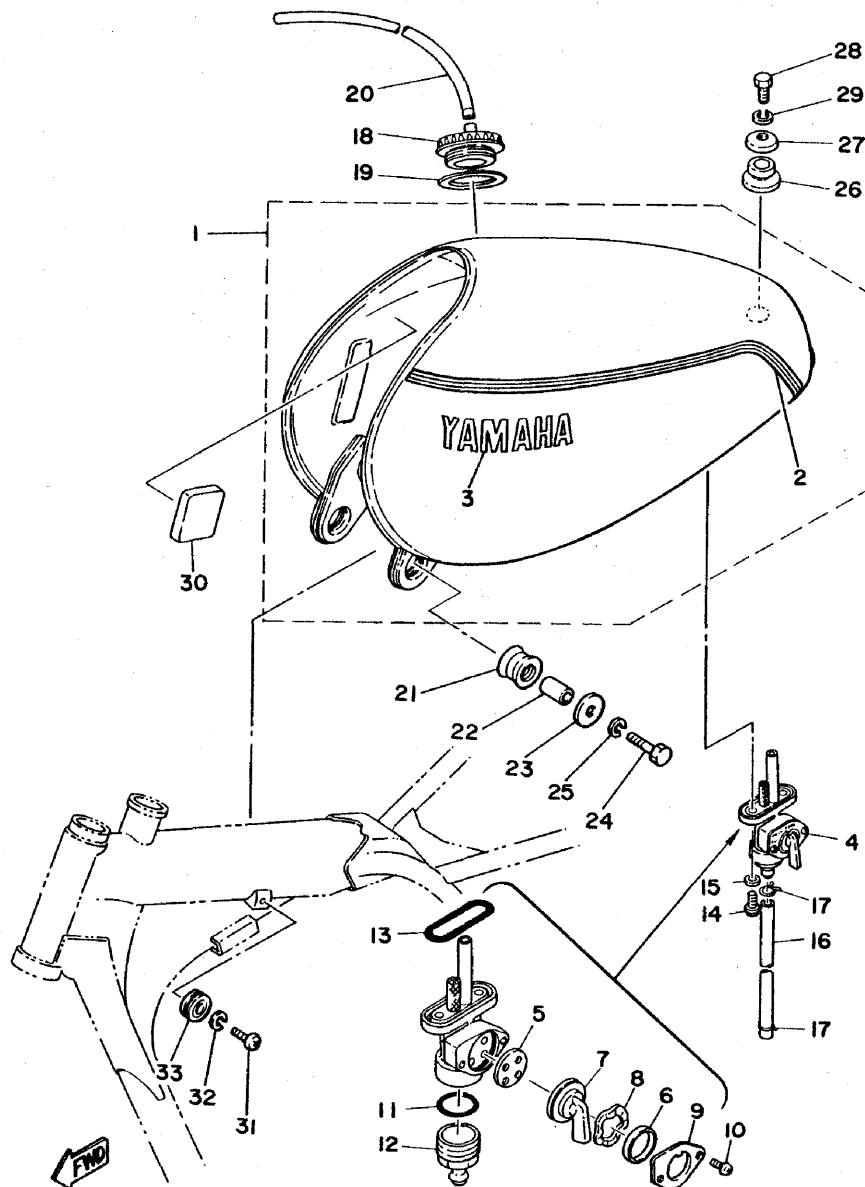

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	92901-08100	WASHER, sPring	1	
30	583-24181-00	DAMPER, locating 1	2	
31	98501-05012	SCREW, Pan head	2	
32	92901-05100	WASHER, sPring	2	
33	583-24182-00	DAMPER, locating 2	2	

4R9110-1240


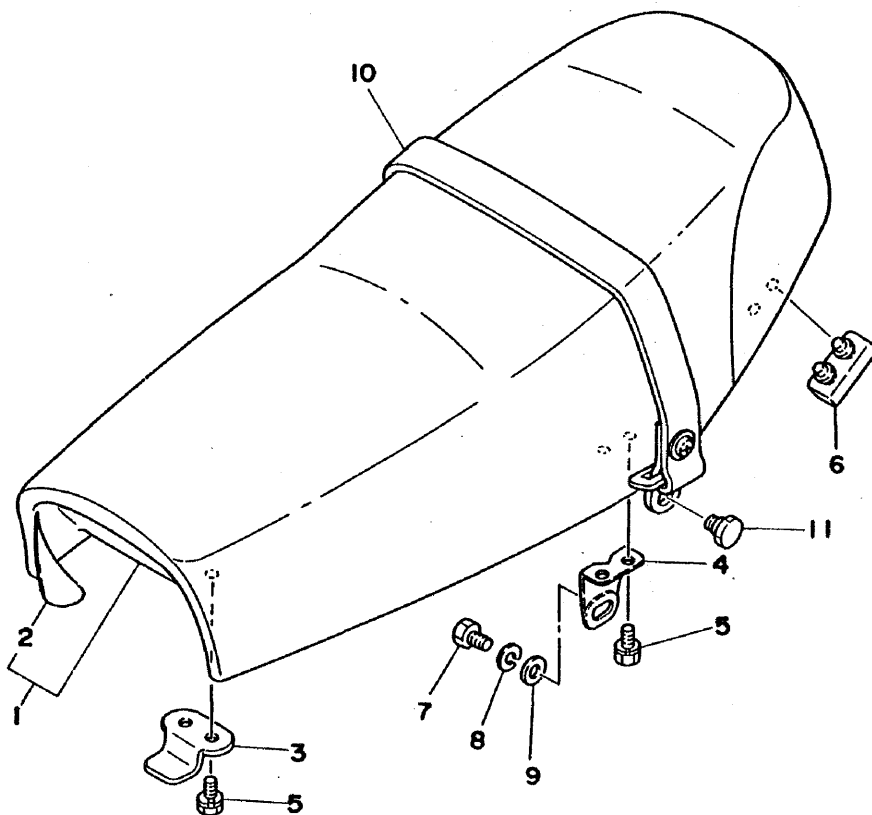


FIG. 26 SEAT

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	3H7-W2472-00	DOUBLE SEAT ASSY	1	
2	3H7-24731-00	COVER, double seat	1	
3	2Y0-24748-00	BRACKET, seat	1	
4	1T1-24738-00	BRACKET, seat	2	
5	90101-06304	BOLT	6	
6	583-24724-00	DAMPER, seat	2	
7	97321-08016	BOLT	2	
8	92901-08100	WASHER, sPring	2	
9	92901-08600	WASHER, Plate	2	
10	3H7-24720-00	SEAT BAND ASSY	1	
11	90109-08444	BOLT	2	




3H7700-0260

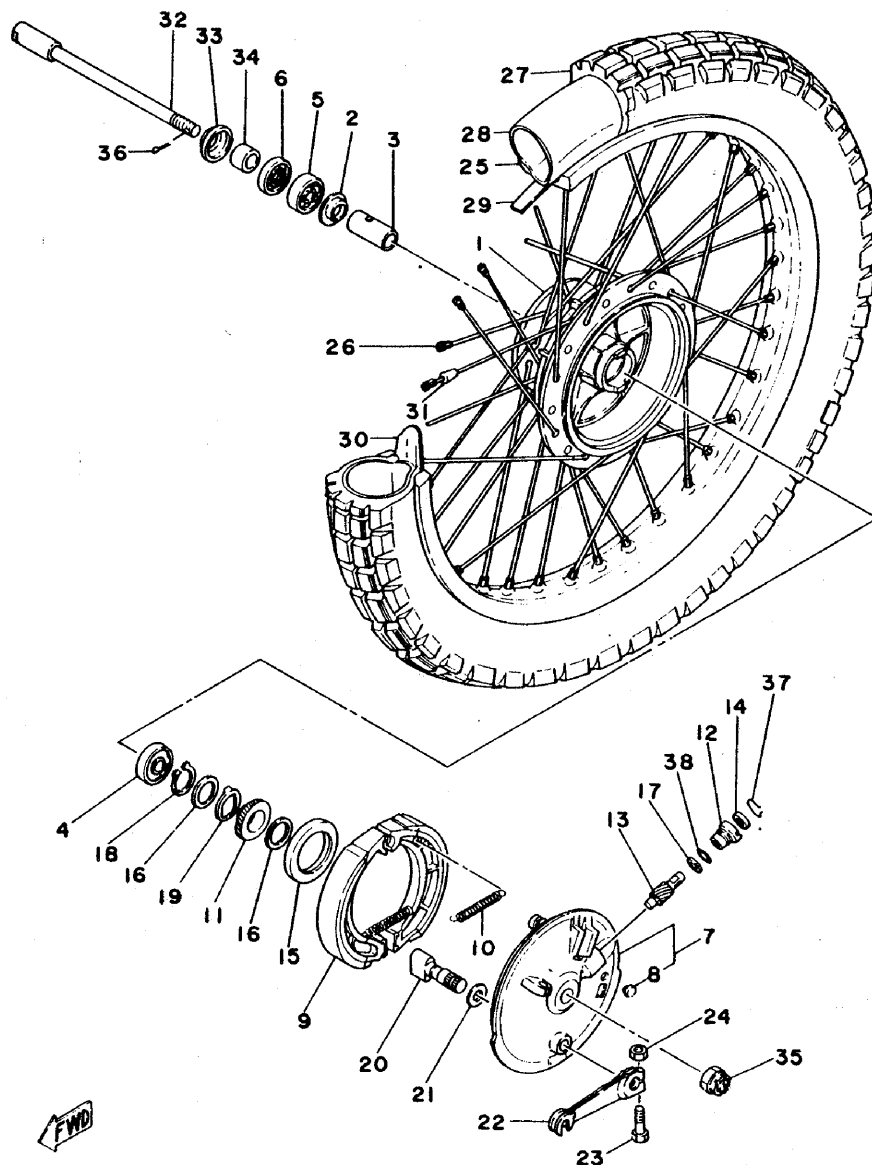

4R9110-1260

FIG. 27 FRONT WHEEL

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	1E6-25111-00-98	HUB, front	1	low gloss black
2	183-25315-00	FLANGE, sPacer	1	
3	214-25117-00	SPACER, bearing	1	
4	93306-20203	BEARING (B6202RS)	1	
5	93306-20205	BEARING (B6202)	1	
6	93102-20009	OIL SEAL	1	
7	2N6-25016-10-98	BRAKE SHOE PLATE ASSY	1	low gloss black
8	90480-10068	GROMMET	1	
9	431-25330-02	BRAKE SHOE COMP.	2	
10	90507-20002	SPRING, tension	2	
11	308-25135-00	GEAR, drive (10T)	1	
12	109-25136-00	BUSH	1	
13	308-25138-00	GEAR, meter (10T)	1	
14	93104-07003	OIL SEAL	1	
15	93105-50010	OIL SEAL	1	
16	90201-22283	WASHER, Plate	2	
17	90201-07076	WASHER, Plate	1	
18	93410-22014	CIRCLIP	1	
19	214-25149-01	CLUTCH, meter	1	
20	1E6-25151-00	CAMSHAFT	1	
21	148-25353-00	SHIM, camshaft	1	
22	2N6-25155-00	LEVER, camshaft	1	
23	90101-06278	BOLT	1	
24	95301-06600	NUT	1	
25	94416-21198	RIM (1.60-21)	1	
26	1E6-25104-01	SPOKE SET, front	1	
27	94130-21205	TIRE (3.00-21)	1	
28	94227-21123	TUBE (2.75-21)	1	bs

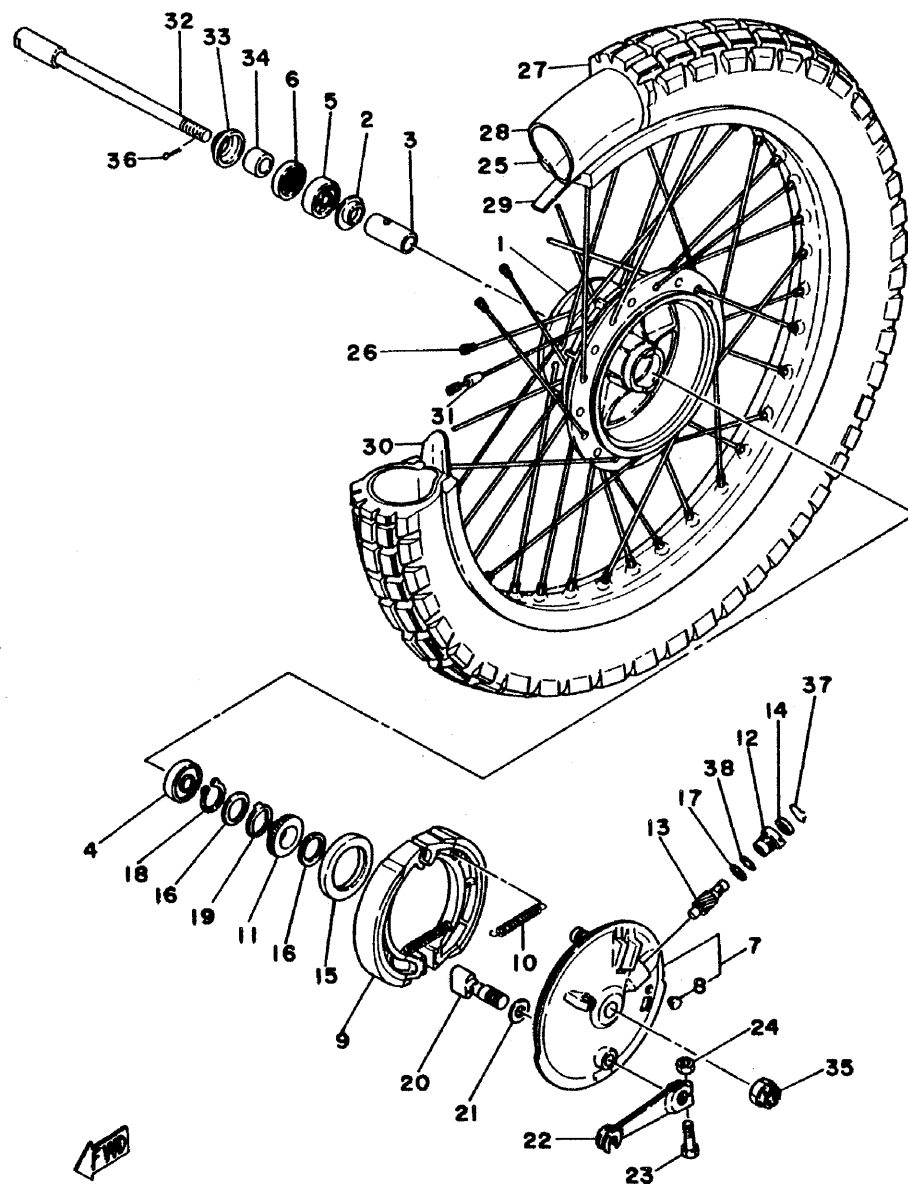


4R9110-1260

FIG. 27 FRONT WHEEL


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	94330-21084	BAND, rim (3.00-21)	1	bs
30	1T1-25194-00	SPACER, bead	1	
31	156-25398-00	BALANCER, wheel	1	UN
32	1W1-25181-01	AXLE, wheel	1	
33	322-25118-00	COVER, hub dust	1	
34	90387-15720	COLLAR	1	
35	90171-14020	NUT, castle	1	
36	91401-30030	PIN, cotter	1	
37	102-25137-00	RING, stop	1	
38	93210-14104	O-RING	1	

FIG. 28 REAR WHEEL

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	1E6-25311-00-98	HUB, rear	1	low gloss black
2	275-25317-00	SPACER, bearing	1	
3	93306-20316	BEARING (B6203)	1	
4	93306-20310	BEARING (B6203RS)	2	
5	93102-25030	OIL SEAL	1	
6	146-25315-00	FLANGE, spacer	1	
7	1E6-25026-11-98	BRAKE SHOE PLATE ASSY	1	low gloss black
8	90480-10068	GROMMET	1	
9	214-25130-00	BRAKE SHOE COMP.	2	
10	90507-20002	SPRING, tension	2	
11	3H7-25355-00	LEVER, camshaft	1	
12	214-25351-01	CAMSHAFT	1	
13	148-25353-00	SHIM, camshaft	1	
14	148-25359-00	SEAL, camshaft	1	
15	90101-06278	BOLT	1	
16	95301-06600	NUT	1	
17	1E6-25366-00-98	CLUTCH, hub	1	low gloss black
18	2H0-25444-20	SPROCKET, driven (44T)	1	UR STD
	583-25440-10	SPROCKET, driven (40T)	1	UR
	583-25442-10	SPROCKET, driven (42T)	1	UR
	583-25443-10	SPROCKET, driven (43T)	1	UR
	583-25446-10	SPROCKET, driven (46T)	1	UR
19	90116-08218	BOLT, stud	6	
20	583-25412-00	WASHER	3	
21	90170-08193	NUT	6	
22	93700-06004	NIPPLE, grease	1	
23	1E6-25364-00	DAMPER	6	
24	93210-52312	O-RING	2	

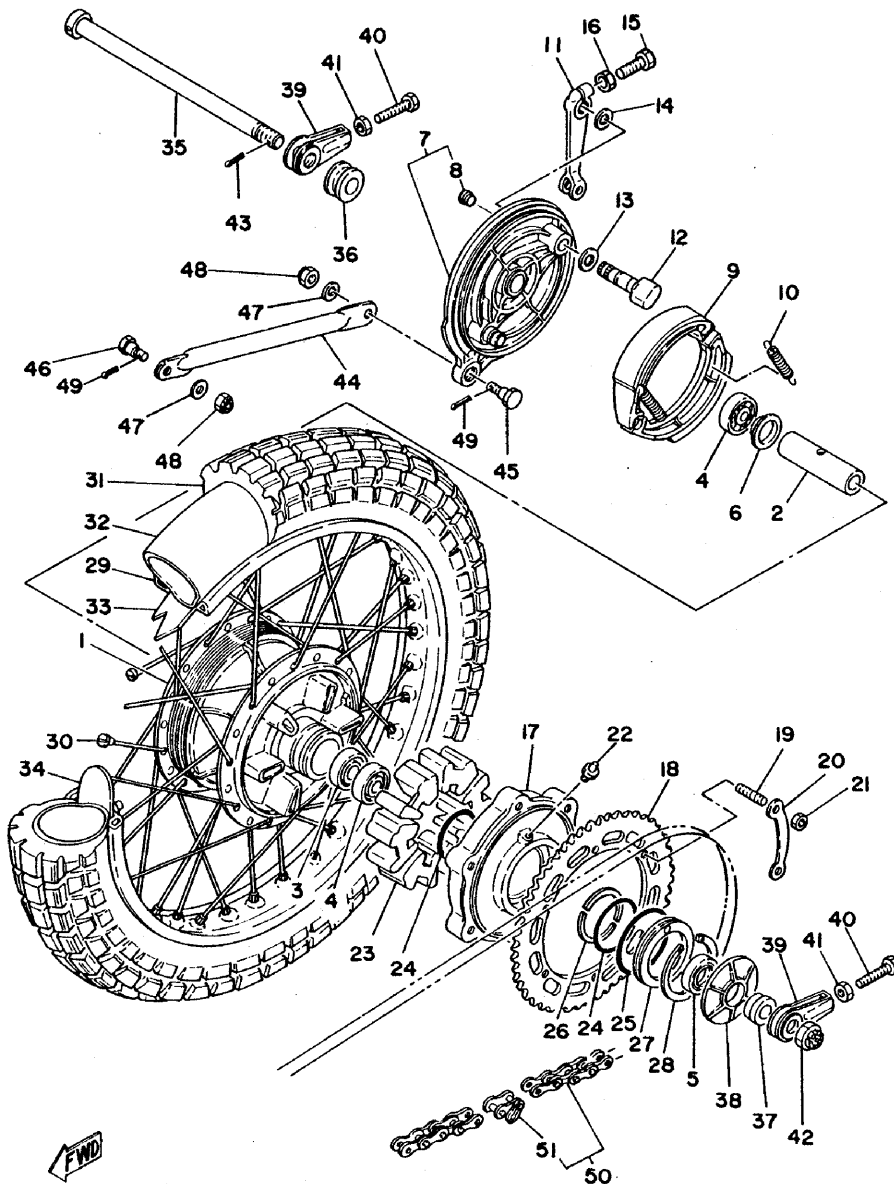

3H7700-0280

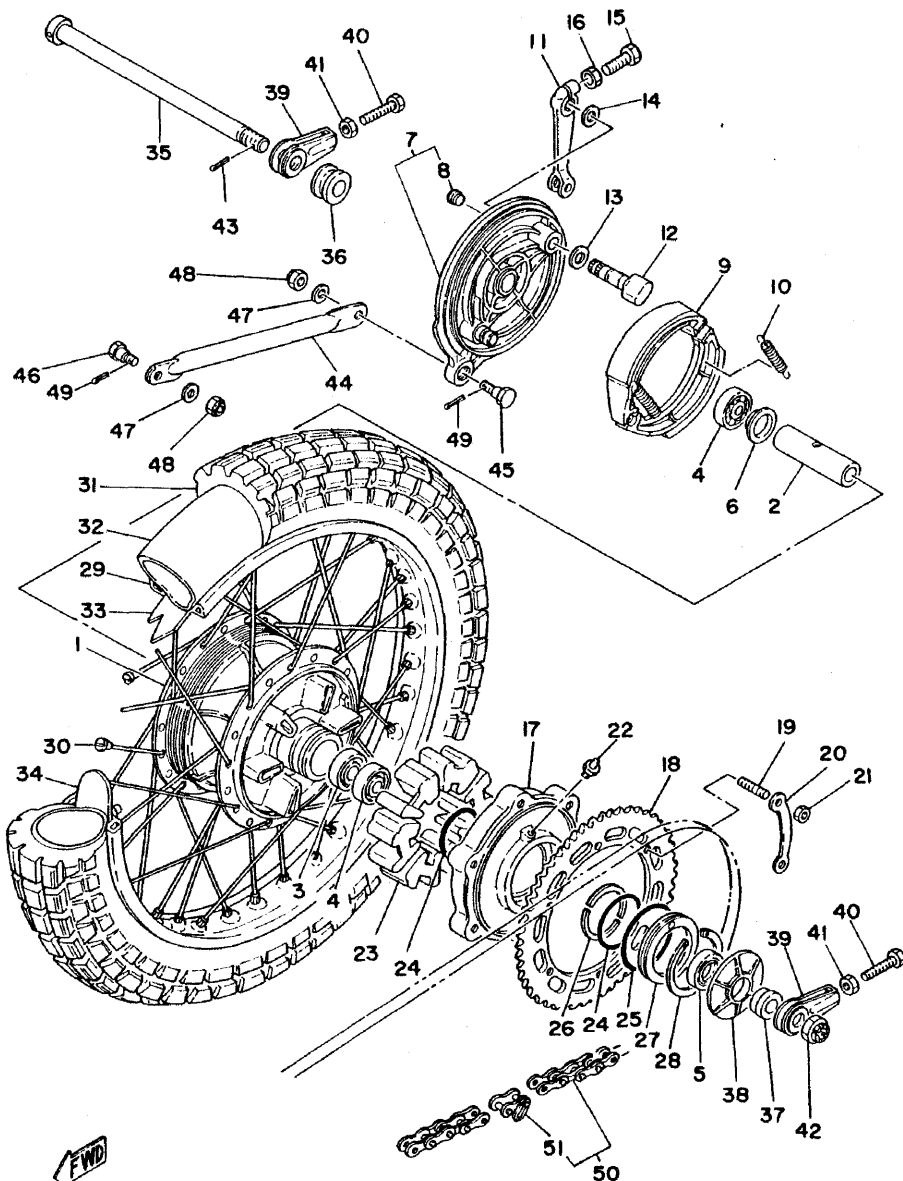


FWD

3H7700-0280

FIG. 28 REAR WHEEL


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
25	93210-71311	O-RING	1	
26	1E6-25318-00	STOPPER, hub	2	
27	1E6-25319-01	SEAL, hub dust	1	
28	93450-78080	CIRCLIP	1	
29	94418-18199	RIM (1.85-18)	1	
30	1E6-25304-00	SPOKE SET, rear	1	
31	94140-18204	TIRE (4.00-18)	1	
32	94237-18120	TUBE (3.75-18)	1	bs
33	94330-18087	BAND, rim (3.00-18)	1	bs
34	1T2-25394-00	SPACER, bead	2	
35	150-25381-00	AXLE, wheel	1	
36	90387-17141	COLLAR	1	
37	90387-17530	COLLAR	1	
38	1E6-25367-00	COVER, hub dust	1	
39	583-25388-00	PULLER, chain 1	2	
40	90101-08034	BOLT	2	
41	95301-08700	NUT	2	
42	90171-16022	NUT, castle	1	
43	91401-30030	PIN, cotter	1	
44	3H7-25371-00	BAR, tension	1	
45	90109-08406	BOLT	1	
46	90109-08368	BOLT	1	
47	92901-08200	WASHER, Plain	2	
48	90185-08055	NUT, self-locking	2	
49	91401-20015	PIN, cotter	2	
50	94585-20100	CHAIN, drive (DID520DS 100L)	1	
51	94685-20011	JOINT, chain	1	

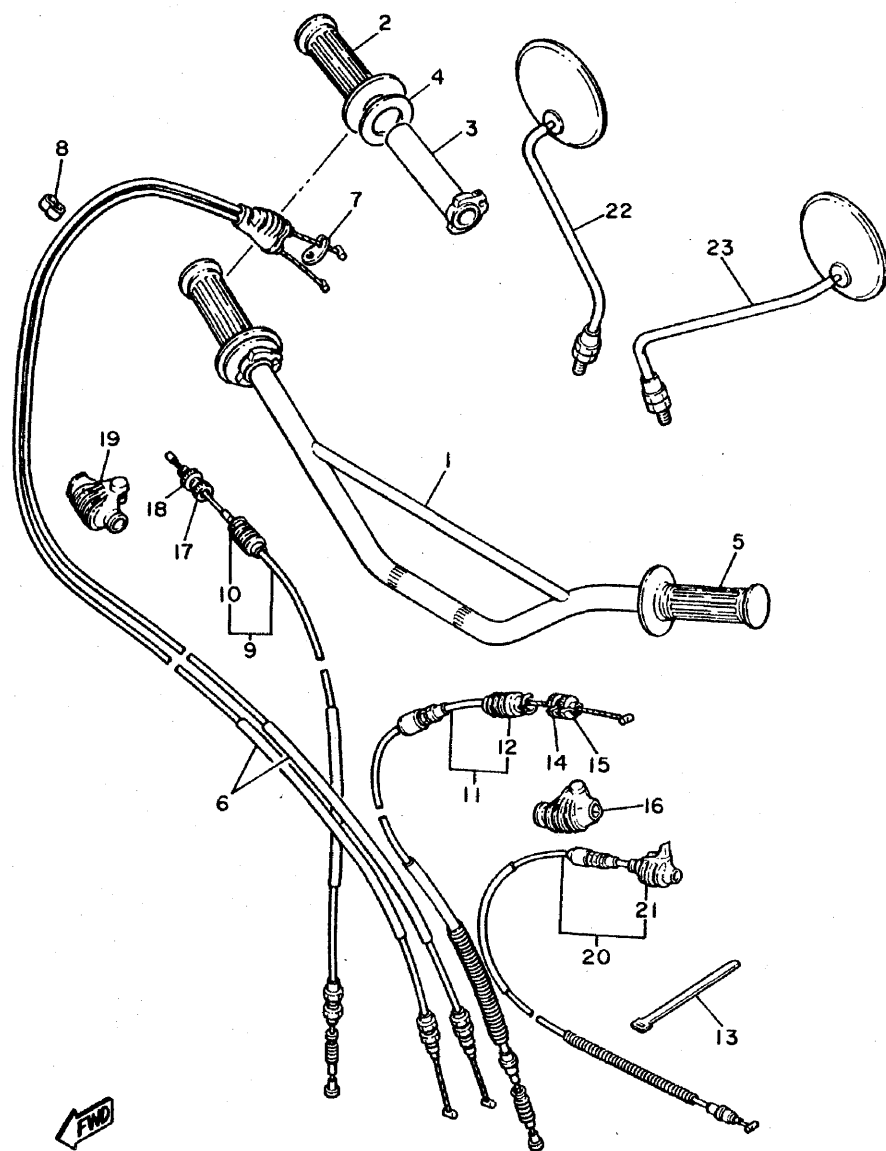

5R1600-1290

FIG. 29 HANDLEBAR.CABLE

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	3H7-26111-00	HANDLEBAR	1	
2	583-26242-00	GRIP (R.H)	1	
3	2H0-26243-00	TUBE, throttle guide	1	
4	1W1-26249-00	RING, leaf	1	
5	1E6-26241-00	GRIP (L.H)	1	
6	2H0-26301-00	THROTTLE CABLE ASSY	1	
7	583-26398-00	WASHER	1	
8	90468-15009	CLIP	1	
9	3H7-26341-01	CABLE, brake	1	
10	1E6-26342-00	.BOOT, cable	1	
11	1E6-26335-01	CABLE, clutch	1	
12	1E6-26342-00	.BOOT, cable	1	
13	341-26397-01	BAND	1	
14	90123-08046	BOLT	1	
15	90179-08148	NUT	1	
16	1E6-26372-00	COVER, handle lever	1	
17	90123-08046	BOLT	1	
18	90179-08148	NUT	1	
19	1E6-26372-00	COVER, handle lever	1	
20	1E6-26331-00	CABLE, decomPression	1	
21	583-26352-00	.COVER, decomPression cable	1	
22	1Y1-26290-00	MIRROR ASSY (R.H)	1	except oceania
23	1Y1-26290-10	MIRROR ASSY (L.H)	1	except oceania

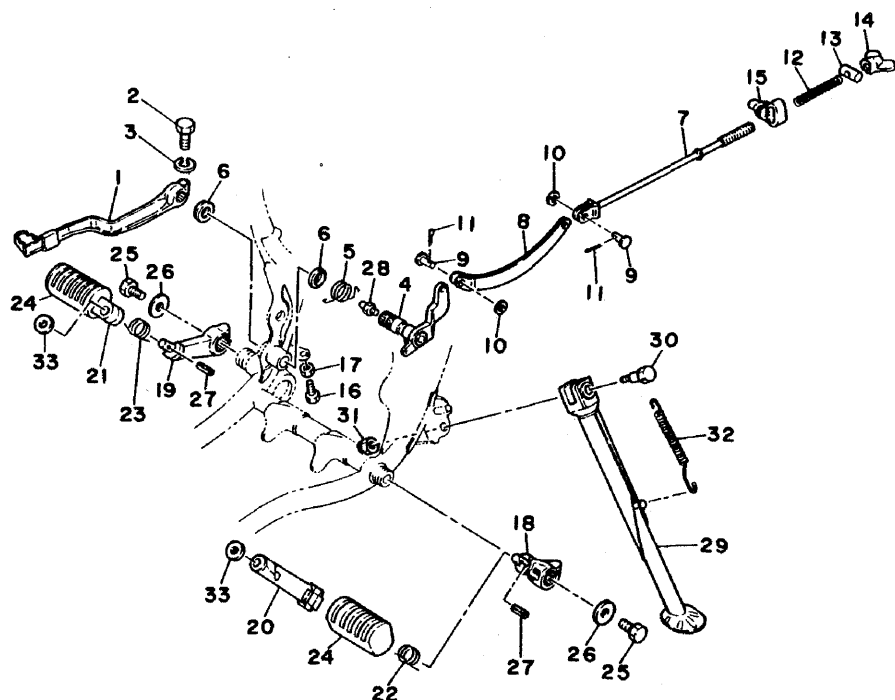


5R1600-1300

FIG. 30 STAND.FOOTREST

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	583-27211-01-R4	PEDAL, brake	1	
2	90109-06470	BOLT	1	
3	92901-06100	WASHER, sPring	1	
4	1E6-27252-00	LEVER, brake Pedal	1	
5	90508-32278	SPRING, torsion	1	
6	498-27235-00	COVER, dust	2	
7	583-27231-01	ROD, brake	1	
8	583-27241-01	ROD, Joint	1	
9	90240-08051	PIN, clevis	2	
10	90201-08084	WASHER, Plate	2	
11	91401-20015	PIN, cotter	2	
12	90501-10245	SPRING, comPression	1	
13	90249-12008	PIN	1	
14	90175-06013	NUT, wing	1	
15	1E6-27244-00	COVER	1	
16	90153-06008	SCREW, hexagon	1	
17	90170-06184	NUT	1	
18	2Y0-27412-00-33	BRACKET, footrest 1	1	yamaha black
19	2Y0-27422-00-33	BRACKET, footrest 2	1	yamaha black
20	1E6-27411-00	FOOTREST 1	1	
21	1E6-27421-00	FOOTREST 2	1	
22	90508-26277	SPRING, torsion	1	
23	90508-26276	SPRING, torsion	1	
24	214-27413-00	COVER, footrest	2	
25	97311-10016	BOLT	2	
26	90201-12631	WASHER, Plate	2	
27	91609-30020	PIN, sPring	2	
28	93700-06004	NIPPLE, Grease	1	


FIG. 30 STAND.FOOTREST

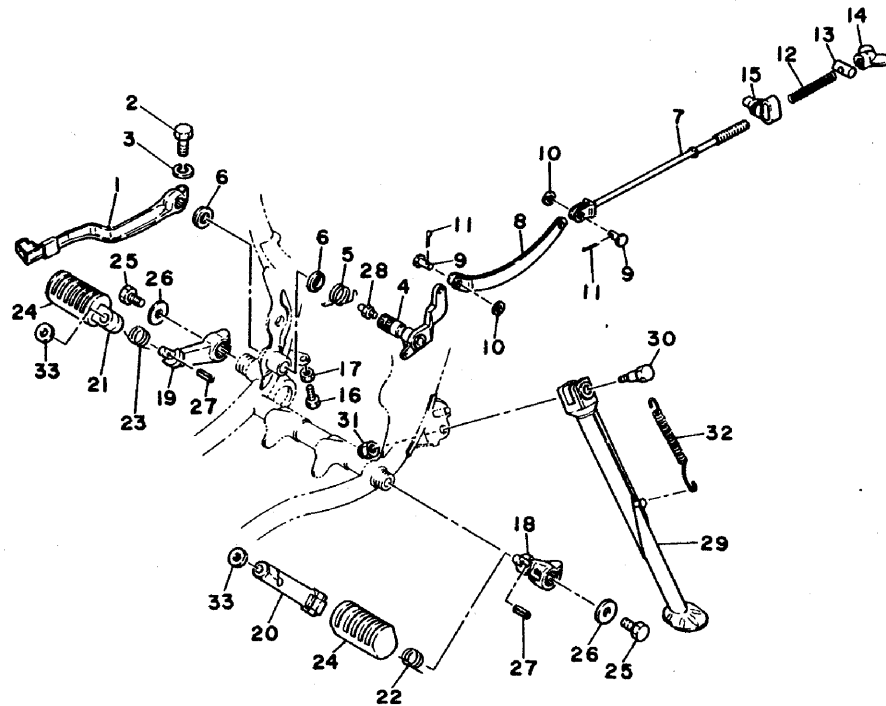

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	2Y0-27311-00-33	STAND, side	1	yamaha black
30	90109-10473	BOLT	1	
31	90185-10037	NUT, self-locking	1	
32	90507-29021	SPRING, tension	1	
33	90201-10639	WASHER, Plate	2	



5R1600-1300

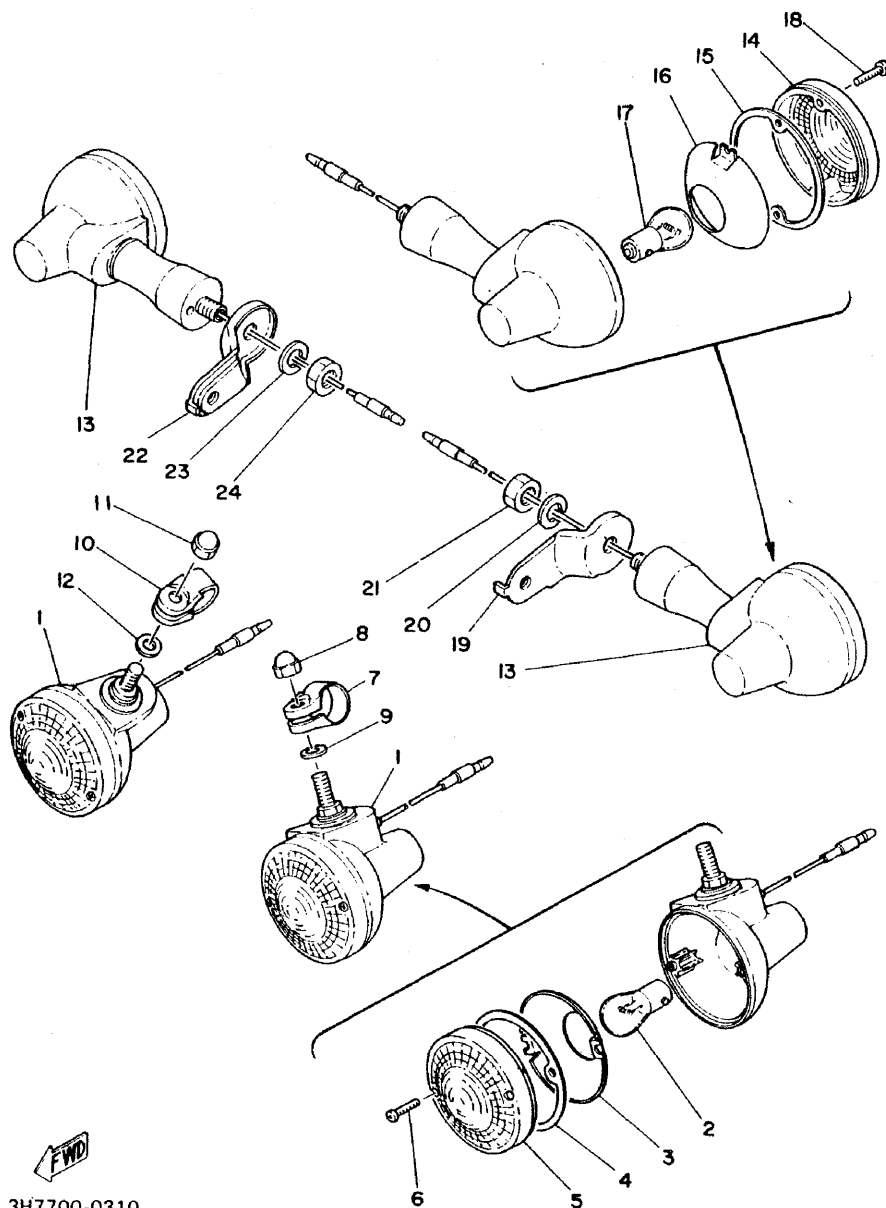


3H7700-0310

FIG. 31 FLASHER LIGHT

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	1M1-83310-60	FRONT FLASHER LIGHT ASSY 1	2	
2	115-83311-60	.BULB (6V-18W)	1	
3	1M1-83309-60	.REFLECTOR	1	
4	1M1-83313-60	.GASKET, flasher lens	1	
5	341-83312-70	.LENS, flasher	1	
6	97701-30520	.SCREW, Panhead tapping	2	
7	1M1-83318-00	STAY, flasher 1	1	
8	95303-08800	NUT, crown	1	
9	90201-08578	WASHER, Plate	1	
10	1M1-83318-00	STAY, flasher 1	1	
11	95303-08800	NUT, crown	1	
12	90201-08578	WASHER, Plate	1	
13	1T2-83330-60	REAR FLASHER LIGHT ASSY 1	2	
14	341-83312-70	.LENS, flasher	1	
15	1M1-83313-60	.GASKET, flasher lens	1	
16	1M1-83309-60	.REFLECTOR	1	
17	115-83311-60	.BULB (6V-18W)	1	
18	97701-30520	.SCREW, Panhead tapping	2	
19	1T2-83368-00	STAY, flasher	1	
20	92901-10100	WASHER, spring	1	
21	95302-10600	NUT	1	
22	1T2-83369-00	STAY, flasher	1	
23	92901-10100	WASHER, spring	1	
24	95302-10600	NUT	1	

FIG. 32 SPEEDOMETER. TACHOMETER

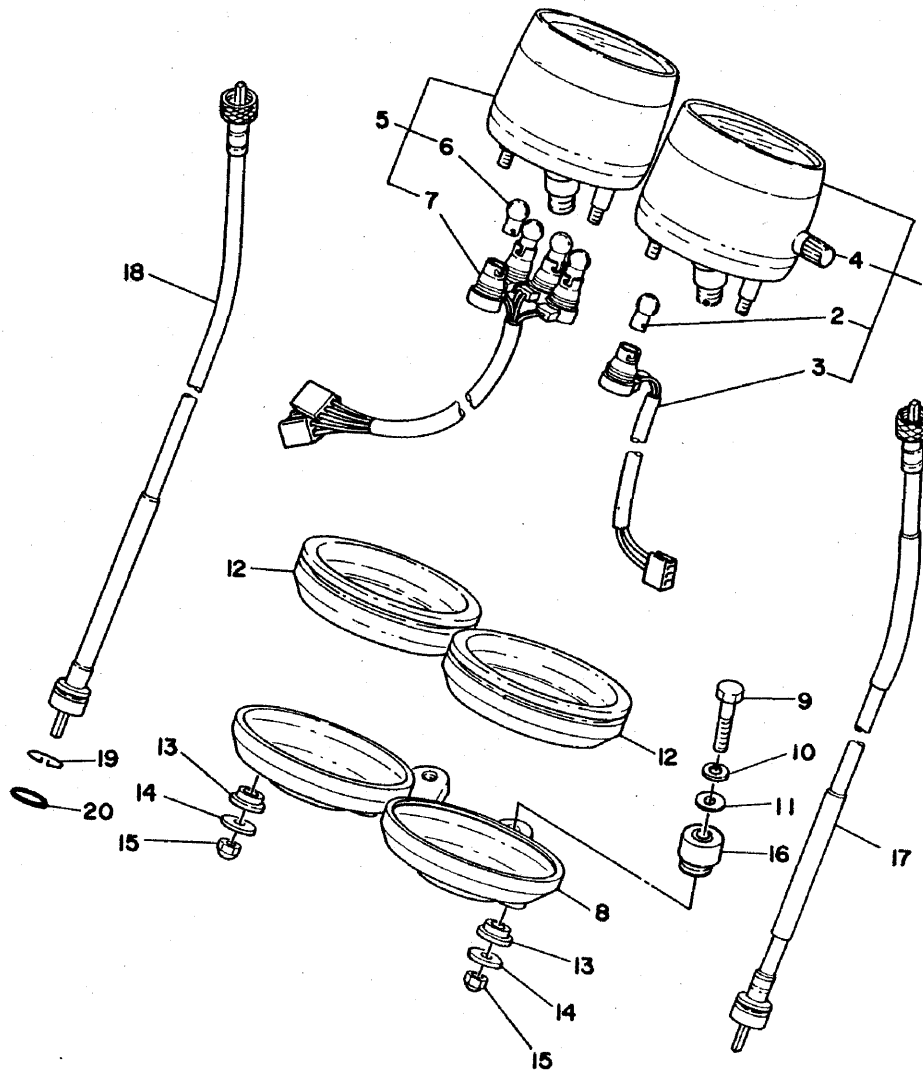


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	1E6-83570-F0	SPEEDOMETER ASSY	1	
2	122-83516-10	•BULB (6V-3W)	1	
3	1E6-83536-60	•SOCKET, meter	1	
4	1E6-83578-10	•KNOB, trip meter	1	
5	1E6-83540-F1	TACHOMETER ASSY	1	
6	122-83516-10	•BULB (6V-3W)	4	
7	1E6-83520-60	•SOCKET CORD ASSY	1	
8	1E6-83519-60	BRACKET, meter	1	
9	97321-06035	BOLT	2	
10	92901-06100	WASHER, sPring	2	
11	90201-06055	WASHER, Plate	2	
12	1E6-83523-60	DAMPER	2	
13	1E6-83526-60	DAMPER 2	4	
14	1E6-83524-60	WASHER, sPecial	4	
15	95301-05800	NUT, crown	4	
16	1E6-23445-00	DAMPER	2	
17	3H6-83550-00	SPEEDOMETER CABLE ASSY	1	
18	1E6-83560-52	TACHOMETER CABLE ASSY	1	
19	102-25137-00	RING, stoP	1	
20	93210-14104	O-RING	1	



3H7700-0320

FIG. 33 HEADLIGHT

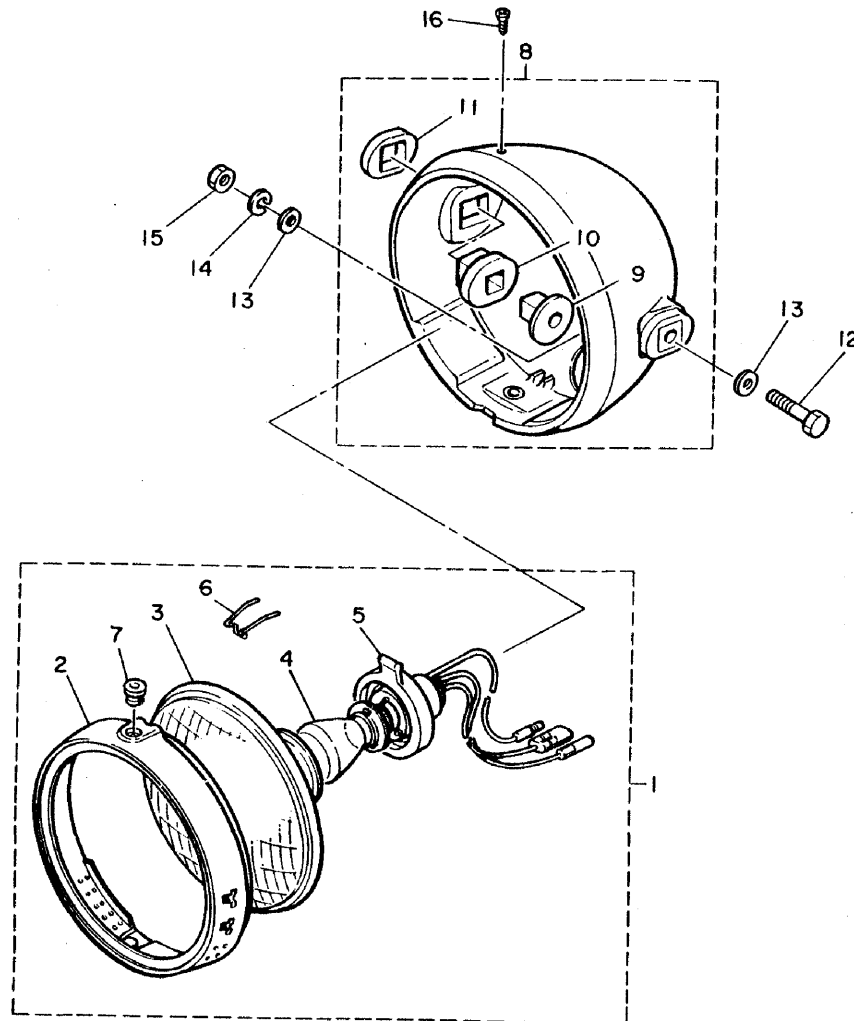


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	1M1-84110-70	HEADLIGHT UNIT ASSY	1	
2	1M1-84195-61	•RING, retaining	1	
3	1M1-84120-70	•LENS ASSY	1	
4	214-84114-60	•BULB (6V-35/35W)	1	
5	421-84312-30	•SOCKET	1	
6	148-84324-00	•SPRING, reflector	3	
7	1M1-84133-60	•COLLAR, screw	1	
8	1M1-84130-60-33	BODY ASSY, headlight	1	yamaha black
9	498-84145-60	•COLLAR, body fitting	2	
10	498-84163-60	•DAMPER	2	
11	1M1-84164-60	•DAMPER	2	
12	97303-08040	BOLT	2	
13	92901-08200	WASHER, Plain	4	
14	92901-08100	WASHER, sPring	2	
15	95301-08600	NUT	2	
16	90152-05005	SCREW, countersunk	1	



4T9700-1330

FIG. 34 TAILLIGHT

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	1M1-84510-60	TAILLIGHT UNIT ASSY	1	
2	1M1-84511-60	•BASE, taillight	1	
3	1M1-84514-60	•BULB (6V-32/3CP)	1	
4	1M1-84523-60	•GASKET, lens	1	
5	1M1-84521-60	•LENS, taillight	1	
6	1M1-84524-60	•SCREW, lens fitting	2	
7	1T2-84551-60-33	BRACKET, licence	1	yamaha black
8	1T2-84512-60	SEAT, base	1	
9	1T2-84526-60	SCREW	2	
10	1E6-21638-00	DAMPER 1	2	
11	97301-06030	BOLT	1	
12	90201-06061	WASHER, Plate	1	
13	90201-06073	WASHER, Plate	1	
14	92901-06100	WASHER, sPring	1	
15	95301-06600	NUT	1	
16	90387-07598	COLLAR	1	
17	308-84553-00	DAMPER	1	
18	90109-06022	BOLT	2	
19	92901-06100	WASHER, sPring	2	
20	90209-08125	WASHER	2	
21	95301-06600	NUT	2	
22	1E6-84517-00	CORD, taillight	1	
23	90480-15061	GROMMET	2	
24	2H7-84754-00	WASHER, sPecial	2	
25	1M1-84527-60	DAMPER	2	
26	449-85131-01	REFLECTOR, rear 1	2	
27	92903-05100	WASHER, sPring	2	
28	95303-05600	NUT	2	

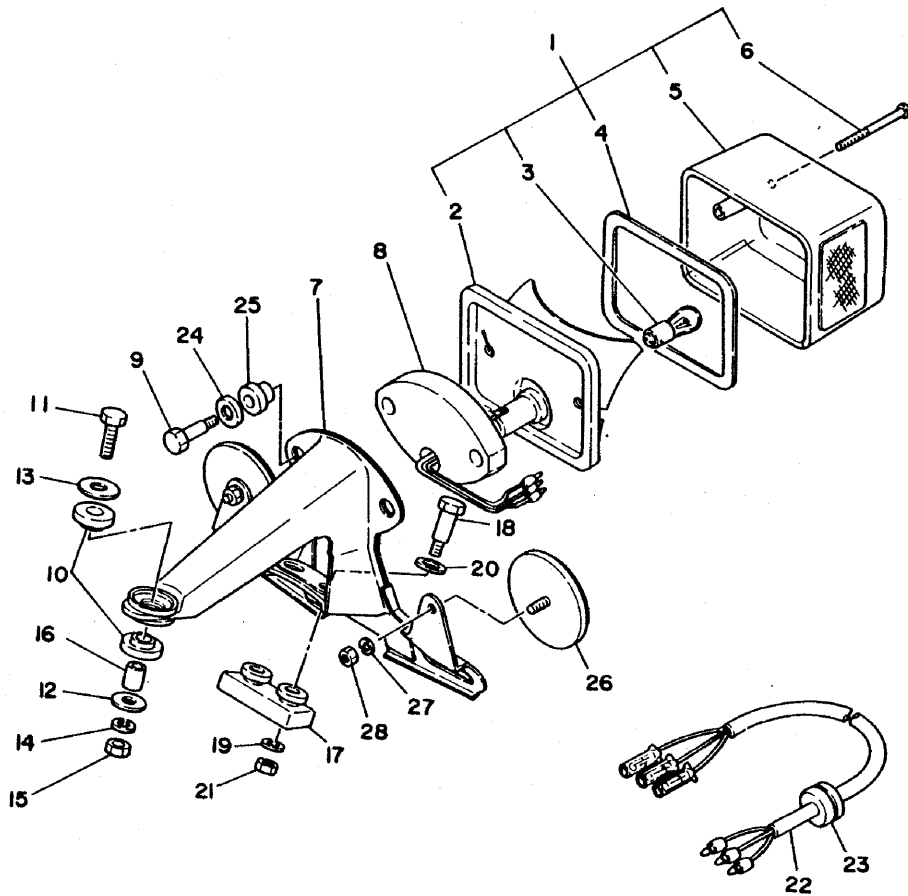

3H7700-0340

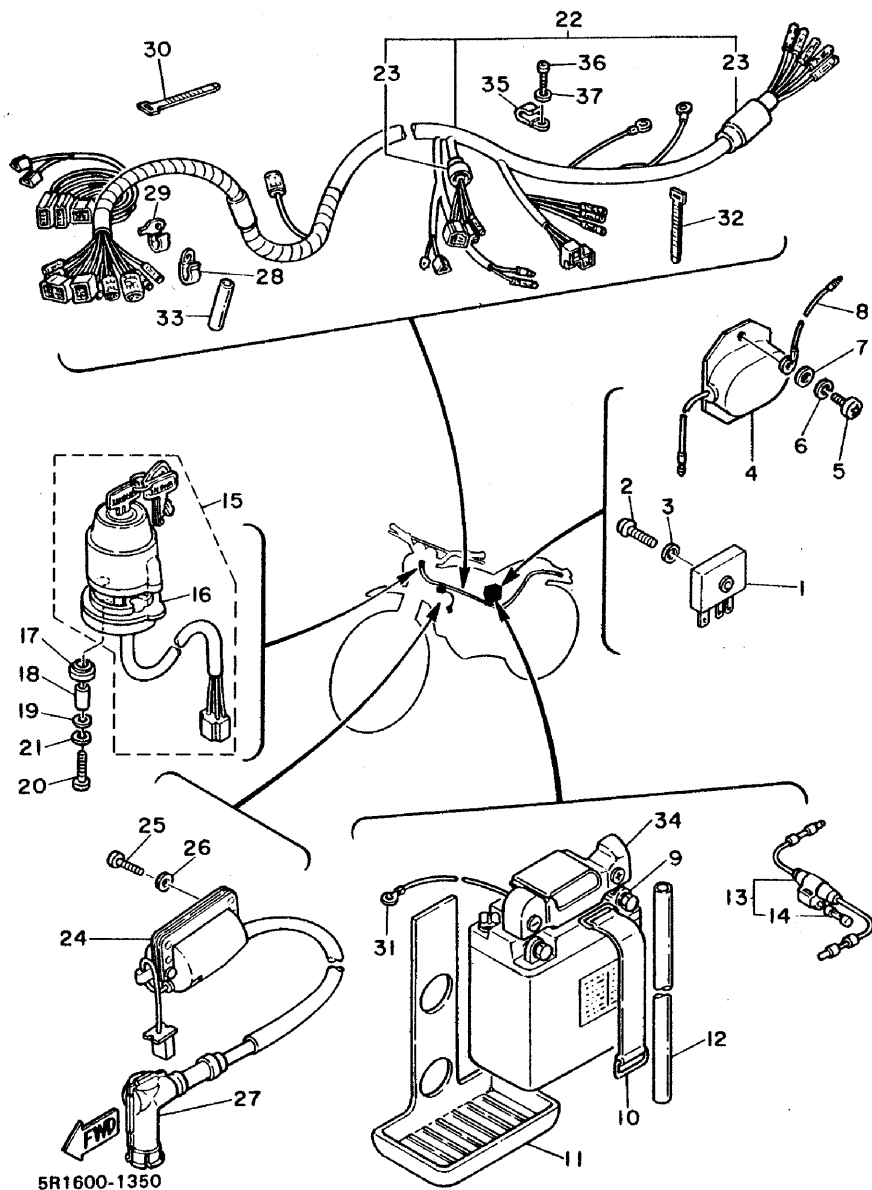


FIG. 35 ELECTRICAL 1

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	353-81970-63	RECTIFIER ASSY	1	UR
	353-81970-50	RECTIFIER ASSY	1	UR
2	98501-05016	SCREW, Pan head	1	
3	92901-05600	WASHER, Plate	1	
4	1E6-81910-62	VOLTAGE REGULATOR ASSY	1	
5	92501-06015	SCREW, Pan head	2	
6	92901-06100	WASHER, sPring	2	
7	92901-06600	WASHER, Plate	2	
8	1E6-81949-00	WIRE, lead	1	
9	1E6-82110-29	BATTERY ASSY (6N6-38-1)	1	
10	1E6-82131-00	BAND, battery	1	
11	1E6-82122-01	SEAT, battery	1	
12	90445-08336	HOSE	1	
13	1E6-82150-00	FUSE HOLDER ASSY	1	
14	1E6-82151-00	•FUSE (6V-10A)	2	
15	1E6-82508-01	MAIN SWITCH ASSY	1	
16	437-82555-00	•DAMPER, main switch 1	1	
17	437-82556-00	DAMPER, main switch	2	
18	437-82516-00	COLLAR, main switch	2	
19	90201-05031	WASHER, Plate	2	
20	98501-05025	SCREW, Pan head	2	
21	92901-05100	WASHER, sPring	2	
22	2H2-82590-01	WIRE HARNESS ASSY	1	
23	538-82599-10	•COVER, connector	2	
24	583-82310-50	IGNITION COIL ASSY	1	
25	92501-06025	SCREW, Pan head	2	
26	92901-06600	WASHER, Plate	2	
27	512-82370-10	PLUG CAP ASSY	1	UR with noise suppresser

This diagram is an exploded view of a vehicle's electrical system, showing the following components and their connections:

- Battery (11):** The central power source, connected to the alternator (9) and starter motor (16).
- Alternator (9):** Mounted on the front of the engine, it generates electricity to charge the battery and power the vehicle's electrical system.
- Starter Motor (16):** Used to crank the engine, it is connected to the battery and the engine block.
- Wiring Harnesses:**
 - Engine Compartment Harness (22):** Connects the battery, alternator, and starter motor to the rest of the vehicle's electrical system.
 - Interior Harness (23):** Distributes power to the vehicle's interior lights and other electrical components.
 - Chassis Harness (24):** Connects the battery to the vehicle's chassis and other ground points.
- Connectors and Terminals:** Various connectors (e.g., 1, 2, 3, 4, 5, 6, 7, 8, 13, 14, 15, 17, 18, 19, 20, 21, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37) are shown, indicating the specific points where wires are connected to components or the chassis.

5R1600-1350



3H7700-0360

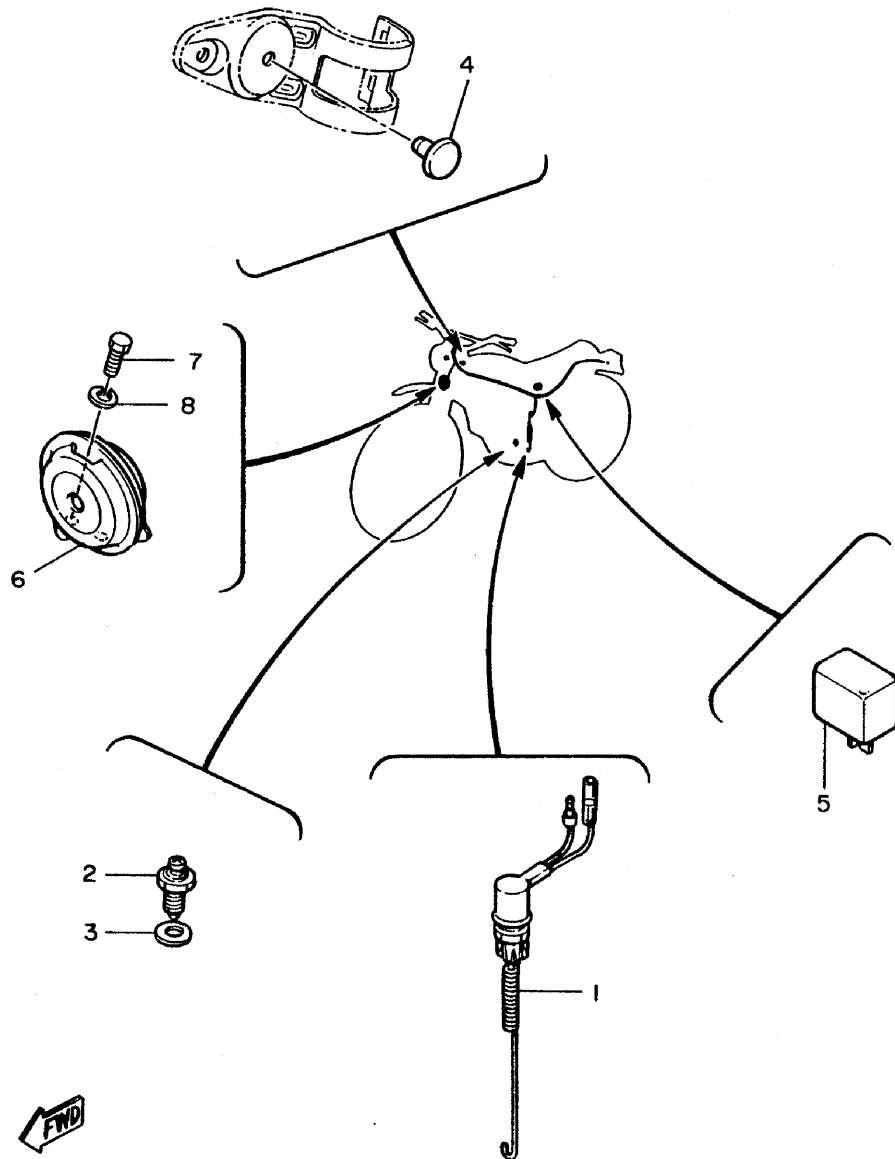


FIG. 36 ELECTRICAL 2

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	1T2-82530-00	STOP SWITCH ASSY	1	
2	2H7-82540-00	NEUTRAL SWITCH ASSY	1	
3	90430-10148	GASKET	1	
4	90338-04010	PLUG	2	
5	2A6-83350-60	FLASHER RELAY ASSY	1	
6	3H7-83371-00	HORN	1	
7	97301-08012	BOLT	1	
8	92901-08100	WASHER, sPring	1	

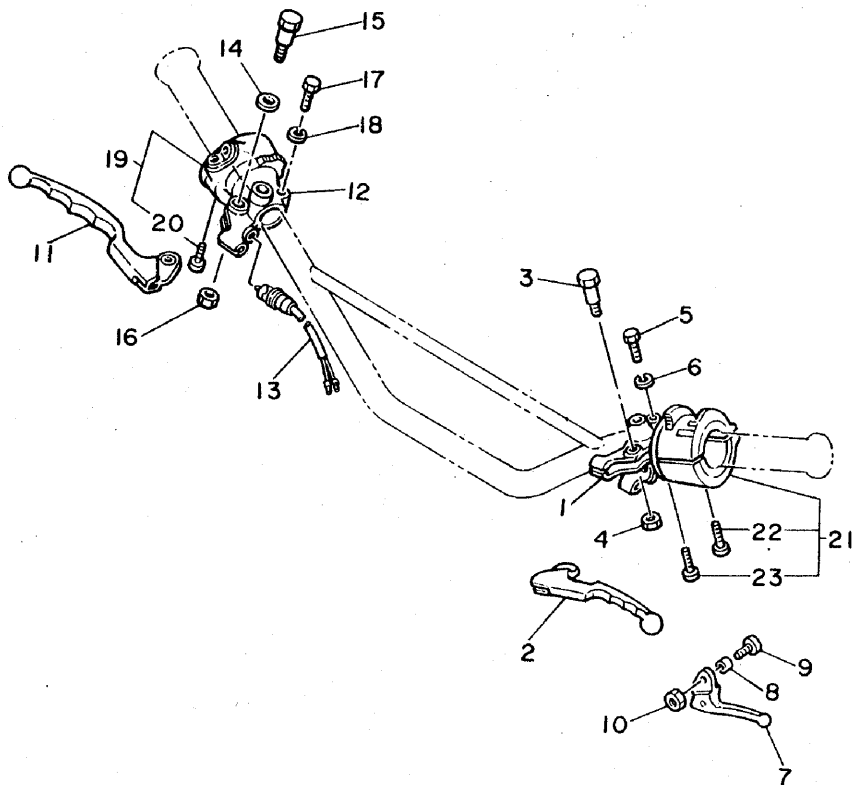


FIG. 37 HANDLE SWITCH-LEVER

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	583-82911-01-98	HOLDER, lever 1	1	low gloss black
2	2H0-83912-20	LEVER 1	1	low gloss black
3	90109-06410	BOLT	1	
4	95601-06100	NUT, u	1	
5	97301-06022	BOLT	1	
6	92901-06100	WASHER, sPring	1	
7	583-83981-00	LEVER, decomPression	1	
8	583-83913-00	COLLAR, decomPression lever	1	
9	98501-05018	SCREW, Pan head	1	
10	95601-05100	NUT, u	1	
11	2H0-83922-20	LEVER 2	1	low gloss black
12	361-82921-31	HOLDER, lever 2	1	
13	361-83980-30	FRONT STOP SWITCH ASSY	1	
14	90201-08083	WASHER, Plate	1	
15	90109-06410	BOLT	1	
16	95601-06100	NUT, u	1	
17	97301-06022	BOLT	1	
18	92901-06100	WASHER, sPring	1	
19	1E6-83976-00	SWITCH, handle 1	1	
20	98506-05018	•SCREW, Pan head	2	
21	1T2-83972-00	SWITCH, handle 4	1	
22	98506-05025	•SCREW, Pan head	1	
23	98506-05030	•SCREW, Pan head	1	



5R1600-1370

REPAIR KIT

FIG. 38 REPAIR KIT

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	4E5-W0001-00	GASKET KIT	1	
2	93210-49296	.O-RING	2	
3	90430-06014	.GASKET	2	
4	90430-14043	.GASKET	2	
5	583-11181-01	.GASKET, cylinder head 1	1	
6	583-11351-00	.GASKET, cylinder	1	
7	93210-92295	.O-RING	1	
8	93210-14299	.O-RING	2	
9	341-12119-02	.SEAL, valve stem	2	
10	93210-32172	.O-RING	1	
11	90430-38054	.GASKET	1	
12	1T1-14714-01	.GASKET, muffler	1	
13	583-13556-01	.GASKET, manifold	1	
14	4E5-W0002-00	GASKET KIT 2	1	
15	583-15466-00	.GASKET 2	1	
16	93210-64297	.O-RING	1	
17	93210-15171	.O-RING	1	
18	583-13414-00	.GASKET, strainer cover	1	
19	214-11198-01	.GASKET	1	
20	137-15353-00	.GASKET, drain	1	
21	583-15451-00	.GASKET, crankcase cover	1	
22	583-15462-00	.GASKET, crankcase cover 3	1	
23	90430-09121	.GASKET	1	
24	583-14184-00	.GASKET, float chamber	1	
25	1E6-W0003-00	OIL SEAL KIT	1	
26	93104-08055	.OIL SEAL	1	
27	93104-12054	.OIL SEAL	1	
28	93102-30145	.OIL SEAL	1	

FIG. 38 REPAIR KIT

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	93101-14089	.OIL SEAL	1	
30	93104-11038	.OIL SEAL	2	
31	93102-15147	.OIL SEAL	1	
32	93102-17148	.OIL SEAL	1	
33	93102-35180	.OIL SEAL	1	
34	93109-14010	.OIL SEAL	1	
35	93102-25064	.OIL SEAL	1	

INDEX

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.
1E5-W0001-00	38- 1	583-12171-01	5- 1	137-14143-44	8- 7
1E5-W0002-00	38-14	583-12176-00	5- 2	137-14143-46	8- 7
1E6-W0003-00	38-25	583-12212-00	5-25	214-14147-00	8-72
3H7-W2472-00	26- 1	583-12217-00	5-19	354-14147-00	8-56
2Y0-11101-00-R4	1- 1	583-12231-00	5-14	558-14147-00	8- 5
583-11127-00	1- 5	2H0-12232-00	5-21	583-14148-00	8-32
	2- 3	341-12241-03	5-16	583-14158-00	8-51
583-11133-11	1- 2	583-12247-00	5-17	583-14171-01	8-58
583-11150-00	3-14	1T1-12279-00	5- 5	802-14173-00	8-64
583-11181-01	2-10	583-12283-00	1-30	583-14174-00	8-61
	38- 5	583-12288-00	1-26	2Y0-14175-00	8-42
583-11186-00-R4	1-22	583-13113-00	6-30	2Y0-14181-00-12	8- 3
1T1-11197-00	1-19	583-13161-01	6-33	583-14184-00	8- 2
214-11198-01	6-21	583-13310-01	6-14		38-24
	38-19	583-13314-00	6- 3	583-14185-00	8-30
583-11310-00	2- 1	583-13316-02	6- 8	127-14186-00	8-29
583-11351-00	2- 6	583-13320-00	6-15	168-14190-28	8-40
	38- 6	583-13324-00	6- 1	2L1-14191-00	8-71
583-11400-00	3- 1	583-13325-00	6- 2	214-14195-00	8-39
583-11412-00	3- 2	583-13336-02	6-12	1E6-14197-00	8-15
583-11422-00	3- 3	583-13411-00	6-16	432-14197-00	8-16
583-11533-00	5-11	583-13414-00	6-17	583-14215-00	8-20
583-11536-00	3-15		38-18	583-14216-00	8-18
583-11549-00	5-10	583-13417-01	6-18	583-14239-01	8-21
583-11610-01	3-19	4X7-13440-00	6-22	583-14245-00	8-43
583-11610-11	3-19	583-13447-00	6-23	583-14264-00	8-19
583-11610-21	3-19	583-13464-00	6-36	583-14265-00	8-22
583-11610-31	3-19	583-13465-02	6-40	583-14274-00	8-10
583-11610-41	3-19	583-13556-01	7- 3	583-14291-00	8- 4
583-11631-02-95	3-18		38-13	583-14292-00	8-52
583-11631-02-96	3-18	256-13564-00	7- 2	583-14386-00	8-11
583-11633-00	3-20	583-13565-01	7- 1	583-14411-01	7- 6
583-11635-02	3-18	3H7-14101-01	8- 1	583-14421-00	7-11
583-11636-02	3-18	583-14112-40	8-37	583-14422-00	7- 7
583-11637-02	3-18	2Y0-14115-00	8- 6	583-14431-00	7-20
583-11638-02	3-18	1T1-14116-02	8-33	583-14437-00	7-19
583-11651-00	3- 6	2J2-14121-00	8-27	583-14441-00	7-21
583-11681-00	3- 4	525-14123-00	8-55	583-14451-09	7-15
2J2-12111-01	4- 1	583-14131-01	8-47	583-14453-00	7-23
256-12116-01	4- 5	2J2-14133-00	8-28	583-14458-00	7-16
256-12117-02	4- 7	583-14133-00	8-44	583-14468-01	7-17
341-12118-00	4- 8	127-14134-00	8-57	583-14472-00	7-18
341-12119-02	4- 6	500-14135-00	8-59	583-14485-00	7-22
	38- 9	164-14137-00	8-34	583-14536-00	8-50
583-12121-00	4- 2	737-14137-00	8-62	583-14558-00	8-12
583-12151-00	4- 9	583-14141-52	8-31	583-14561-00	8- 8
583-12156-01	4-10	193-14142-30	8-38	583-14562-00	8-60
583-12159-00	4-11	137-14143-42	8- 7	2J2-14571-00	8-49

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.
583-14573-00	8-48	583-15451-00	38-21	1E6-17841-00	1-12
583-14589-00	8-68	583-15457-00	11-18	1E6-17843-00	1-15
583-14592-00	8-53	583-15462-00	11-11	2J2-18103-00	18- 1
583-14594-00	8-41		38-22	583-18111-01-93	18-13
812-14594-00	8-24	583-15466-00	10-26	132-18113-01	18-14
583-14597-00	8-54		38-15	434-18122-00	17-20
1T1-14611-02	9- 1	1T1-15618-00	14- 7	278-18127-00	18- 7
1T1-14628-00	9- 2	1T1-15620-00	14- 1	583-18131-00	18-12
1T2-14711-32	9-12	583-15621-00	14- 2	2J2-18141-00	17- 5
1T1-14714-01	9-10	583-15631-00	14-31	498-18151-03	17-22
	38-12	583-15641-00	14-16	363-18511-00	17-15
1T1-14718-00	9-17	583-15651-00	14-28	364-18511-00	17-14
1T2-14728-00	9-21	583-15661-00	14- 9	363-18531-00	17-17
1T1-14747-01	9-26	434-15668-00	14-26	363-18535-00	17-18
1T1-14752-01	9-14	583-15671-00	14-10	2J2-18540-00	17- 1
1T1-14755-01	9-32	583-15674-00	14-24	1J7-18547-00	17-10
1E6-14766-01	9- 5	363-15676-00	14-12	434-18561-00	17- 3
	9-20	583-15676-00	14-18	3H7-21110-00-33	19- 1
583-14766-00	9-24	363-15686-00	14-25	1T2-21171-00	21-10
	9- 4	583-16111-00	15-11	2H0-21240-00	21-21
	9-19	214-16119-00	15-16	1E6-21245-00	21-22
	9-23	583-16150-00	15- 2	1E6-21308-00	19-24
	9-13	363-16154-00	15-15	583-21315-00	19-18
1T1-14788-00	9-11	170-16164-00	15- 3	583-21316-00	19-10
1T1-14791-01	9-31	583-16301-00	15- 1	1T1-21317-00	19-14
583-14918-00	8-63	583-16321-00	15- 5	1E6-21399-00	21-23
1T2-14933-00	8- 9	360-16325-00	15- 6	1T2-21441-00	19-26
583-14951-00	8-17	364-16343-00	15-28	1T1-21471-01	19-20
584-14956-00	8-69	583-16344-00	15-29	3H6-21511-00	20- 1
341-14991-00	8-70	498-16351-00	15- 7	559-21541-00	24-39
2Y0-15100-00	10- 1	174-16356-00	15-18	1E6-21610-01-36	20- 7
583-15316-00	10-20	583-16357-01	15-19	1T1-21620-00	20-22
583-15317-01	10-21	583-16371-00	15- 4	1E6-21638-00	20- 8
583-15346-00	10- 9	583-16382-00	15-20		34-10
583-15347-00	10-10	214-16389-00	15-21	1E6-21639-00	20-16
137-15353-00	17-13	583-17121-00	16- 5	1E6-21708-00	21- 2
	38-20	583-17131-02	16- 6	4T9-21711-00-20	21- 1
583-15358-00	10- 8	583-17141-00	16- 7	583-21714-00	21- 6
583-15371-00	10- 3	583-17151-01	16- 8		21-11
363-15381-00	10-15	583-17211-00	16-15	4R9-21721-00-20	21- 5
583-15383-00	10-23	583-17221-00	16-16	583-21746-00	20-23
583-15411-00	11- 1	583-17231-01	16-17	583-21747-00	21- 9
583-15417-00	11-17	583-17241-00	16-18		21-14
583-15421-00	11- 5	583-17251-01	16-19	583-21755-00	19-31
583-15425-00	11-12	583-17411-01	16- 1	583-21756-00	19-33
583-15426-00	10-25	2H0-17421-00	16-13	583-21771-00	19-27
583-15431-02-98	11- 7	168-17428-01-05	16- 2	4R9-21783-00	21-33
583-15451-00	11- 2	214-17461-60	16-30	4R9-21784-00	21-34

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.
4R9-21785-00	21-35	1W1-23318-L0	24-14
3H7-22110-00-33	22- 1	1E6-23319-00	24-38
483-22124-00	22- 4	3H7-23340-00-33	24-25
2K8-22129-00	22- 6	1E6-23389-00	24-50
583-22141-01	22- 9	1T2-23389-00	23- 8
431-22151-03	22- 7	1E6-23408-00	19-37
2N0-22178-00	22-29	122-23411-00	23-23
2Y0-22179-00	22-28	156-23411-00	23- 1
3H7-22210-00	22-45	122-23412-00	23-24
1T1-22211-00	22-46	156-23412-00	23-21
1T1-22212-00	22-47	2Y0-23416-00	23-26
583-22214-00	22-48	1E6-23434-00	23-11
1U6-22311-00-33	22-17	3H7-23435-00-98	23- 3
1U6-22318-00-33	22-12	1E6-23441-00-98	23- 5
3H7-23101-00	24- 1	1E6-23442-00	23- 6
1U6-23111-M1	24-23	1E6-23445-00	23- 4
240-23114-00	24-22		32-16
1W6-23118-10	24-21	164-23462-00	23- 2
122-23119-01	24-36	583-23469-00	23-19
3H7-23121-00-33	24-43	584-23484-01	19-39
3H7-23122-00-33	24-52	509-23489-L0	24-15
3H7-23124-00	24-13	3H7-24110-00-03	25- 1
2W6-23126-00	24- 2	4R9-24161-00	25- 3
122-23129-00	24-35	583-24181-00	25-30
3H7-23131-00-33	24-45	583-24182-00	25-33
2W6-23136-00	24- 3	4R9-24240-00	25- 2
1N5-23137-00	24-46	498-24500-01	25- 4
1N5-23138-00	24-44	214-24512-00	25-13
	24-53	498-24521-00	25-12
3H7-23141-00	24-19	498-24522-00	25-11
583-23142-00	24-20	498-24523-00	25- 5
1G8-23144-L1	24- 8	498-24524-01	25- 7
1K7-23145-00	24- 4	498-24525-00	25- 9
509-23146-L0	24- 5	498-24528-00	25- 6
1W1-23148-L0	24- 9	214-24535-00	25-10
1W1-23153-L0	24- 7	2A6-24611-00	25-18
1W1-23156-L0	24- 6	1W1-24612-00	25-19
509-23158-L0	24-33	3H7-24720-00	26-10
1U6-23168-M0	24-24	583-24724-00	26- 6
1W1-23168-L0	24-10	3H7-24731-00	26- 2
2Y0-23170-00	24-12	1T1-24738-00	26- 4
2Y0-23173-00	24-11	2Y0-24748-00	26- 3
278-23181-50	24-34	2N6-25016-10-98	27- 7
2N6-23191-00	24-16	1E6-25026-11-98	28- 7
509-23194-L0	24-18	1E6-25104-01	27-26
1E6-23317-00	23-20	1E6-25111-00-98	27- 1
1E6-23317-10	24-29	214-25117-00	27- 3
1T2-23318-00	24-37	322-25118-00	27-33

PART NO.	REF. NO.	PART NO.	REF. NO.
214-25130-00	28- 9	308-25138-00	27-13
308-25135-00	27-11	214-25149-01	27-19
109-25136-00	27-12	1E6-25151-00	27-20
102-25137-00	27-37	2N6-25155-00	27-22
	32-19	1W1-25181-01	27-32
		1T1-25194-00	27-30
		1E6-25304-00	28-30
		1E6-25311-00-98	28- 1
		146-25315-00	28- 6
		183-25315-00	27- 2
		275-25317-00	28- 2
		1E6-25318-00	28-26
		1E6-25319-01	28-27
		431-25330-02	27- 9
		214-25351-01	28-12
		148-25353-00	27-21
			28-13
		3H7-25355-00	28-11
		148-25359-00	28-14
		1E6-25364-00	28-23
		1E6-25366-00-98	28-17
		1E6-25367-00	28-38
		3H7-25371-00	28-44
		150-25381-00	28-35
		583-25388-00	28-39
		1T2-25394-00	28-34
		156-25398-00	27-31
		583-25412-00	28-20
		583-25440-10	28-18
		583-25442-10	28-18
		583-25443-10	28-18
		2H0-25444-20	28-18
		583-25446-10	28-18
		3H7-26111-00	29- 1
		1E6-26241-00	29- 5
		583-26242-00	29- 2
		2H0-26243-00	29- 3
		1W1-26249-00	29- 4
		1Y1-26290-00	29-22
		1Y1-26290-10	29-23
		2H0-26301-00	29- 6
		1E6-26331-00	29-20
		1E6-26335-01	29-11

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.
1E6-82116-00	35-31	1E6-83560-52	32-18
371-82121-00	21-26	1E6-83570-F0	32- 1
1E6-82122-01	35-11	1E6-83578-10	32- 4
1E6-82129-00	35-34	2H0-83912-20	37- 2
1E6-82131-00	35-10	583-83913-00	37- 8
1E6-82150-00	35-13	2H0-83922-20	37-11
1E6-82151-00	35-14	437-83936-00	6-43
583-82310-50	35-24		35-30
437-82370-21	35-27	1T2-83972-00	37-21
512-82370-10	35-27	1E6-83976-00	37-19
1E6-82508-01	35-15	361-83980-30	37-13
437-82516-00	35-18	583-83981-00	37- 7
584-82519-00	23-28	1M1-84110-70	33- 1
1T2-82530-00	36- 1	214-84114-60	33- 4
2H7-82540-00	36- 2	1M1-84120-70	33- 3
437-82555-00	35-16	1M1-84130-60-33	33- 8
437-82556-00	35-17	1M1-84133-60	33- 7
2H2-82590-01	35-22	498-84145-60	33- 9
366-82591-00	35-32	498-84163-60	33-10
538-82599-10	35-23	1M1-84164-60	33-11
583-82911-01-98	37- 1	1M1-84195-61	33- 2
361-82921-31	37-12	421-84312-30	33- 5
1M1-83309-60	31- 3	148-84324-00	33- 6
	31-16	1M1-84510-60	34- 1
	31- 1	1M1-84511-60	34- 2
	31- 2	1T2-84512-60	34- 8
	31-17	1M1-84514-60	34- 3
	31- 5	1E6-84517-00	34-22
	31-14	1M1-84521-60	34- 5
	31- 4	1M1-84523-60	34- 4
	31-15	1M1-84524-60	34- 6
	31- 7	1T2-84526-60	34- 9
	31-10	1M1-84527-60	34-25
	31-13	1T2-84551-60-33	34- 7
	36- 5	308-84553-00	34-17
	31-19	2H7-84754-00	34-24
	31-22	449-85131-01	34-26
	36- 6	90101-06278	27-23
	32- 2		28-15
	32- 6	90101-06304	26- 5
	32- 8	90101-08034	28-40
	32- 7	90101-08340	24-27
	32-12	90101-10303	5- 4
	32-14	90105-08064	19- 5
	32-13	90105-08066	19-19
	32- 3	90105-08091	23- 7
	32- 5	90105-10039	19- 2
	32-17	90105-10051	19- 6

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.
90105-10063	19- 3	90179-18020	16-32
90105-14102	23-18	90179-18199	5-23
90109-06022	34-18	90179-25033	23-27
90109-06410	37- 3	90185-08054	19- 7
	37-15	90185-08055	28-48
90109-06418	1-16	90185-10035	19- 4
	1-28	90185-10037	30-31
90109-06470	30- 2	90201-05031	35-19
90109-06511	6-26	90201-06055	22-44
90109-08368	28-46		32-11
90109-08397	24-26	90201-06060	13-11
90109-08406	28-45	90201-06061	34-12
90109-08444	26-11	90201-06063	21- 8
90109-10420	22-49		21-13
90109-10473	30-30	90201-06067	20- 4
90109-10533	22-34		20-24
90110-08018	9-30		21-19
90116-08190	2-14	90201-06073	25-23
90116-08218	28-19		34-13
90116-10087	2- 7	90201-06407	22-24
90116-10222	2-12	90201-06557	19-23
90116-10223	2-13	90201-07076	27-17
90116-10225	2-15	90201-08083	37-14
90123-08046	29-14	90201-08084	30-10
	29-17	90201-08114	20-15
90149-05110	6-28	90201-08326	9-35
90149-06008	25-14		20-21
90149-06017	18- 2	90201-08544	24-28
90149-14031	17-12	90201-08578	31- 9
90149-18100	5-22		31-12
90152-05005	33-16	90201-08587	1-14
90153-06008	30-16	90201-08649	1-10
90159-06010	15- 9	90201-09572	3-17
90170-06184	30-17	90201-10119	6- 5
90170-08173	4-12	90201-10124	1- 8
90170-08193	28-21	90201-10126	19- 9
90170-12067	3-12	90201-10322	23-10
90170-16182	15-14	90201-10590	2- 4
90170-18086	15-17	90201-10591	5- 6
90170-22187	21- 3	90201-10639	30-33
90171-14020	27-35	90201-12166	6- 7
90171-16022	28-42	90201-12172	15-30
90175-06013	30-14	90201-12195	23- 9
90179-08004	9- 9	90201-12593	3-10
90179-08148	29-15	90201-12631	30-26
	29-18	90201-14220	18-10
90179-10201	2- 8	90201-14577	22-35
90179-10277	1- 7	90201-15234	3-16
90179-10279	1- 6		

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.
90201-15234	14- 5	90387-07598	34-16	90468-10050	21-25	91316-06025	11- 3
90201-17255	14-29	90387-08258	20-17	90468-12006	23-14		11-19
90201-17327	15-27	90387-08572	9-25	90468-15009	29- 8	91316-06030	2- 9
90201-20266	16-11	90387-09506	25-22	90468-23097	24-51		11-14
	16-24	90387-15720	27-34	90480-01176	21-27	91316-06035	10- 4
90201-20278	14-23	90387-17141	28-36	90480-08216	22-26		11- 4
	16-22	90387-17530	28-37	90480-10068	27- 8		11- 6
90201-20279	22-40	90387-25507	16-28		28- 8	91316-06040	11-15
90201-22283	27-16	90401-08038	6-34	90480-12188	22-25	91316-06045	10- 5
90201-252A4	16- 4	90430-05126	6-29	90480-14102	7-26	91316-06055	1-11
90201-25287	14-14	90430-06014	1-17		21-30		10- 7
	16- 9		1-29	90480-14198	20- 2	91316-06060	6-25
	16-20		38- 3	90480-15061	34-23	91316-06065	10- 6
90201-25290	14-22	90430-08119	6-35	90480-22054	25-26	91316-08050	9-29
90201-32673	17- 8		19-36	90480-22177	25-21	91401-10010	15-23
90202-06010	25-15	90430-09121	10-13	90480-24186	21- 4	91401-20015	22-43
90202-08103	9-34		38-23	90501-05378	6-32		28-49
90206-06060	9- 6	90430-10027	11-20	90501-10062	17-11		30-11
90206-18025	25- 8	90430-10148	36- 3	90501-10245	30-12	91401-30030	27-36
90208-04029	19-40	90430-14043	1-21	90501-12081	14- 4		28-43
90208-08011	19- 8		38- 4	90501-14095	5-20	91609-25018	21- 7
90208-16019	15-13	90430-22123	19-34	90501-23143	14-11		21-12
	22-11	90430-27124	19-28	90501-23391	15- 8	91609-30020	30-27
90209-08097	25-27	90430-38054	9- 8	90501-31454	4- 3	91701-05055	21-24
90209-08125	34-20		38-11	90501-44455	4- 4	91810-05016	10- 2
90209-08162	9-27	90445-07039	10-17	90502-09024	19-38	91830-22016	11-16
90209-12163	9-28	90445-08336	35-12	90507-20002	27-10	91830-24016	1- 3
90215-06016	18- 5	90445-09119	25-20		28-10		2- 5
90215-08115	18- 8	90445-11288	25-16	90507-29021	30-32		2-11
90215-21022	16-31	90445-11289	19-29	90508-08334	17-21	341-92090-60	24-17
90240-06005	15-22	90445-11418	21-32	90508-12279	15-24	92501-06012	8-65
90240-06052	22-41	90446-07114	35-33	90508-16303	1-27		10-19
90240-08051	30- 9	90460-22083	10-12	90508-26276	30-23	92501-06014	5-15
90249-12008	30-13	90460-58015	7-24	90508-26277	30-22		35-36
90250-08017	17-16	90460-58124	7- 5	90508-32052	18- 4	92501-06015	35- 5
90269-04003	19-41	90460-61063	7-25	90508-32278	30- 5	92501-06018	6-10
90280-05013	3- 9	90460-71017	10-11	90508-32280	14-19		10-27
90282-07021	15-12	90462-08024	24-30	90508-35387	22-33	92501-06020	24-47
90338-04010	36- 4	90464-08020	20-27	90560-05001	22-22	92501-06025	35-25
90338-09066	16-14	90465-05075	10-18	90560-25153	15-10	92501-06030	6- 9
90340-10003	11-21	90465-05084	10-14	90560-25154	14-20	92502-06016	12-11
90340-14009	6-20	90465-06077	6-44	91316-06012	6-39	92506-06014	21-15
90340-14038	1-20	90465-08028	35-35	91316-06015	6-38	92506-06045	21-17
90387-05009	22-23	90465-08076	11-22		6-42	92701-06015	10-24
90387-06388	20- 3	90465-10018	35-28	91316-06018	1-24	92701-06018	19-25
90387-07391	7-27	90465-10090	35-29	91316-06020	6-19	92901-05100	7- 9
	20- 9	90467-10008	19-30		7- 4		22-19
	21-31		25-17	91316-06025	1-18		22-21

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.
92901-05100	22-32	92901-08600	19-17	93210-15171	6-41	93450-22027	3-21	95311-08600	24-32	98501-05018	22-20
	25-32		26- 9		38-17	93450-78080	28-28	95601-05100	37-10		37- 9
	35-21	92901-10100	23-12	93210-22298	16-29	93501-04011	23-22	95601-06100	37- 4	98501-05025	35-20
92901-05600	7-10		31-20	93210-32172	5-24	93501-08001	8-67		37-16	98501-05040	22-31
	35- 3		31-23		38-10	93503-08007	6-31	95601-08100	9-33	98502-04012	8-35
92901-06100	7-13	92901-12100	3-11	93210-35173	11-13	93503-16010	23-25	95601-16100	22-10	98502-04014	8-25
	7-29	92902-04100	8-26	93210-49296	1-23	93507-32009	14- 3	95621-08615	9- 7	98502-05012	8-45
	9-16		8-36		38- 2	93603-17070	6- 4	95701-08100	23-17	98506-05018	37-20
	18- 6	92902-05100	8-14	93210-52312	28-24	93604-08071	17- 7	95801-08012	19-35	98506-05025	37-22
	19-22		8-46	93210-64297	6-24	93604-16092	5- 3	95821-08040	23-15	98506-05030	37-23
	20- 6	92902-06100	8-66		38-16	93604-18100	17- 2	95821-08055	23-16	98701-05012	10-16
	20-11	92902-08100	8-23	93210-71311	28-25	93604-22050	6-13	97301-06014	19-21		17- 4
	20-26	92903-05100	34-27	93210-92295	2- 2	93700-06004	22-27	97301-06016	13-10	98906-06010	9- 3
	21-20	92906-06100	21-16		38- 7		28-22		22-15		9-18
	21-29	93101-14089	11- 8	93306-00502	5- 7		30-28	97301-06020	7-12	98906-06012	9-22
	22-16		38-29	93306-00506	5- 8	94130-21205	27-27		24-40		
	24-41	93102-15147	11-10	93306-20203	27- 4	94140-18204	28-31	97301-06022	37- 5		
	24-48		38-31	93306-20205	27- 5	94227-21123	27-28		37-17		
	25-25	93102-17148	15-26	93306-20310	28- 4	94237-18120	28-32	97301-06025	7-28		
	30- 3		38-32	93306-20316	28- 3	94330-18087	28-33		21-28		
	32-10	93102-20009	27- 6	93306-20546	16- 3	94330-21084	27-29	97301-06030	20- 5		
	34-14	93102-25030	28- 5	93306-30517	16-26	94416-21198	27-25		34-11		
	34-19	93102-25064	14-32	93306-30622	3- 7	94418-18199	28-29	97301-08012	36- 7		
	35- 6		38-35	93306-30702	3-13	94500-02106	5-12	97301-08016	22-13		
	35-37	93102-30145	3- 8	93310-635A5	3- 5	94585-20100	28-50		25-28		
	37- 6		38-28	93311-42012	16-12	94600-02001	5-13	97301-08035	20-12		
	37-18	93102-35180	16-27	93313-32008	16-25	94685-20011	28-51	97303-08040	33-12		
92901-06200	13- 8		38-33	93315-11720	15-25	94701-00117	1-25	97311-10016	30-25		
92901-06600	7-14	93104-07003	27-14	93315-23208	17- 9	95301-05800	32-15	97321-06010	9-15		
	24-42	93104-08055	1-13	93317-22208	22- 3	95301-06600	18- 3	97321-06014	20-25		
	24-49		38-26	93342-22205	22- 2		21-18	97321-06016	14-27		
	35- 7	93104-11038	6-11	93410-10025	6- 6		27-24	97321-06020	18-15		
	35-26		38-30	93410-17008	14-30		28-16	97321-06025	20-10		
92901-08100	9-36	93104-12054	1-31	93410-19015	14-13		34-15	97321-06030	25-24		
	19-12		38-27	93410-20038	16-23		34-21	97321-06035	32- 9		
	19-16	93104-14044	22-30	93410-22014	27-18	95301-08600	20-14	97321-08016	26- 7		
	20-18	93105-50010	27-15	93410-25010	14-21		33-15	97321-08025	19-11		
	22-14	93108-35004	22- 8	93410-30012	17- 6	95301-08700	28-41		19-15		
	24-31	93109-14010	18- 9	93420-25002	11- 9	95301-10700	23-13	97321-08030	14- 8		
	25-29		38-34	93430-07012	17-23	95301-12700	22-42	97321-08045	20-13		
	26- 8	93210-07135	6-27	93430-08006	17-19	95302-10600	31-21	97701-30520	31- 6		
	33-14	93210-10197	6-37	93430-10016	14- 6		31-24		31-18		
	36- 8	93210-12095	10-22	93430-12009	18-11	95303-05600	34-28	97701-50110	19-32		
92901-08200	20-20	93210-12152	5-18	93440-25019	14-17	95303-08600	1- 9	97801-06014	13- 7		
	28-47	93210-14104	27-38	93440-25020	14-15	95303-08800	9-38	98501-05012	7- 8		
	33-13		32-20		16-10		20-19		25-31		
92901-08600	9-37	93210-14299	1- 4		16-21		31- 8	98501-05016	8-13		
	19-13		38- 8	93440-47044	5- 9		31-11		22-18		
									35- 2		

PARTS NAME INDEX

PARTS NAME INDEX

PARTS NAME INDEX

DESCRIPTION	REF. NO.
ABSORBER 3	1- 5
*	2- 3
ARM, tensioner	22-28
ARM, valve rocker	4- 9
ARRESTER, sPark	9-13
AXLE, drive	16-13
AXLE, kick	14- 9
AXLE, main (14T)	16- 1
AXLE, Push lever	15-20
AXLE, wheel	27-32
*	28-35
BALANCER, wheel	27-31
BALL	6-31
*	8-67
*	14- 3
*	23-22
*	23-25
BAND	24-15
*	29-13
*	35-32
BAND, battery	35-10
BAND, boot	24-17
BAND, rim (3.00-18)	28-33
BAND, rim (3.00-21)	27-29
BAND, silencer	9-11
BAND, switch cord	6-43
*	35-30
BAR, shift fork Guide 1	17-17
BAR, shift fork Guide 2	17-18
BAR, tension	28-44
BASE, magneto	12- 3
BASE, taillight	34- 2
BATTERY ASSY (6N6-3B-1)	35- 9
BEARING	3- 7
*	16- 3
*	22- 2
BEARING (B6005)	5- 7
*	5- 8
BEARING (B6202)	27- 5
BEARING (B6202RS)	27- 4
BEARING (B6203)	28- 3
BEARING (B6203RS)	28- 4
BEARING (B6305)	16-26
BEARING (B6307)	3-13
BEARING, cylindrical	3- 5
*	15-25
*	16-12
*	16-25

DESCRIPTION	REF. NO.
BEARING, cylindrical	17- 9
*	22- 3
BODY ASSY, headlight	33- 8
BODY, cap	19-27
*	25-18
BODY, float chamber 1	8- 3
BOLT	1-11
*	1-16
*	1-18
*	1-24
*	1-28
*	2- 9
*	5- 4
*	6-19
*	6-25
*	6-26
*	6-38
*	6-39
*	6-42
*	7- 4
*	7-12
*	7-28
*	9-15
*	9-29
*	10- 4
*	10- 5
*	10- 6
*	10- 7
*	11- 3
*	11- 4
*	11- 6
*	11-14
*	11-15
*	11-19
*	13-10
*	14- 8
*	14-27
*	18-15
*	19-11
*	19-15
*	19-21
*	20- 5
*	20-10
*	20-12
*	20-13
*	20-25
*	21-28
*	22-13

DESCRIPTION	REF. NO.
BOLT	22-15
*	22-34
*	22-49
*	24-26
*	24-27
*	24-40
*	25-24
*	25-28
*	26- 5
*	26- 7
*	26-11
*	27-23
*	28-15
*	28-40
*	28-45
*	28-46
*	29-14
*	29-17
*	30- 2
*	30-25
*	30-30
*	32- 9
*	33-12
*	34-11
*	34-18
*	36- 7
*	37- 3
*	37- 5
*	37-15
*	37-17
BOLT, cap	24-23
BOLT, flange	19-35
*	23-15
*	23-16
BOLT, hexagon socket head	9-30
*	24-34
BOLT, stud	2- 7
*	2-12
*	2-13
*	2-14
*	2-15
*	9- 7
*	28-19
BOLT, union	6-34
BOLT, washer based	19- 2
*	19- 3
*	19- 5
*	19- 6
*	19-19

PARTS NAME INDEX

DESCRIPTION	REF. NO.
BOLT, washer based	23- 7
*	23-18
BOOT	24-16
BOOT, cable	29-10
*	29-12
BOOT, sealin&	18-12
BOSS, clutch	15- 4
BOSS, kick crank	14- 2
BOX	21-22
BOX COMP.	21-21
BOX, tool	21-10
BRACKET 1	8- 4
*	22-38
BRACKET, decomp.	1-30
BRACKET, footrest 1	30-18
BRACKET, footrest 2	30-19
BRACKET, licence	34- 7
BRACKET, meter	32- 8
BRACKET, seat	26- 3
*	26- 4
BRACKET, stop switch	19-26
BRACKET, throttle	8-49
BRAKE SHOE COMP.	27- 9
*	28- 9
BRAKE SHOE PLATE ASSY	27- 7
*	28- 7
BREAKER PLATE ASSY	13- 1
BREAKER SHAFT ASSY	3-14
BREATHER	10- 3
BREATHER 1	10- 9
BREATHER 2	10-10
BULB (6V-18W)	31- 2
*	31-17
BULB (6V-3W)	32- 2
*	32- 6
BULB (6V-32/3CP)	34- 3
BULB (6V-35/35W)	33- 4
BUSH	27-12
BUSH 2	22- 4
BUSH, driven gear outer	1-15
CABLE, brake	29- 9
CABLE, clutch	29-11
CABLE, decompression	29-20
CAM, decomp.	1-26
CAMSHAFT	27-20
*	28-12
CAMSHAFT 1	5- 1
CAP, battery box	21-23

PARTS NAME INDEX

DESCRIPTION	REF. NO.
CAP, bolt	23-19
CAP, chain tensioner	5-25
CAP, cleaner case 2	7- 7
CAP, front fork	24-24
CAP, handle lock	19-39
CAP, plunger	8-61
CARBURETOR ASSY 1	8- 1
CASE, air cleaner 1	7- 6
CASE, air cleaner 2	7-11
CASE, chain	22-17
CHAIN (BF05M-106L)	5-12
CHAIN, drive (DID520DS 100L)	28-50
CIRCLIP	3-21
*	5- 9
*	6- 6
*	11- 9
*	14- 6
*	14-13
*	14-15
*	14-17
*	14-21
*	14-30
*	16-10
*	16-21
*	16-23
*	17- 6
*	17-19
*	17-23
*	18-11
*	27-18
*	28-28
CLAMP	6-44
*	10-14
*	10-18
*	11-22
*	12- 9
*	19-31
*	20-27
*	24-30
*	35-28
*	35-29
*	35-35
CLAMP, hose	7- 5
*	7-24
*	7-25
*	10-11
*	10-12
CLIP	8-34

PARTS NAME INDEX

DESCRIPTION	REF. NO.
CLIP	8-62
*	19-30
*	21-25
*	23-14
*	24-51
*	25-17
*	29- 8
CLIP, oil seal	24- 6
CLUTCH ASSY	15- 1
CLUTCH, hub	28-17
CLUTCH, meter	27-19
COIL, ignition 1	12- 4
COIL, lighting 1	12- 6
COLLAR	7-27
*	8-41
*	9-25
*	16-28
*	20- 3
*	20- 9
*	20-17
*	21-31
*	22-23
*	25-22
*	27-34
*	28-36
*	28-37
*	34-16
COLLAR, body fitting	33- 9
COLLAR, decompression lever	37- 8
COLLAR, main switch	35-18
COLLAR, screw	33- 7
CONDENSER	13- 6
CONNECTOR	8-10
CONTACT BREAKER ASSY	13- 2
CORD, taillight	34-22
COTTER, valve	4- 8
COVER	10-25
*	30-15
COVER, ball race 2	23-26
COVER, battery	35-34
COVER, cap	11-17
COVER, connector	35-23
COVER, crankcase 1	11- 1
COVER, crankcase 2	11- 5
COVER, crankcase 3	11- 7
COVER, cylinder head side 2	1-22
COVER, decompression cable	29-21
COVER, double seat	26- 2

PARTS NAME INDEX

DESCRIPTION	REF. NO.
COVER, dust	30- 6
COVER, dust seal	24- 9
COVER, footrest	30-24
COVER, generator 2	11-12
COVER, handle lever	29-16
*	29-19
COVER, hub dust	27-33
*	28-38
COVER, kick lever	14- 7
COVER, manifold	7- 2
COVER, oil element	6-23
COVER, outer 1	24-52
COVER, Plunger cap	8-64
COVER, Pump	6- 8
COVER, rear footrest	22-39
COVER, shift Pedal	18-14
COVER, side 1	21- 1
COVER, side 2	21- 5
COVER, spring	14-12
*	14-18
COVER, strainer	6-18
COVER, thrust 2	22- 6
COVER, upper 1	24-43
COVER, upper 2	24-45
CRANK 1	3- 2
CRANK 2	3- 3
CRANKCASE ASSY	10- 1
CRANKSHAFT ASSY	3- 1
CROWN, handle	23- 3
CUP, filter	25-12
CYLINDER	2- 1
CYLINDER COMP., front fork	24-12
CYLINDER HEAD ASSY	1- 1
DAMPER	5-21
*	21- 9
*	21-14
*	23- 4
*	28-23
*	32-12
*	32-16
*	33-10
*	33-11
*	34-17
*	34-25
DAMPER 1	20- 8
*	24-39
*	34-10
DAMPER 2	20-16

PARTS NAME INDEX

DESCRIPTION	REF. NO.
DAMPER 2	32-13
DAMPER, engine mount 1	10-20
DAMPER, locating 1	25-30
DAMPER, locating 2	25-33
DAMPER, main switch	35-17
DAMPER, main switch 1	35-16
DAMPER, muffler	9-26
DAMPER, seat	26- 6
DOUBLE SEAT ASSY	26- 1
DUCT	7-19
ELEMENT ASSY, oil cleaner	6-22
ELEMENT, air cleaner	7-15
EMBLEM 1	25- 3
EMBLEM 3	21-33
EMBLEM 4	21-34
EMBLEM 5	21-35
FENDER, front	20- 1
FLANGE, spacer	27- 2
*	28- 6
FLASHER RELAY ASSY	36- 5
FLOAT	8-30
FLYWHEEL MAGNETO ASSY	12- 1
FOOTREST 1	30-20
FOOTREST 2	30-21
FOOTREST, rear 1	22-37
FORK, shift 1	17-14
*	17-15
FRAME COMP	19- 1
FRONT FLASHER LIGHT ASSY 1	31- 1
FRONT FORK ASSY	24- 1
FRONT STOP SWITCH ASSY	37-13
FUEL COCK ASSY 1	25- 4
FUEL TANK COMP.	25- 1
FUSE (6V-10A)	35-14
FUSE HOLDER ASSY	35-13
GASKET	1-17
*	1-21
*	1-29
*	6-21
*	6-29
*	6-35
*	8-50
*	9- 8
*	10-13
*	11-18
*	11-20
*	19-28
*	19-34

PARTS NAME INDEX

DESCRIPTION	REF. NO.
GASKET	19-36
*	24-22
*	24-33
*	25-11
*	25-13
*	36- 3
*	38- 3
*	38- 4
*	38-11
*	38-19
*	38-23
GASKET KIT	38- 1
GASKET KIT 2	38-14
GASKET 2	10-26
*	38-15
GASKET, cap	25-19
GASKET, crankcase cover	11- 2
*	38-21
GASKET, crankcase cover 3	11-11
*	38-22
GASKET, cylinder	2- 6
*	38- 6
GASKET, cylinder head 1	2-10
*	38- 5
GASKET, drain	17-13
*	38-20
GASKET, drain Plug	24-35
GASKET, flasher lens	31- 4
*	31-15
GASKET, float chamber	8- 2
*	38-24
GASKET, lens	34- 4
GASKET, manifold	7- 3
*	38-13
GASKET, muffler	9-10
*	38-12
GASKET, silencer	9-32
GASKET, strainer cover	6-17
*	38-18
GASKET, upper cover 1	24-46
GASKET, upper cover 2	24-44
*	24-53
GEAR, drive (10T)	27-11
GEAR, drive (21T)	3-15
GEAR, drive (42T)	6- 1
GEAR, driven (15T)	1-12
GEAR, kick (29T)	14-16
GEAR, kick Pinion (19T)	14-31

PARTS NAME INDEX

DESCRIPTION	REF. NO.
GEAR, meter (10T)	27-13
GEAR, Primary drive (30T)	15-11
GEAR, Pump driven (41T)	6- 2
GEAR, sPcket idle (27T)	14-28
GEAR, 1st wheel (33T)	16-15
GEAR, 2nd Pinion (18T)	16- 5
GEAR, 2nd wheel (28T)	16-16
GEAR, 3rd Pinion (21T)	16- 6
GEAR, 3rd wheel (25T)	16-17
GEAR, 4th Pinion (24T)	16- 7
GEAR, 4th wheel (22T)	16-18
GEAR, 5th Pinion (27T)	16- 8
GEAR, 5th wheel (21T)	16-19
GOVERNOR ASSY	13- 9
GRAPHIC SET	25- 2
GRIP (L.H)	29- 5
GRIP (R.H)	29- 2
GROMMET	7-26
*	20- 2
*	21- 4
*	21-27
*	21-30
*	22-25
*	22-26
*	25-21
*	25-26
*	27- 8
*	28- 8
*	34-23
GUARD, chain	22-12
GUIDE	7-16
GUIDE, cable	23- 8
*	24-50
GUIDE, intake valve (1ST O/S)	1- 2
GUIDE, ratchet wheel	14-24
GUIDE, sPring	22-46
GUIDE, stopPer 1	5-14
GUIDE, stopPer 2	5-16
HANDLEBAR	29- 1
HEADLIGHT UNIT ASSY	33- 1
HELMET HANGER ASSY	19-24
HOLDER, cable	23-20
*	24-29
HOLDER, cable 1	24-14
*	24-37
HOLDER, cable 2	24-38
HOLDER, damPer	23-11
HOLDER, handle lower	23- 6

PARTS NAME INDEX

DESCRIPTION	REF. NO.
HOLDER, handle upper	23- 5
HOLDER, lever 1	37- 1
HOLDER, lever 2	37-12
HORN	36- 6
HOSE	10-17
*	19-29
*	21-32
*	25-16
*	25-20
*	35-12
*	35-33
HOSE, oil 1	6-36
HOSE, oil 2	6-40
HOUSING, rotor	6-12
HUB, front	27- 1
HUB, rear	28- 1
IGNITION COIL ASSY	35-24
JET, main (#210)	8- 7
JET, main (#220)	8- 7
JET, main (#230)	8- 7
JET, Pilot (#30.0)	8-38
JOINT	15-21
JOINT, air cleaner 1	7-23
JOINT, carburetor	7- 1
JOINT, chain	5-13
*	28-51
KEY, straight	15-12
KEY, woodruff	3- 9
KICK CRANK ASSY	14- 1
KNOB, side cover 1	21- 6
*	21-11
KNOB, trip meter	32- 4
LEAD WIRE ASSY	12- 8
LENS ASSY	33- 3
LENS, flasher	31- 5
*	31-14
LENS, taillight	34- 5
LEVER	8-48
LEVER 1	37- 2
LEVER 2	37-11
LEVER, brake Pedal	30- 4
LEVER, camshaft	28-11
LEVER, camshaft 1	27-22
LEVER, cock	25- 7
LEVER, decompression	37- 7
LEVER, shift 2	17-20
LEVER, shift 3	17-22
LEVER, starter 1	8-42

PARTS NAME INDEX

DESCRIPTION	REF. NO.
LEVER, throttle valve	8-52
LUBRICATOR	13- 5
MAIN SWITCH ASSY	35-15
MIRROR ASSY (L.H)	29-23
MIRROR ASSY (R.H)	29-22
MUD GUARD COMP.	20-22
MUFFLER 1	9-12
NEEDLE	8-33
NEEDLE VALVE ASSY	8-40
NET, filter	19-33
NEUTRAL SWITCH ASSY	36- 2
NIPPLE, Grease	22-27
*	28-22
*	30-28
NOZZLE, main	8-31
NUT	1- 6
*	1- 7
*	1- 9
*	2- 8
*	3-12
*	4-12
*	5-23
*	8-24
*	9- 9
*	15-14
*	15-17
*	16-32
*	18- 3
*	20-14
*	21- 3
*	21-18
*	22-42
*	23-13
*	23-27
*	24-32
*	27-24
*	28-16
*	28-21
*	28-41
*	29-15
*	29-18
*	30-17
*	31-21
*	31-24
*	33-15
*	34-15
*	34-21
*	34-28

PARTS NAME INDEX

DESCRIPTION	REF. NO.
NUT, adjusting	15-29
NUT, castle	27-35
*	28-42
NUT, crown	9-38
*	20-19
*	31- 8
*	31-11
*	32-15
NUT, flange	23-17
NUT, self-locking	19- 4
*	19- 7
*	28-48
*	30-31
NUT, u	9-33
*	22-10
*	37- 4
*	37-10
*	37-16
NUT, wing	30-14
O-RING	1- 4
*	1-23
*	2- 2
*	5-18
*	5-24
*	6-24
*	6-27
*	6-37
*	6-41
*	8- 5
*	8- 8
*	8-56
*	8-60
*	8-72
*	10-22
*	11-13
*	16-29
*	27-38
*	28-24
*	28-25
*	32-20
*	38- 2
*	38- 7
*	38- 8
*	38-10
*	38-16
*	38-17
OIL SEAL	1-13
*	1-31
*	3- 8

PARTS NAME INDEX

DESCRIPTION	REF. NO.
OIL SEAL	6-11
*	11- 8
*	11-10
*	14-32
*	15-26
*	16-27
*	18- 9
*	22- 8
*	22-30
*	24- 4
*	27- 6
*	27-14
*	27-15
*	28- 5
*	38-26
*	38-27
*	38-28
*	38-29
*	38-30
*	38-31
*	38-32
*	38-33
*	38-34
*	38-35
OIL SEAL KIT	38-25
PAD, battery	21-26
PEDAL, brake	30- 1
PEDAL, shift	18-13
PIN	8-11
*	8-12
*	30-13
PIN, clevis	15-22
*	21-24
*	22-41
*	30- 9
PIN, cotter	15-23
*	22-43
*	27-36
*	28-43
*	28-49
*	30-11
PIN, crank 1	3- 4
PIN, dowel	1- 3
*	2- 5
*	2-11
*	5- 3
*	6- 4
*	6-13

PARTS NAME INDEX

DESCRIPTION	REF. NO.
PIN, dowel	10- 2
*	11-16
*	17- 2
*	17- 7
PIN, float	8-29
PIN, piston	3-20
PIN, spring	21- 7
*	21-12
*	30-27
PIN, straight	17-16
PIPE	8-15
*	8-16
*	8-32
PIPE, delivery 1	6-33
PIPE, exhaust 1	9- 1
PIPE, joint	7-22
PIPE, outlet	9-14
PISTON (STD)	3-18
*	3-18
PISTON (1ST O/S 0.25MM)	3-18
PISTON (2ND O/S 0.50MM)	3-18
PISTON (3RD O/S 0.75MM)	3-18
PISTON (4TH O/S 1.00MM)	3-18
PISTON RING SET (STD)	3-19
PISTON RING SET (1ST O/S)	3-19
PISTON RING SET (2ND O/S)	3-19
PISTON RING SET (3RD O/S)	3-19
PISTON RING SET (4TH O/S)	3-19
PLATE	5- 5
PLATE, bearing cover	10-15
*	10-23
PLATE, cam chain sprocket	5-11
PLATE, clutch 2	15- 6
PLATE, element	7-18
PLATE, element fitting	7-17
PLATE, friction	15- 5
PLATE, lever fitting	25- 9
PLATE, Pressure 1	15- 7
PLATE, side 1	17- 3
PLATE, stopper	17- 5
PLATE, thrust 1	15-15
PLATE, thrust 2	15- 3
PLUG	16-14
*	36- 4
PLUG CAP ASSY	35-27
*	35-27
PLUG, drain	8-71
*	24-36

PARTS NAME INDEX

DESCRIPTION	REF. NO.
PLUG, screw	8- 6
PLUG, sPark (NGK BP-7ES)	1-25
PLUG, straight screw	1-20
*	6-20
*	11-21
PLUG, viewer	1-19
PLUNGER, starter	8-58
PRIMARY DRIVEN GEAR COMP.(77T)	15- 2
PROTECTOR, exhaust PiPe	9- 2
PROTECTOR, muffler 2	9-21
PROTECTOR, engine	19-20
PROTECTOR, muffler 1	9-17
PULLER, chain 1	28-39
RACE, ball 1	23- 1
*	23-23
RACE, ball 2	23-21
*	23-24
REAR ARM COMP.	22- 1
REAR FENDER COMP.	20- 7
REAR FLASHER LIGHT ASSY 1	31-13
REAR FOOTREST ASSY 1	22-36
RECTIFIER ASSY	35- 1
*	35- 1
REFLECTOR	31- 3
*	31-16
REFLECTOR, rear 1	34-26
RETAINER, valve sPring	4- 7
RIM (1.60-21)	27-25
RIM (1.85-18)	28-29
RING	8-63
RING, leaf	29- 4
RING, retaining	33- 2
RING, snap	24- 7
RING, stop	27-37
*	32-19
RIVET	19-41
ROD, brake	30- 7
ROD, chain tensioner	5-19
ROD, connecting	3- 6
ROD, Joint	30- 8
ROD, Push 1	15-18
ROD, Push 2	15-19
ROTOR ASSY	12- 2
ROTOR ASSY 1	6-14
ROTOR ASSY 2	6-15
SCREW	5-22
*	6-28
*	8-18

PARTS NAME INDEX

DESCRIPTION	REF. NO.
SCREW	8-53
*	8-70
*	13- 3
*	17-12
*	18- 2
*	25-14
*	34- 9
SCREW, adjusting	15-28
SCREW, air adjusting	8-55
SCREW, bind	9- 3
*	9-18
*	9-22
SCREW, boot band	24-18
SCREW, countersunk	33-16
SCREW, flat head	10-16
*	10-24
*	17- 4
*	19-25
SCREW, Guide	8-43
SCREW, hexagon	30-16
SCREW, lens fitting	34- 6
SCREW, lever fitting	25-10
SCREW, Pan head	5-15
*	6- 9
*	6-10
*	7- 8
*	8-13
*	8-25
*	8-35
*	8-45
*	8-65
*	10-19
*	10-27
*	12- 5
*	12- 7
*	12-10
*	12-11
*	13- 7
*	21-15
*	21-17
*	22-18
*	22-20
*	22-31
*	24-47
*	25-31
*	35- 2
*	35- 5
*	35-20

PARTS NAME INDEX

DESCRIPTION	REF. NO.
SCREW, Pan head	35-25
*	35-36
*	37- 9
*	37-20
*	37-22
*	37-23
SCREW, Panhead tapping	19-32
*	31- 6
*	31-18
SCREW, throttle stop	8-27
SCREW, valve adjusting	4-11
SCREW, with washer	15- 9
SEAL	8-21
SEAL, box	20-23
SEAL, camshaft	28-14
SEAL, dust	24- 8
SEAL, Guard	22- 7
SEAL, hub dust	28-27
SEAL, steering	23- 2
SEAL, valve stem	4- 6
*	38- 9
SEAT BAND ASSY	26-10
SEAT, base	34- 8
SEAT, battery	35-11
SEAT, check ball	6-30
SEAT, sPring	22-48
SEAT, sPring upper	24-20
SEAT, valve sPring	4- 5
SEPARATOR, oil	10- 8
SHAFT, Pivot	22- 9
SHAFT, Pump	6- 3
SHAFT, rocker	4-10
SHAFT, tensioner	5-17
SHAFT, throttle lever	8-20
SHIFT CAM ASSY	17- 1
SHIFT SHAFT COMP.	18- 1
SHIM (0.3T)	22- 5
SHIM 2 (0.5T)	16- 2
SHIM, camshaft	27-21
*	28-13
SHOCK ABSORBER ASSY, rear	22-45
SIDE COVER LOCK ASSY	21- 2
SILENCER, intake 1	7-20
SILENCER, intake 2	7-21
SOCKET	33- 5
SOCKET CORD ASSY	32- 7
SOCKET, meter	32- 3
SPACER	8-19

PARTS NAME INDEX

DESCRIPTION	REF. NO.
SPACER	14-20
*	15-10
*	22-22
*	24-21
SPACER, bead	27-30
*	28-34
SPACER, bearing	27- 3
*	28- 2
SPACER, engine mount	10-21
SPEEDOMETER ASSY	32- 1
SPEEDOMETER CABLE ASSY	32-17
SPINDLE, taper	24-11
SPOKE SET, front	27-26
SPOKE SET, rear	28-30
SPRING	8-68
*	22-47
SPRING, air adjusting	8-57
SPRING, belleville	15-16
SPRING, compression	4- 3
*	4- 4
*	5-20
*	6-32
*	14- 4
*	14-11
*	15- 8
*	17-11
*	30-12
SPRING, conical	19-38
SPRING, diaphragm	8- 9
SPRING, front fork	24-19
SPRING, plunger	8-59
SPRING, reflector	33- 6
SPRING, tension	27-10
*	28-10
*	30-32
SPRING, throttle stop	8-28
*	8-44
SPRING, throttle valve	8-47
SPRING, torsion	1-27
*	14-19
*	15-24
*	17-21
*	18- 4
*	22-33
*	30- 5
*	30-22
*	30-23
SPROCKET, cam chain (17T)	5-10

PARTS NAME INDEX

DESCRIPTION	REF. NO.
SPROCKET, cam chain (34T)	5- 2
SPROCKET, drive (16T)	16-30
SPROCKET, driven (40T)	28-18
SPROCKET, driven (42T)	28-18
SPROCKET, driven (43T)	28-18
SPROCKET, driven (44T)	28-18
SPROCKET, driven (46T)	28-18
STAND, side	30-29
STAY, engine mount	19-10
STAY, engine mount rear	19-14
STAY, engine 2	19-18
STAY, flasher	31-19
*	31-22
STAY, flasher 1	31- 7
*	31-10
STAY, muffler	9-31
STEERING LOCK ASSY	19-37
STOP SWITCH ASSY	36- 1
STOPPER	14-26
STOPPER, cam	17-10
STOPPER, hub	28-26
STOPPER, screw	18- 7
STRAINER, oil	6-16
SWITCH, handle 1	37-19
SWITCH, handle 4	37-21
TACHOMETER ASSY	32- 5
TACHOMETER CABLE ASSY	32-18
TAILLIGHT UNIT ASSY	34- 1
TENSIONER	22-29
THROTTLE CABLE ASSY	29- 6
TIRE (3.00-21)	27-27
TIRE (4.00-18)	28-31
TOOL KIT	21-36
TOP, mixing chamber	8-51
TUBE (2.75-21)	27-28
TUBE (3.75-18)	28-32
TUBE, inner 1	24-13
TUBE, outer 1	24- 2
TUBE, outer 2	24- 3
TUBE, throttle guide	29- 3
UNDER BRACKET COMP.	24-25
VALVE	25- 5
VALVE, exhaust	4- 2
VALVE, intake	4- 1
VALVE, throttle 1	8-37
VOLTAGE REGULATOR ASSY	35- 4
WASHER	8-17
*	8-22

PARTS NAME INDEX

DESCRIPTION	REF. NO.
WASHER	8-54
*	8-69
*	9-27
*	9-28
*	25- 6
*	25-27
*	28-20
*	29- 7
*	34-20
WASHER, conical spring	15-13
*	19- 8
*	19-40
*	22-11
WASHER, lock	14-25
*	16-31
*	18- 5
*	18- 8
WASHER, needle valve	8-39
WASHER, oil seal	24- 5
WASHER, outer tube	24-10
WASHER, plain	13- 8
*	20-20
*	28-47
*	33-13
WASHER, plate	1- 8
*	1-10
*	1-14
*	2- 4
*	3-10
*	3-16
*	3-17
*	5- 6
*	6- 5
*	6- 7
*	7-10
*	7-14
*	9-34
*	9-35
*	9-37
*	13-11
*	14- 5
*	14-14
*	14-22
*	14-23
*	14-29
*	15-27
*	15-30
*	16- 4

PARTS NAME INDEX

DESCRIPTION	REF. NO.
WASHER, Plate	16- 9
*	16-11
*	16-20
*	16-22
*	16-24
*	17- 8
*	18-10
*	19- 9
*	19-13
*	19-17
*	19-23
*	20- 4
*	20-15
*	20-21
*	20-24
*	21- 8
*	21-13
*	21-19
*	22-24
*	22-35
*	22-40
*	22-44
*	23- 9
*	23-10
*	24-28
*	24-42
*	24-49
*	25-15
*	25-23
*	26- 9
*	27-16
*	27-17
*	30-10
*	30-26
*	30-33
*	31- 9
*	31-12
*	32-11
*	34-12
*	34-13
*	35- 3
*	35- 7
*	35-19
*	35-26
*	37-14
WASHER, Protector	9- 4
*	9- 5
*	9-19

PARTS NAME INDEX

DESCRIPTION	REF. NO.
WASHER, Protector	9-20
*	9-23
*	9-24
WASHER, sPecial	32-14
*	34-24
WASHER, sPring	3-11
*	7- 9
*	7-13
*	7-29
*	8-14
*	8-23
*	8-26
*	8-36
*	8-46
*	8-66
*	9-16
*	9-36
*	18- 6
*	19-12
*	19-16
*	19-22
*	20- 6
*	20-11
*	20-18
*	20-26
*	21-16
*	21-20
*	21-29
*	22-14
*	22-16
*	22-19
*	22-21
*	22-32
*	23-12
*	24-31
*	24-41
*	24-48
*	25-25
*	25-29
*	25-32
*	26- 8
*	30- 3
*	31-20
*	31-23
*	32-10
*	33-14
*	34-14
*	34-19

PARTS NAME INDEX

DESCRIPTION	REF. NO.
WASHER, sPring	34-27
*	35- 6
*	35-21
*	35-37
*	36- 8
*	37- 6
*	37-18
WASHER, wave	9- 6
*	25- 8
WHEEL, ratchet	14-10
WIRE HARNESS ASSY	35-22
WIRE, earth lead	23-28
WIRE, lead	13- 4
*	35- 8
WIRE, minus lead	35-31

COPY RIGHT: ALL RIGHTS RESERVED
NO PART OF THIS PUBLICATION MAY BE
REPRODUCED WITHOUT PERMISSION.



YAMAHA

YAMAHA MOTOR CO., LTD.
2500 SHINGAI IWATA-SHI SHIZUOKA-KEN JAPAN

PRINTED IN JAPAN

First edition Jan., 1981

