



PARTS CATALOGUE

YFM70RSXJ (2LSF) U.S.A.



1T2LS-110E5

()

YFM70RSXJ
PARTS CATALOGUE
©2017 by Yamaha Motor Co., Ltd.
1st edition, May 2017
All rights reserved.
Any reprinting or unauthorized use
without the written permission of
Yamaha Motor Co., Ltd.
is expressly prohibited.
Printed in Japan.

FOREWORD

This Parts Catalogue is related to the parts for the model(s) on the cover page. When you are ordering replacement parts, please refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after the issue of the Parts Catalogue will be announced in the Parts News.
It is advisable that you make the necessary corrections to the Parts Catalogue according to the Parts News.

2. Abbreviations

The following abbreviations are used in this Parts Catalogue.

“UR” Use specified parts number.

“UN” Use as many as needed.

“AP” Alternate Parts

“LM” Locally Made (Parts need to be ordered locally)

“F#” Frame No. (Applicable machine No.)

“O/S” Over Size

3. The number of components for assembly

- Parts, which are to be supplied in an assembly, are listed with a dot (.) in front of the part name as shown below.
- The numeral appearing to the right of each component part indicates the quantity of parts for each assembly unit.

PART NO.	DESCRIPTION	Q'TY	REMARKS
2F5-83310-60	FRONT FLASHER LIGHT ASSY	2	
115-83311-60	.BULB (6V-18W)	1	

4. Applicable colours of graphics are represented in the “REMARKS” as shown below.

PART NO.	DESCRIPTION	Q'TY	REMARKS
2N4-24110-00-X5	FUEL TANK COMP.	2	MXR
3J1-24240-10	.GRAPHIC, FUEL TANK	1	FOR MXR

5. Note that the illustrations for reference in finding parts numbers are not to be used for assembling. When assembling, please use the applicable service manual.



6. The asterisk (*) before a reference number indicates modified items after the first edition.

FOREWORD

7. Applicable Serial No.

Engine Serial No.

Frame Serial No.

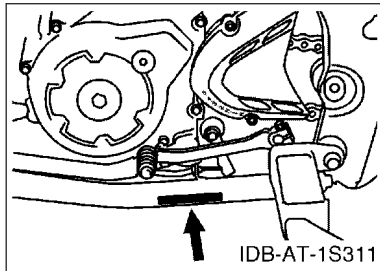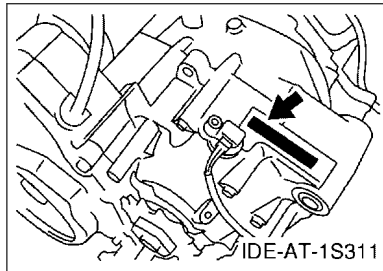

8. Applicable Colour Code (The (*) mark shows Model colour.)

Abbreviation	Colour Name	Colour Code
DPBSE(*)	DEEP PURPLISH BLUE SOLID E	0583


9. Quantity Column Information

Column No.	Name Of Q'ty Column	Destination
1	USA	U.S.A.

MODEL LABEL

- (1) A label called “Model Label” is affixed in the location as indicated in (3) below. When using this parts catalogue, please be sure to cross-reference the “model code – production code No.” in the catalogue with the “model code – production code No.” indicated on the Model Label affixed onto the product concerned.


- ## (2) “Model Label” Indication

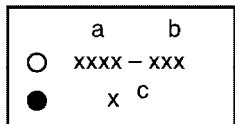


a: Model Type Code

b: Production Code No.

c: Colouring Type

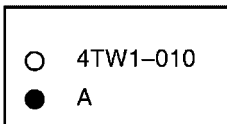

- ### (3) Model Label Affixing Location

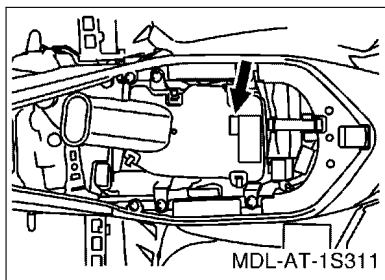

- #### (4) Colouring Information

[illegible]

- (5) Model Code – Production Code Number of Model Listed in This Parts Catalogue

[illegible]

CONTENTS

ENGINE

CYLINDER HEAD.....	1
CYLINDER.....	2
CRANKSHAFT & PISTON.....	3
VALVE.....	4
CAMSHAFT & CHAIN.....	5
WATER PUMP.....	6
RADIATOR & HOSE.....	7
OIL PUMP.....	8
INTAKE.....	10
THROTTLE BODY ASSY 1.....	12
EXHAUST.....	13
CRANKCASE.....	14
CRANKCASE COVER 1.....	15
STARTER.....	16
CLUTCH.....	17
TRANSMISSION.....	19
SHIFT CAM & FORK.....	21


CHASSIS

FRAME.....	23
FRONT FENDER.....	25
REAR FENDER.....	26
OIL TANK.....	28
REAR ARM.....	29
REAR SUSPENSION.....	32
STEERING.....	33
FRONT SUSPENSION & WHEEL.....	34
FUEL TANK.....	36
SEAT.....	38
FRONT WHEEL.....	39
FRONT BRAKE CALIPER.....	40
REAR WHEEL.....	42
REAR BRAKE CALIPER.....	43
STEERING HANDLE & CABLE.....	44
FRONT MASTER CYLINDER.....	46
STAND & FOOTREST.....	47
REAR MASTER CYLINDER.....	48
GUARD.....	50
GENERATOR.....	51

STARTING MOTOR.....	52
HEADLIGHT.....	53
TAILLIGHT.....	54
HANDLE SWITCH & LEVER.....	55
ELECTRICAL 1.....	56
GRAPHICS.....	59
EMBLEM & LABEL 1.....	60

INDEX

NUMERICAL INDEX.....	61
----------------------	----

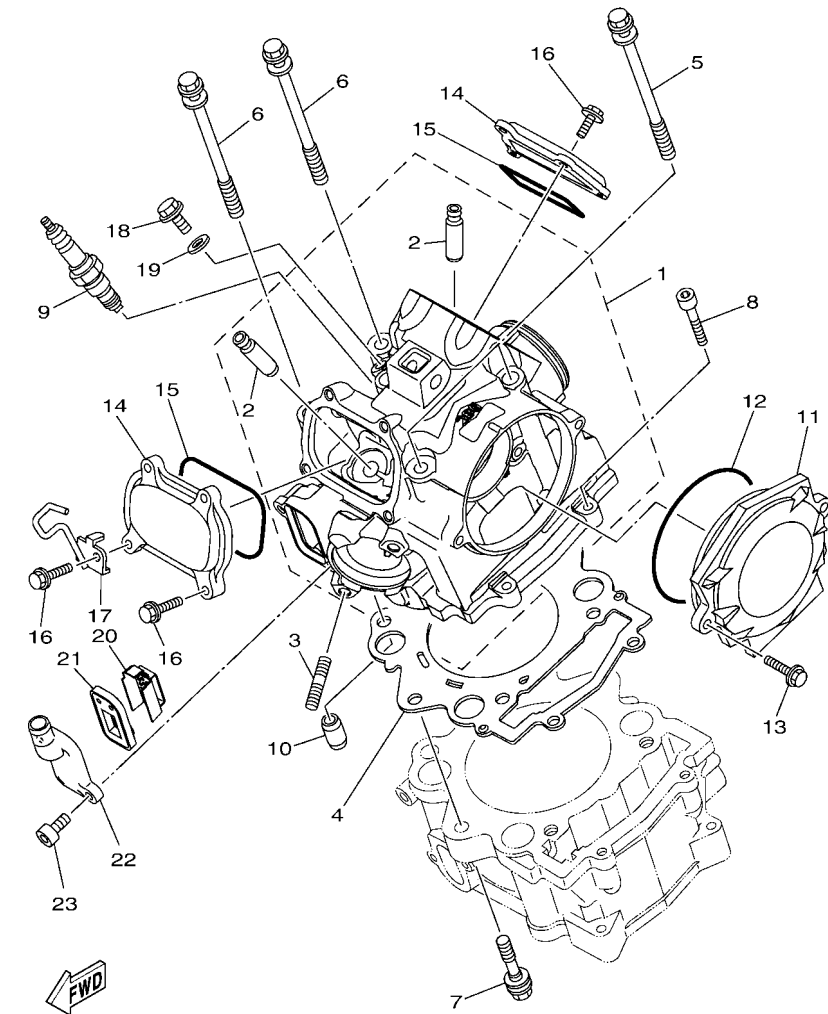


2LS1110-P010

FIG. 1 CYLINDER HEAD

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	2LS-11101-09	CYLINDER HEAD ASSY	1					
2	4G0-11133-11	.GUIDE, VALVE 1	4					
3	95612-08625	BOLT, STUD	2					
4	3B4-11181-00	GASKET, CYLINDER HEAD 1	1					
5	90109-09003	BOLT	2					
6	90109-09002	BOLT	2					
7	90109-09005	BOLT	2					
8	91312-06030	BOLT, HEXAGON SOCKET HEAD	2					
9	94701-00330	PLUG, SPARK (NGK CR8E)	1					
10	93612-16254	PIN, DOWEL	2					
11	1S3-11185-10	COVER, CYLINDER HEAD SIDE 3	1					
12	93210-96601	O-RING	1					
13	95022-06020	BOLT, FLANGE	2					
14	1S3-11186-00	COVER, CYLINDER HEAD SIDE 2	2					
15	93210-78544	O-RING	2					
16	95022-06020	BOLT, FLANGE	8					
17	1S3-1131E-00	HOLDER 1	1					
18	90401-08004	BOLT, UNION	1					
19	90430-08119	GASKET	1					
20	2BG-1482K-00	PLATE	1					
21	5JW-14890-00	REED VALVE ASSY	1					
22	5JW-14889-00	CAP, CASE	1					
23	90110-06175	BOLT, HEXAGON SOCKET HEAD	2					

FIG. 2 CYLINDER

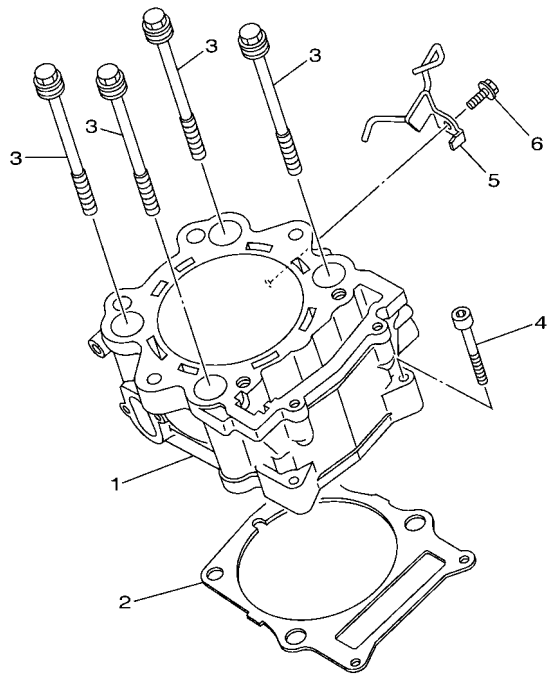[illegible]

1S31100-E020

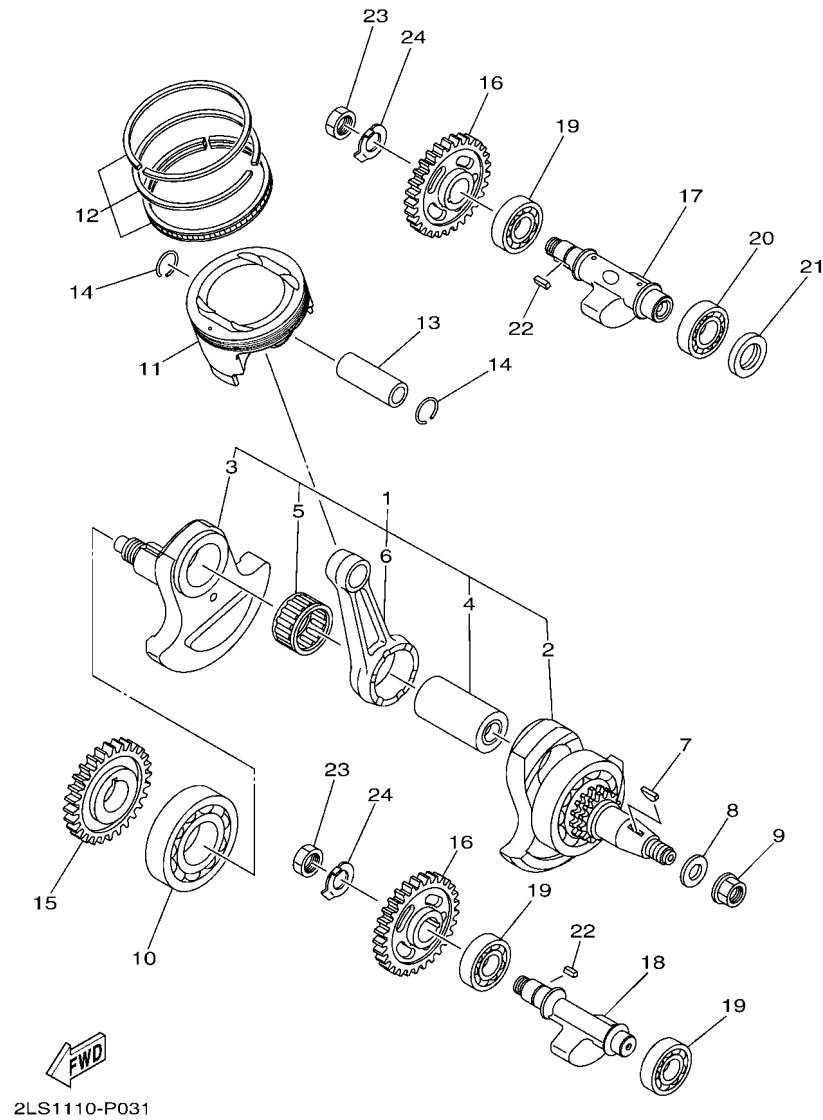


FIG. 3 CRANKSHAFT & PISTON

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	2LS-11400-00	CRANKSHAFT ASSY	1					
2	1S3-11401-09	.CRANK SUB ASSY 1	1					
3	1S3-11422-00	.CRANK 2	1					
4	1S3-11681-00	.PIN, CRANK 1	1					
5	93310-84037	.BEARING	1					
6	2BG-11651-00	.ROD, CONNECTING	1					
7	90280-05001	KEY, WOODRUFF	1					
8	90201-16013	WASHER, PLATE	1					
9	90179-16004	NUT	1					
10	93306-30810	BEARING	1					
11	2BG-11631-00	PISTON (STD)	1					
12	1S3-11603-10	PISTON RING SET (STD)	1					
13	5VK-11633-00	PIN, PISTON	1					
14	93450-24154	CIRCLIP	2					
15	1S3-11536-10	GEAR, DRIVE	1					
16	1S3-11531-10	GEAR, BALANCE WEIGHT	2					
17	2LS-11454-00	WEIGHT 1	1					
18	2LS-11464-00	WEIGHT 2	1					
19	93306-20481	BEARING	3					
20	93306-00502	BEARING	1					
21	93101-25106	OIL SEAL	1					
22	90282-05005	KEY, STRAIGHT	2					
23	90170-16326	NUT	2					
24	90215-16221	WASHER, LOCK	2					

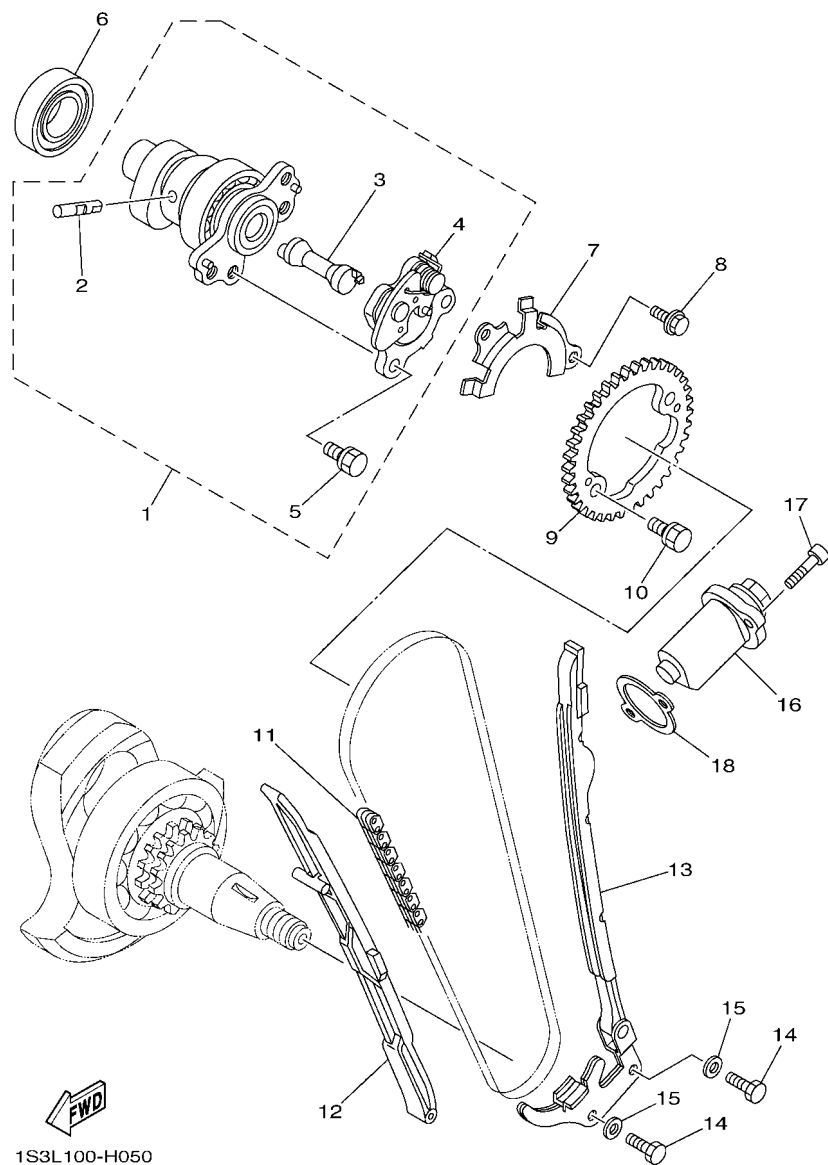


FIG. 5 CAMSHAFT & CHAIN

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	2LS-12170-00	CAMSHAFT ASSY 1	1					
2	5VK-12284-00	.PIN, DECOMPRESSION LEVER	1					
3	1S3-12290-00	.LEVER, DECOMPRESSION SPRING	1					
4	1S3-12280-01	.DECOMPRESSION ASSY	1					
5	90105-07006	.BOLT, FLANGE	2					
6	93306-07209	BEARING	1					
7	5VK-1111F-00	PLATE	1					
8	90105-06078	BOLT, FLANGE	2					
9	1S3-12176-00	SPROCKET, CAM CHAIN	1					
10	90105-07006	BOLT, FLANGE	2					
11	94591-57126	CHAIN (98XRH2010-126M)	1					
12	5VK-12231-00	GUIDE, STOPPER 1	1					
13	1S3-12241-00	GUIDE, STOPPER 2	1					
14	97022-06016	BOLT, HEXAGON	2					
15	92902-06600	WASHER, PLATE	2					
16	3TB-12210-00	TENSIONER ASSY, CAM CHAIN	1					
17	91312-06025	BOLT, HEXAGON SOCKET HEAD	2					
18	4DW-12213-00	GASKET, TENSIONER CASE	1					

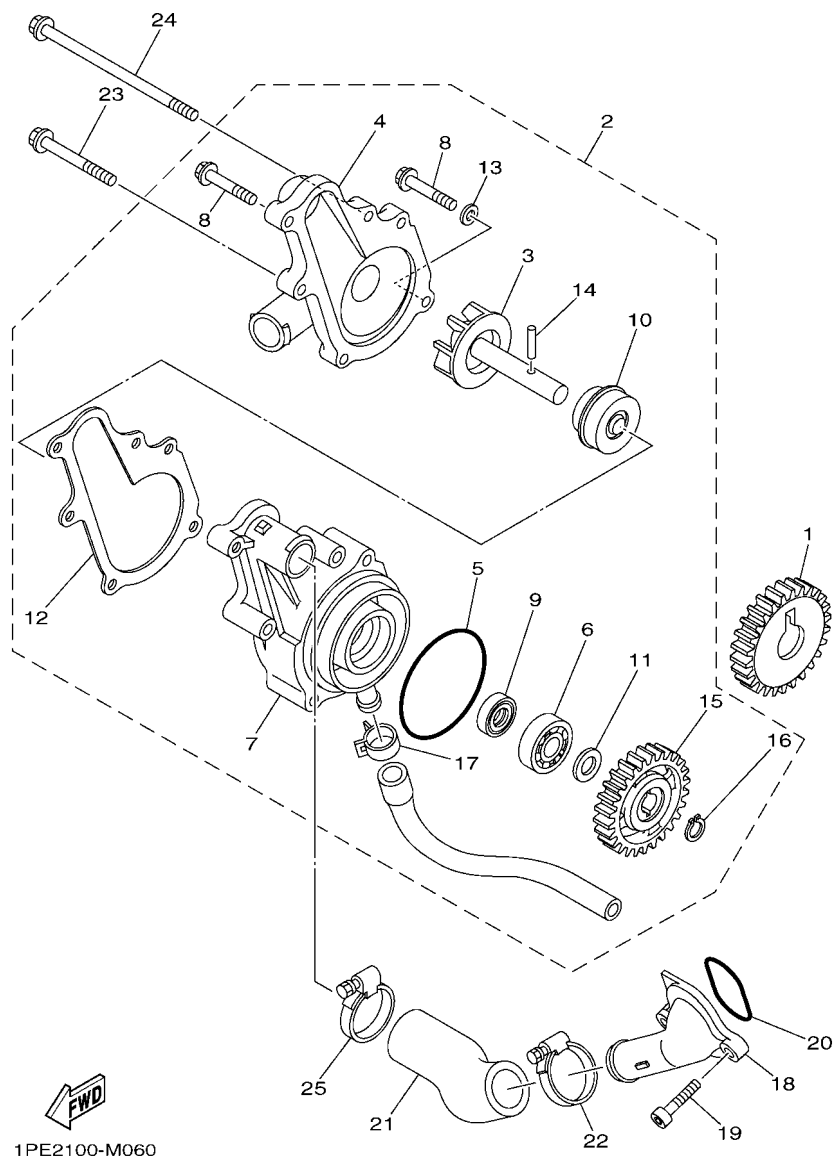


FIG. 6 WATER PUMP

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	1S3-12436-00	GEAR, DRIVE	1					
2	1S3-12420-00	WATER PUMP ASSY	1					
3	1S3-12450-00	.IMPELLER SHAFT ASSY	1					
4	1S3-12422-00	.COVER, HOUSING	1					
5	93210-61750	.O-RING	1					
6	93306-00106	.BEARING	1					
7	1S3-12421-00	.HOUSING, WATER PUMP	1					
8	95022-06025	.BOLT, FLANGE	3					
9	93101-12173	.OIL SEAL	1					
10	4C8-12438-00	.SEAL, MECHANICAL	1					
11	90201-12541	.WASHER, PLATE	1					
12	1S3-12428-00	.GASKET, HOUSING COVER 2	1					
13	90430-06014	.GASKET	1					
14	93603-16219	.PIN, DOWEL	1					
15	5VK-12459-00	.GEAR, IMPELLER SHAFT	1					
16	99009-12400	.CIRCLIP	1					
17	90467-13062	.CLIP	1					
18	1S3-12469-00	JOINT 1	1					
19	91312-06020	BOLT, HEXAGON SOCKET HEAD	2					
20	93210-33786	O-RING	1					
21	1S3-12577-00	HOSE 2	1					
22	90450-32015	HOSE CLAMP ASSY	1					
23	95022-06050	BOLT, FLANGE	2					
24	95022-06110	BOLT, FLANGE	1					
25	90450-32015	HOSE CLAMP ASSY	1					

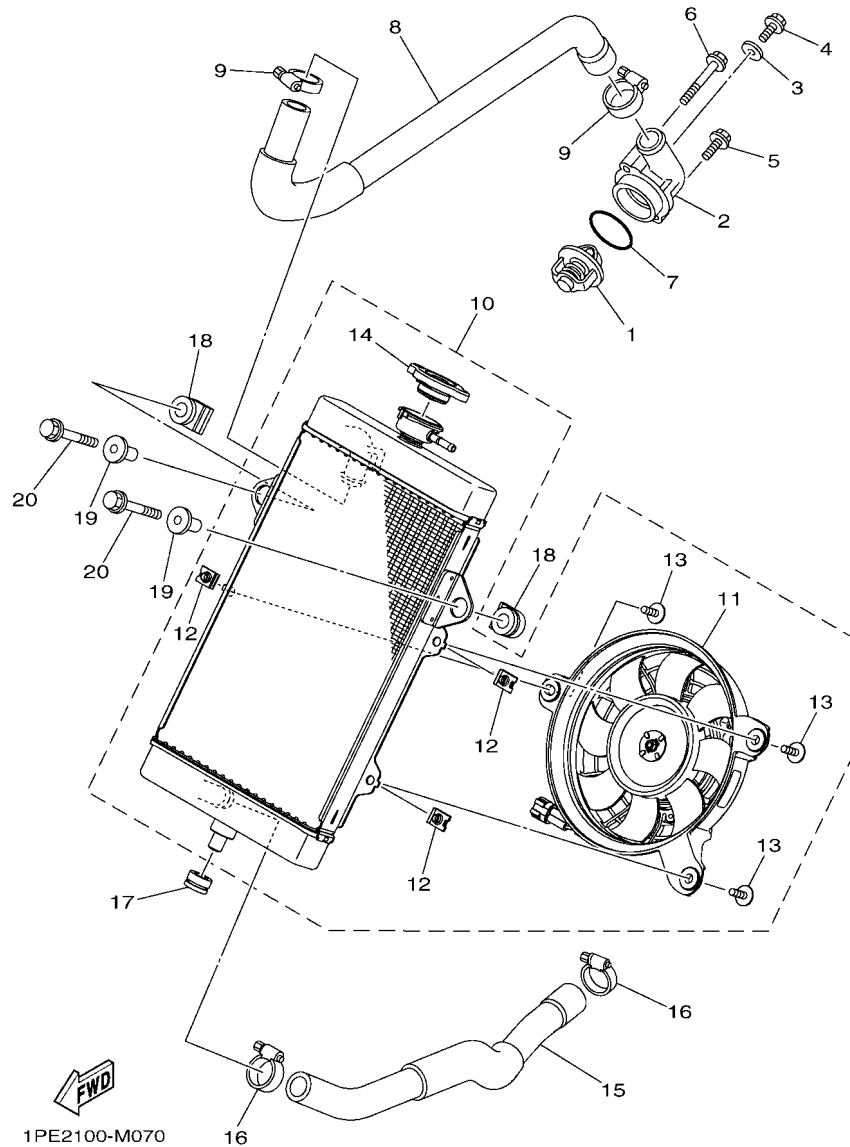


FIG. 7 RADIATOR & HOSE

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	5VK-12410-00	THERMOSTAT ASSY	1					
2	1S3-12413-00	COVER, THERMOSTAT	1					
3	90430-06014	GASKET	1					
4	95022-06010	BOLT, FLANGE	1					
5	95022-06020	BOLT, FLANGE	1					
6	95022-06045	BOLT, FLANGE	1					
7	93210-41042	O-RING	1					
8	1PE-E2578-00	HOSE 3	1					
9	90467-26189	CLIP	2					
10	1PE-E2460-01	RADIATOR ASSY	1					
11	1PE-E2405-00	.BLOWER ASSY	1					
12	1PE-E2535-00	.PLATE	3					
13	1PE-E2675-00	.BOLT, BLOWER HOLDING	3					
14	1XD-E2462-00	.CAP, RADIATOR	1					
15	1PE-E2579-00	HOSE 4	1					
16	90450-32015	HOSE CLAMP ASSY	2					
17	90480-18330	GROMMET	1					
18	1S3-12465-00	DAMPER, RADIATOR	2					
19	90387-06166	COLLAR	2					
20	95802-06030	BOLT, FLANGE	2					

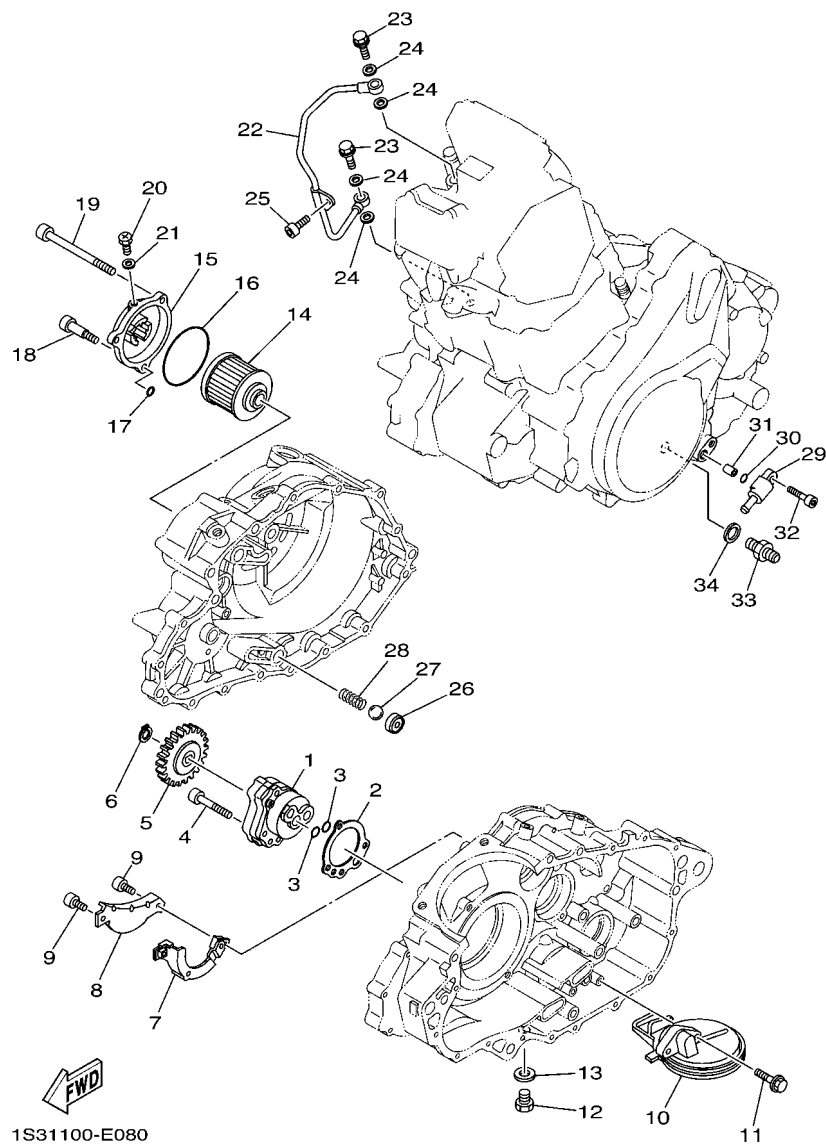


FIG. 8 OIL PUMP

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	5LP-13300-00	OIL PUMP ASSY	1					
2	5LP-13329-00	GASKET, PUMP COVER	1					
3	93210-13361	O-RING	2					
4	91312-06035	BOLT, HEXAGON SOCKET HEAD	3					
5	3AJ-13325-00	GEAR, PUMP DRIVEN	1					
6	99009-11400	CIRCLIP	1					
7	1S3-13356-00	COVER, PUMP 2	1					
8	1S3-13327-00	COVER, PUMP GEAR	1					
9	90110-05030	BOLT, HEXAGON SOCKET HEAD	2					
10	1S3-13410-00	STRAINER HOUSING ASSY	1					
11	90105-06082	BOLT, FLANGE	2					
12	90340-14029	PLUG, STRAIGHT SCREW	1					
13	214-11198-01	GASKET	1					
14	4X7-13440-01	ELEMENT ASSY, OIL CLEANER	1					
15	1S3-13447-00	COVER, OIL ELEMENT	1					
16	93210-64297	O-RING	1					
17	93210-07135	O-RING	1					
18	90109-06169	BOLT	1					
19	91312-06095	BOLT, HEXAGON SOCKET HEAD	2					
20	90149-05018	SCREW	1					
21	90430-05126	GASKET	1					
22	1S3-13171-00	PIPE, DELIVERY 2	1					
23	90401-10024	BOLT, UNION	2					
24	90430-10188	GASKET	4					
25	91312-06012	BOLT, HEXAGON SOCKET HEAD	1					
26	583-13113-00	SEAT, CHECK BALL	1					
27	93503-08007	BALL	1					

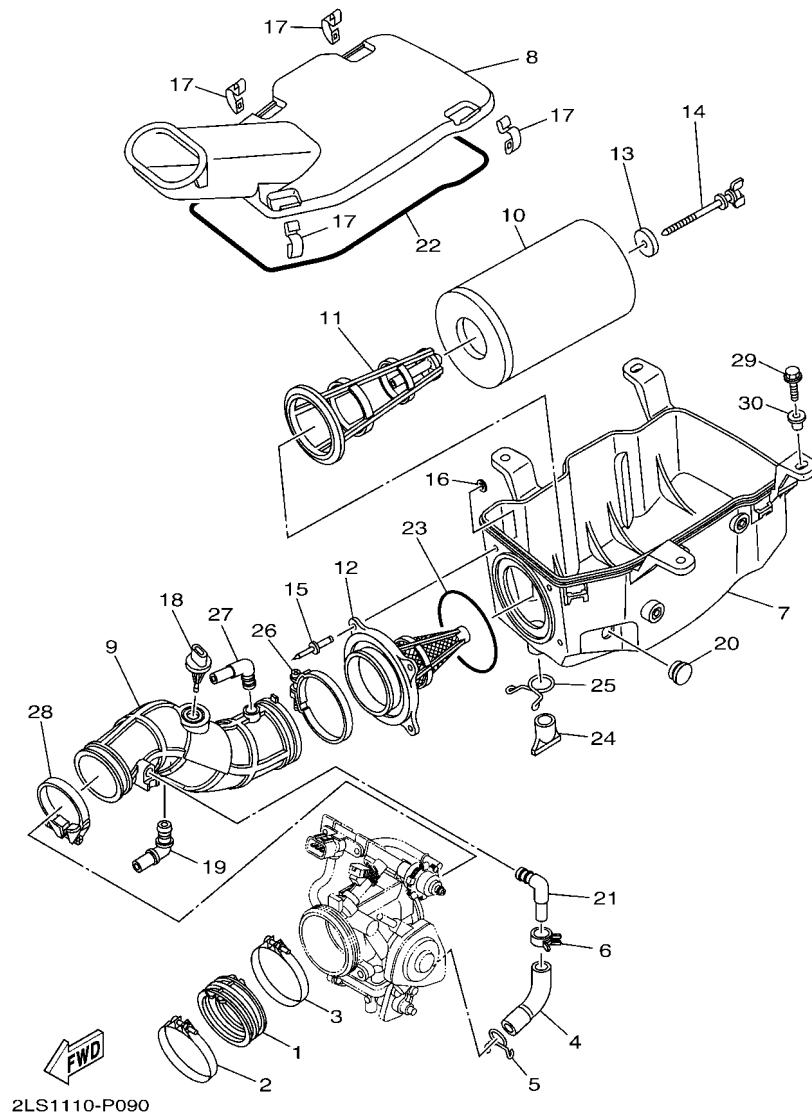


FIG. 9 INTAKE

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	5VK-13586-00	JOINT, CARBURETOR 1	1					
2	90450-72003	HOSE CLAMP ASSY	1					
3	90450-72003	HOSE CLAMP ASSY	1					
4	1PE-E3545-00	HOSE 1	1					
5	90467-160A4	CLIP	1					
6	90467-15012	CLIP	1					
7	1S3-14411-00	CASE, AIR CLEANER 1	1					
8	1S3-14412-01	CAP, CLEANER CASE 1	1					
9	2LS-14453-00	JOINT, AIR CLEANER 1	1					
10	1S3-14451-00	ELEMENT, AIR CLEANER	1					
11	1S3-14458-00	GUIDE	1					
12	1S3-14459-01	HOLDER, GUIDE	1					
13	90209-06096	WASHER	1					
14	90122-06010	BOLT, WING	1					
15	90267-48138	RIVET, BLIND	4					
16	90201-04028	WASHER, PLATE	4					
17	5GH-14436-00	HOOK	4					
18	5VU-85886-00	SENSOR, AIR TEMPRATURE	1					
19	5KM-14419-00	PIPE	1					
20	90338-18266	PLUG	1					
21	31A-14419-00	PIPE	1					
22	10M-14457-00	SEAL	1					
23	1S3-14457-00	SEAL	1					
24	59V-14457-00	SEAL	1					
25	90467-220A1	CLIP	1					
26	90460-75020	CLAMP, HOSE	1					
27	5TJ-14419-00	PIPE	1					

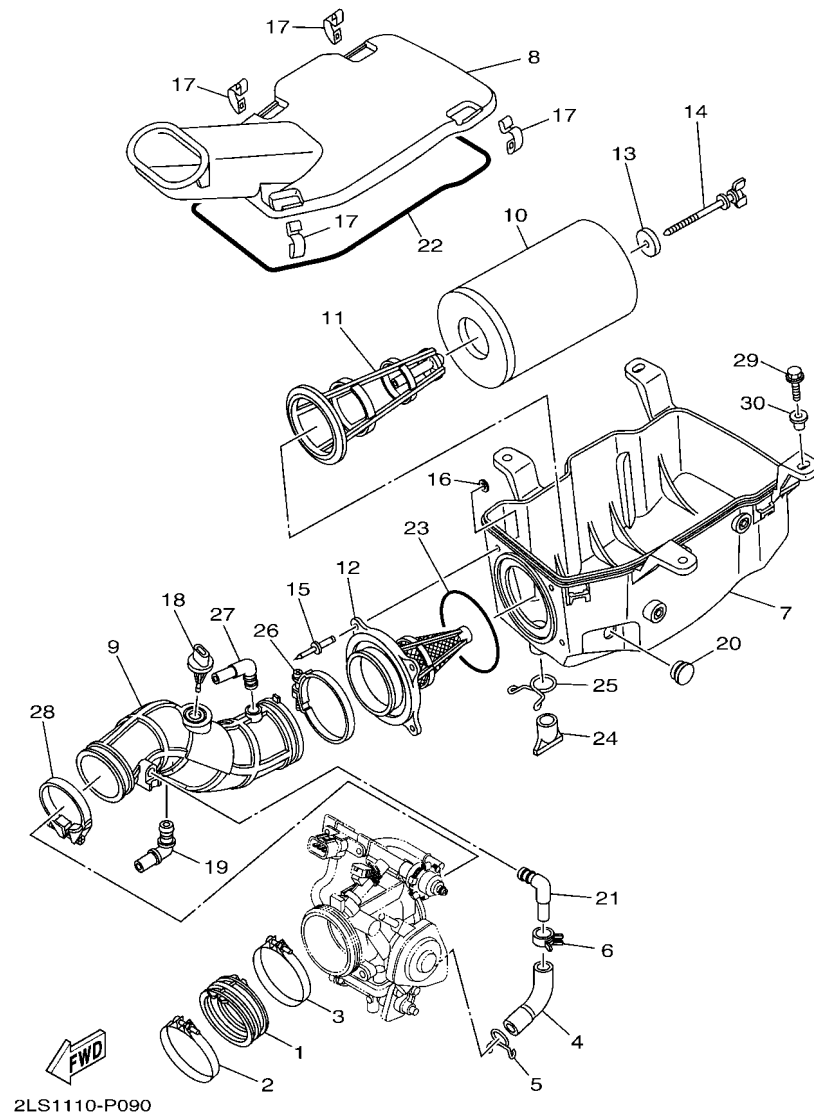


FIG. 9 INTAKE

[illegible]


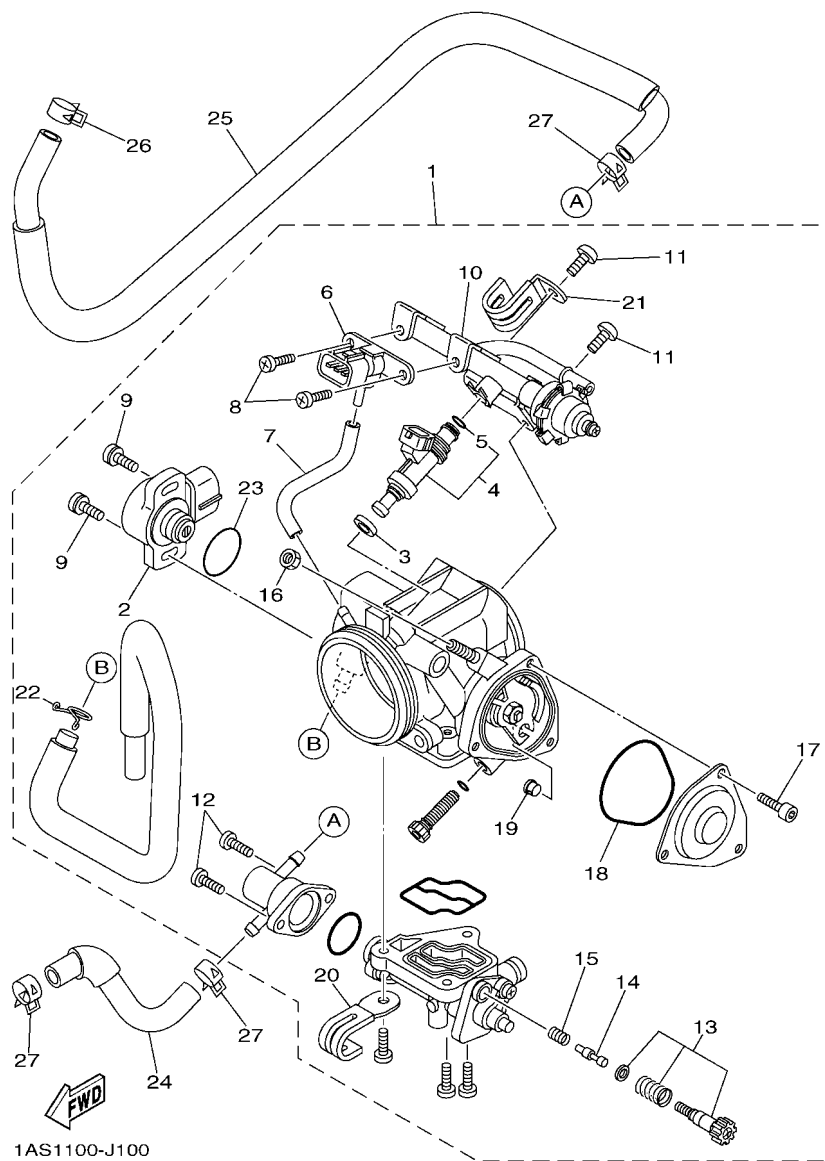


FIG. 10 THROTTLE BODY ASSY 1

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	1S3-13750-10	THROTTLE BODY ASSY	1					
2	8GL-85885-00	.THROTTLE SENSOR ASSY	1					
3	8FP-13556-00	.RUBBER, INJECTOR	1					
4	5VK-13761-00	.INJECTOR	1					
5	5PS-14147-00	.O-RING	1					
6	1C7-82380-00	.SENSOR, PRESSURE	1					
7	5JW-14348-00	.PIPE 1	1					
8	98507-06010	.SCREW, PAN HEAD	2					
9	8CC-14216-10	.SCREW	2					
10	1S3-13160-00	.DELIVERY PIPE ASSY 1	1					
11	98507-06012	.SCREW, PAN HEAD	2					
12	98507-05012	.SCREW, PAN HEAD	2					
13	5VX-14503-00	.ADJUST SCREW SET	1					
14	1S3-13493-00	.PLUNGER	1					
15	4BH-14134-00	.SPRING, AIR ADJUSTING	1					
16	1S3-14161-00	.NUT, CABLE ADJUSTING	1					
17	91312-04006	.BOLT, HEXAGON SOCKET HEAD	3					
18	4WV-14147-10	.O-RING	1					
19	1UY-14155-00	.GUIDE, CABLE	1					
20	3JC-14146-00	.PLATE	1					
21	5JW-14945-00	.PLATE	1					
22	90467-09006	.CLIP	1					
23	5YP-14562-00	.O-RING	1					
24	1PE-E243A-00	HOSE 1	1					
25	1PE-E243E-00	HOSE 2	1					
26	90467-11090	CLIP	1					
27	90467-11090	CLIP	3					

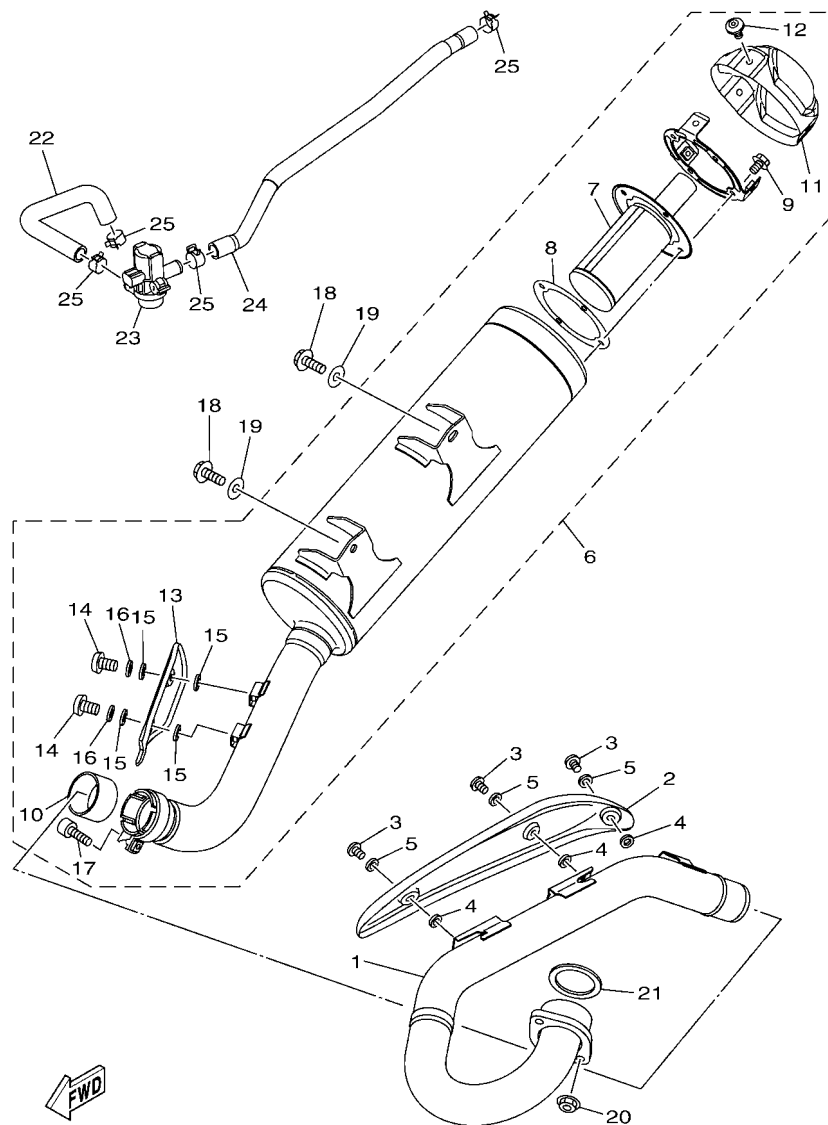

2LS1110-P110

FIG. 11 EXHAUST

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	2LS-E4611-00	PIPE, EXHAUST 1	1					
2	2LS-E4628-00	PROTECTOR, EXHAUST PIPE	1					
3	98980-06010	SCREW, BIND	3					
4	90201-05019	WASHER, PLATE	3					
5	90201-05037	WASHER, PLATE	3					
6	2LS-E4710-00	MUFFLER ASSY 1	1					
7	2LS-E4780-00	.SPARK ARRESTER ASSY	1					
8	2BG-E4755-00	.GASKET, SILENCER	1					
9	95022-06012	.BOLT, FLANGE	4					
10	2LS-E4714-00	.GASKET, MUFFLER	1					
11	1TD-E4787-00	.CAP, SILENCER	1					
12	90149-06298	.SCREW	3					
13	2LS-E4728-00	.PROTECTOR, MUFFLER 2	1					
14	98902-06010	.SCREW, BIND	2					
15	90201-05017	.WASHER, PLATE	4					
16	92902-06200	.WASHER	2					
17	91314-08035	.BOLT, HEXAGON SOCKET HEAD	1					
18	90105-08142	BOLT, FLANGE	2					
19	90201-08048	WASHER, PLATE	2					
20	95702-08500	NUT, FLANGE	2					
21	3EG-14613-00	GASKET, EXHAUST PIPE	1					
22	2LS-E4881-00	HOSE, BEND 1	1					
23	1TD-14840-00	AIR CUT VALVE ASSY	1					
24	2LS-E4882-00	HOSE, BEND 2	1					
25	90467-17089	CLIP	4					

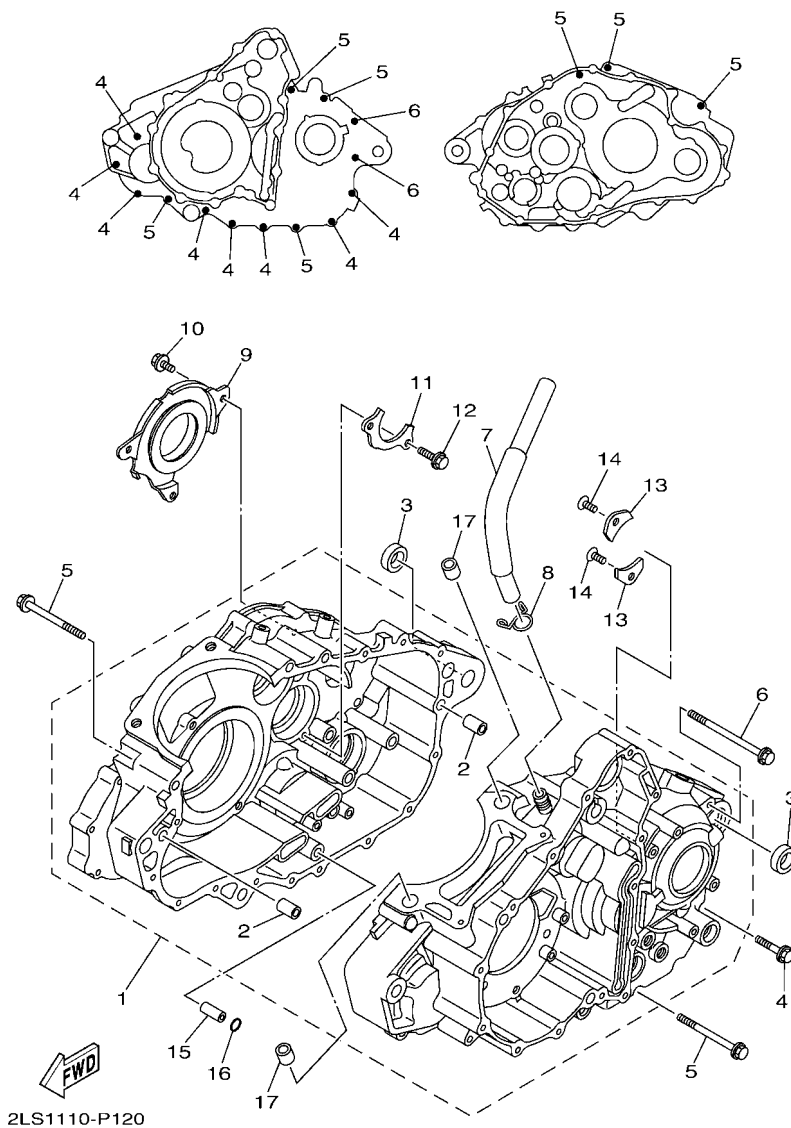


FIG. 12 CRANKCASE

REF. NO.	PART NO.	DESCRIPTION	QTY				REMARKS
1	1PE-15100-09	CRANKCASE ASSY	1				
2	99530-10114	.PIN, DOWEL	2				
3	90387-17009	COLLAR	2				
4	95022-06030	BOLT, FLANGE	8				
5	95022-06070	BOLT, FLANGE	7				
6	95022-06090	BOLT, FLANGE	2				
7	2LS-E1166-00	PIPE, BREATHER 1	1				
8	90467-140A4	CLIP	1				
9	1S3-11165-00	PLATE, BREATHER	1				
10	90105-06081	BOLT, FLANGE	3				
11	1S3-15383-00	PLATE, BEARING COVER	1				
12	90105-06082	BOLT, FLANGE	2				
13	4JT-15381-01	PLATE, BEARING COVER	2				
14	90149-06074	SCREW	2				
15	99530-08016	PIN, DOWEL	1				
16	93210-07135	O-RING	1				
17	99530-14016	PIN, DOWEL	2				

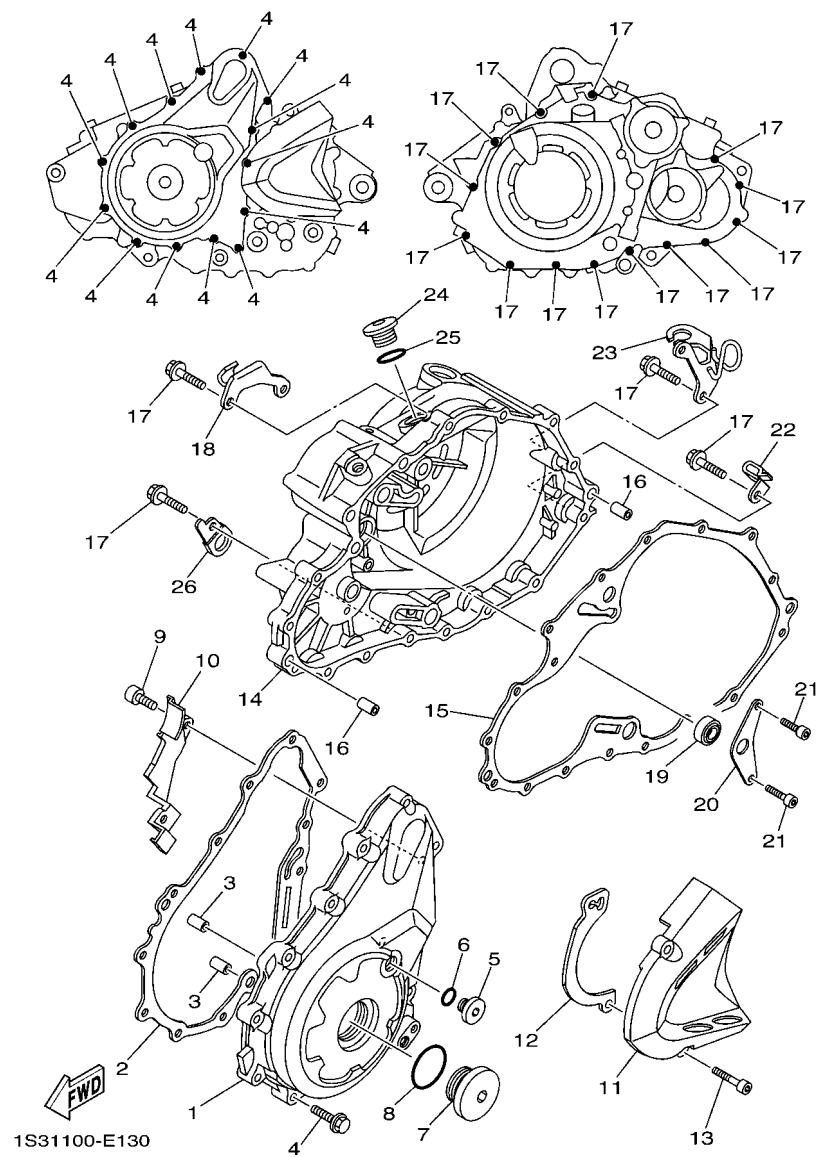


FIG. 13 CRANKCASE COVER 1

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	1S3-15411-00	COVER, CRANKCASE 1	1					
2	1S3-15451-00	GASKET, CRANKCASE COVER 1	1					
3	99530-10114	PIN, DOWEL	2					
4	95022-06030	BOLT, FLANGE	14					
5	90340-14016	PLUG, STRAIGHT SCREW	1					
6	93210-14369	O-RING	1					
7	90340-36004	PLUG, STRAIGHT SCREW	1					
8	93210-357A3	O-RING	1					
9	90110-05031	BOLT, HEXAGON SOCKET HEAD	1					
10	1S3-15113-00	PLATE	1					
11	1S3-15421-00	COVER, CRANKCASE 2	1					
12	1S3-17466-00	GUIDE, CHAIN	1					
13	91312-06025	BOLT, HEXAGON SOCKET HEAD	2					
14	1S3-15431-00	COVER, CRANKCASE 3	1					
15	1S3-15462-00	GASKET, CRANKCASE COVER 3	1					
16	99530-10120	PIN, DOWEL	2					
17	95022-06030	BOLT, FLANGE	14					
18	1S3-15441-00	HOLDER, CLUTCH CABLE	1					
19	93101-14164	OIL SEAL	1					
20	1S3-15118-00	HOLDER	1					
21	90110-06182	BOLT, HEXAGON SOCKET HEAD	2					
22	90461-10011	CLAMP	1					
23	1S3-1546C-00	HOLDER	1					
24	4H7-15189-00	PLUG	1					
25	93210-207A0	O-RING	1					
26	90462-08046	CLAMP	1					

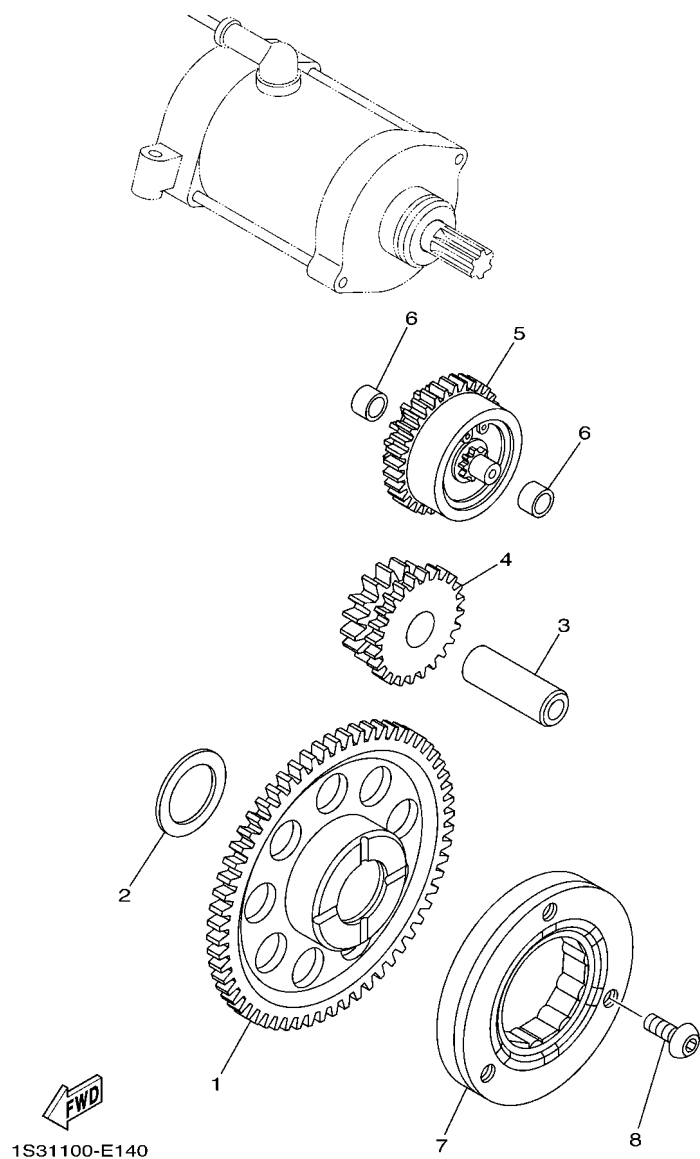


FIG. 14 STARTER

[illegible]

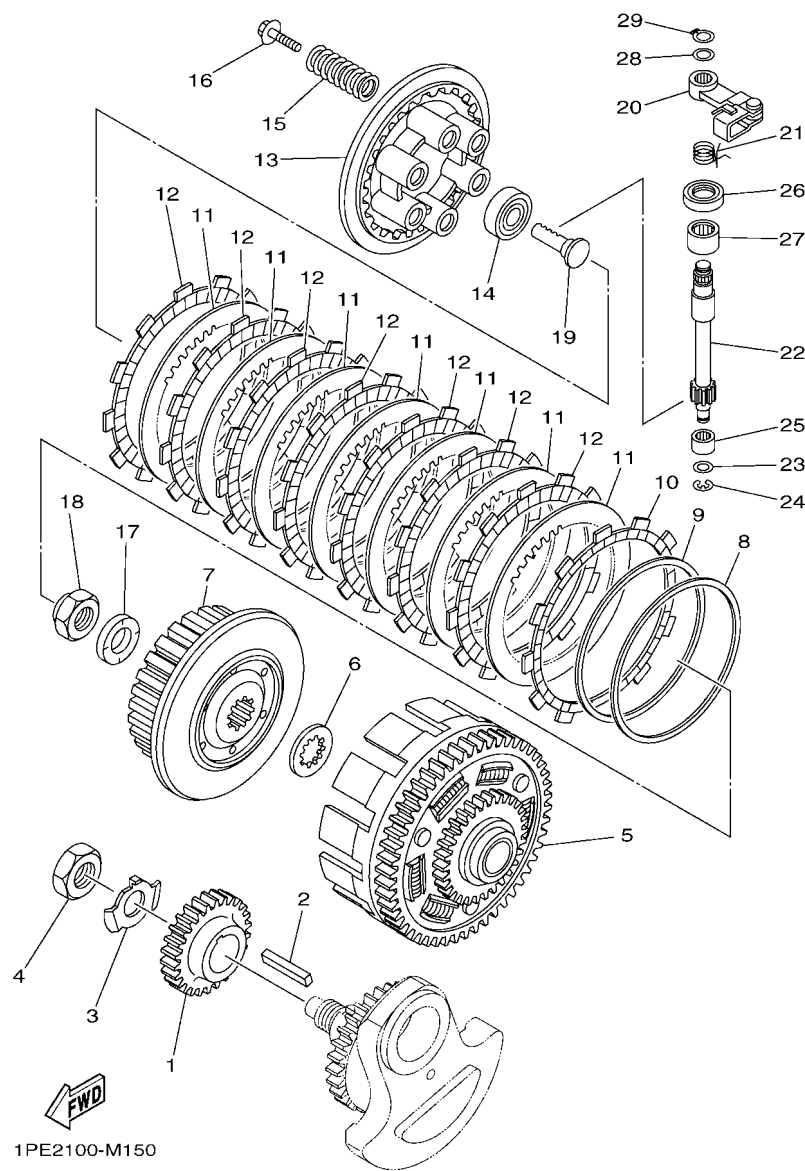


FIG. 15 CLUTCH

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	1S3-16111-00	GEAR, PRIMARY DRIVE	1					
2	90282-07003	KEY, STRAIGHT	1					
3	90215-20006	WASHER, LOCK	1					
4	90170-20274	NUT	1					
5	1S3-16150-00	PRIMARY DRIVEN GEAR COMP.	1					
6	2JN-16154-00	PLATE, THRUST 1	1					
7	1S3-16371-10	BOSS, CLUTCH	1					
8	5JG-16384-00	PLATE, SEAT	1					
9	5JG-16383-00	SPRING., CUSHION	1					
10	5TG-16331-00	PLATE, FRICTION 2	1					
11	4X7-16325-00	PLATE, CLUTCH 2	7					
12	5TA-16321-00	PLATE, FRICTION	7					
13	1S3-16351-00	PLATE, PRESSURE 1	1					
14	93306-00304	BEARING	1					
15	90501-230E4	SPRING, COMPRESSION	6					
16	90159-06029	SCREW, WITH WASHER	6					
17	90208-20001	WASHER, CONICAL SPRING	1					
18	90179-20007	NUT	1					
19	4XV-16356-01	ROD, PUSH 1	1					
20	3LD-16340-01	PUSH LEVER ASSY	1					
21	90508-18018	SPRING, TORSION	1					
22	5EB-16382-00	AXLE, PUSH LEVER	1					
23	92902-08600	WASHER, PLATE	1					
24	99001-07600	CIRCLIP	1					
25	93317-11096	BEARING	1					
26	93102-15212	OIL SEAL	1					
27	93315-31502	BEARING	1					

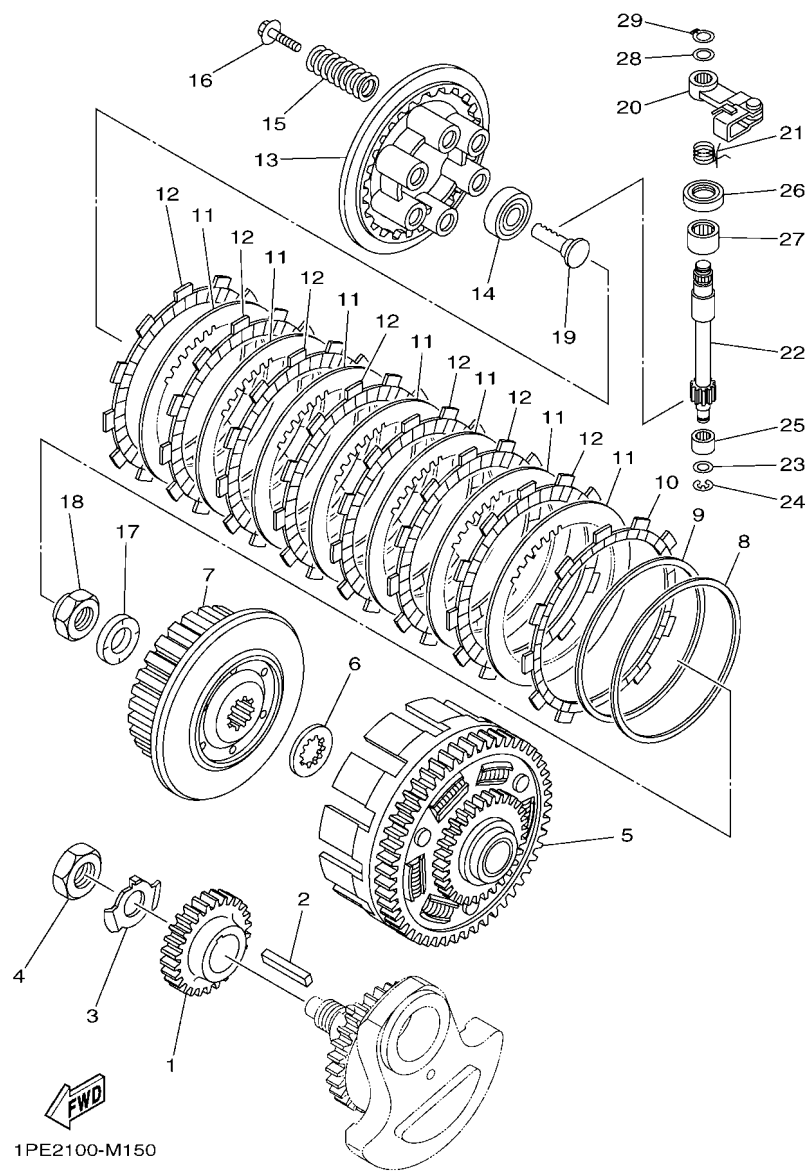


FIG. 15 CLUTCH

[illegible]

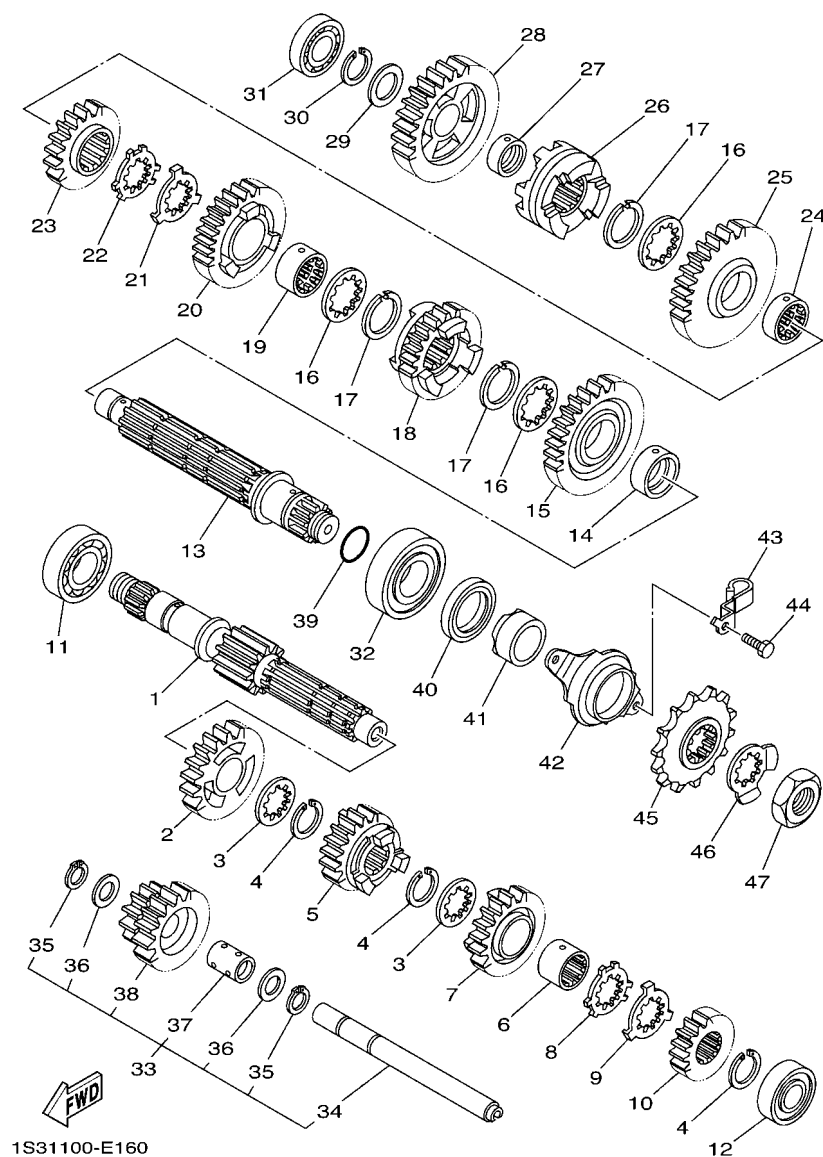


FIG. 16 TRANSMISSION

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	1S3-17401-00	MAIN AXLE ASSY	1					
2	1S3-17151-00	GEAR, 5TH PINION (24T)	1					
3	90209-22008	WASHER	2					
4	93440-25084	CIRCLIP	3					
5	1S3-17131-00	GEAR, 3RD PNION (17T)	1					
6	90387-22006	COLLAR	1					
7	1S3-17141-00	GEAR, 4TH PINION (22T)	1					
8	90214-22003	WASHER, CLAW	1					
9	90214-22002	WASHER, CLAW	1					
10	1S3-17121-00	GEAR, 2ND PINION (14T)	1					
11	93306-20501	BEARING	1					
12	93306-00431	BEARING	1					
13	1S3-17402-00	DRIVE AXLE ASSY	1					
14	90387-28008	COLLAR	1					
15	1S3-17221-00	GEAR, 2ND WHEEL (28T)	1					
16	90209-26008	WASHER	3					
17	93440-28062	CIRCLIP	3					
18	1S3-17241-00	GEAR, 4TH WHEEL (25T)	1					
19	90387-26005	COLLAR	1					
20	1PE-17231-00	GEAR, 3RD WHEEL (25T)	1					
21	90214-26002	WASHER, CLAW	1					
22	90214-26003	WASHER, CLAW	1					
23	1S3-17251-00	GEAR, 5TH WHEEL (22T)	1					
24	90387-26004	COLLAR	1					
25	1S3-17211-00	GEAR, 1ST WHEEL (38T)	1					
26	1S3-17285-00	CLUTCH, DOG	1					
27	90387-20021	COLLAR	1					

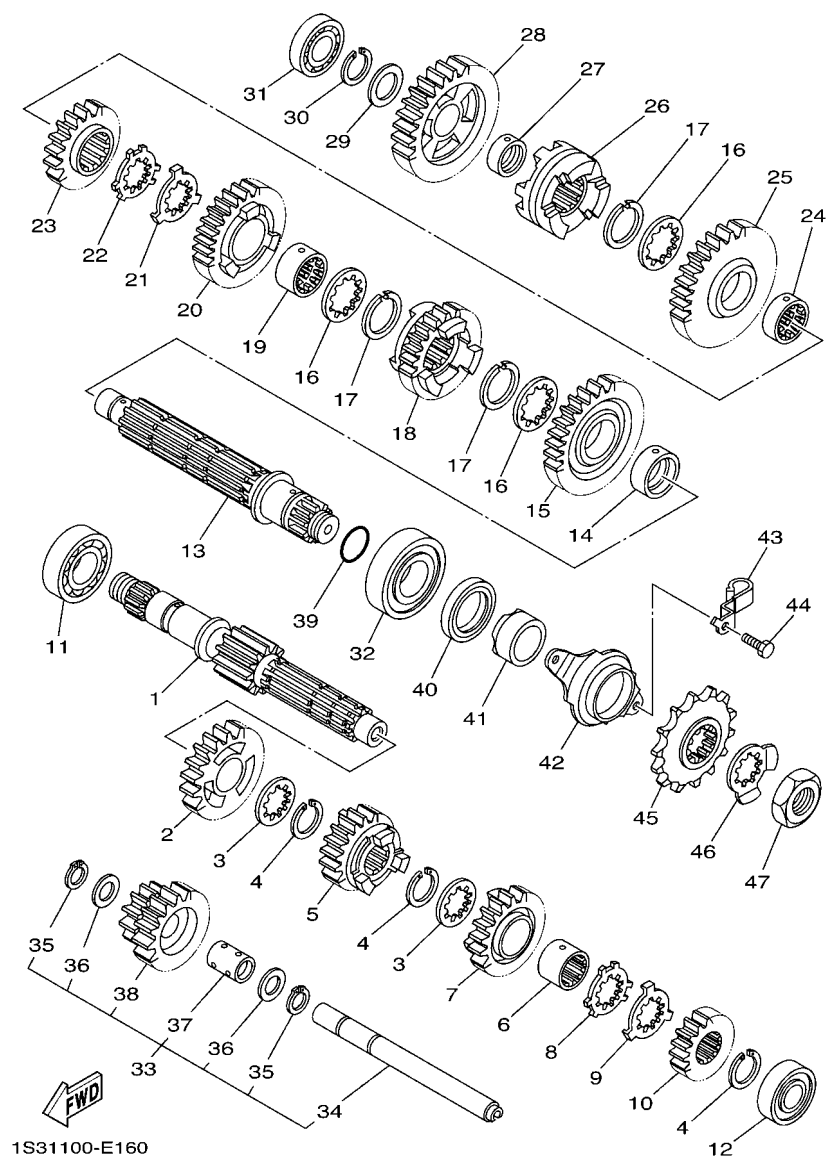


FIG. 16 TRANSMISSION

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
28	1S3-17253-00	GEAR, REVERSE WHEEL 2 (29T)	1					
29	90201-20276	WASHER, PLATE (T=1.0)	1					
30	99009-20400	CIRCLIP	1					
31	93306-00415	BEARING	1					
32	93306-27803	BEARING	1					
33	1S3-17430-00	COUNTER AXLE ASSY	1					
34	1S3-17432-00	.AXLE, IDLE	1					
35	93440-15012	.CIRCLIP	2					
36	90201-152P4	.WASHER, PLATE	2					
37	90387-1504G	.COLLAR	1					
38	1S3-17243-00	.GEAR, REVERSE WHEEL1(12T/24T)	1					
39	93210-25001	O-RING	1					
40	93102-35393	OIL SEAL	1					
41	90387-28009	COLLAR	1					
42	1S3-17471-00	PLATE, COVER	1					
43	90461-10011	CLAMP	1					
44	97022-06014	BOLT, HEXAGON	2					
45	9383G-14231	SPROCKET, DRIVE (14T)	1					
46	90215-25003	WASHER, LOCK	1					
47	90179-22011	NUT	1					

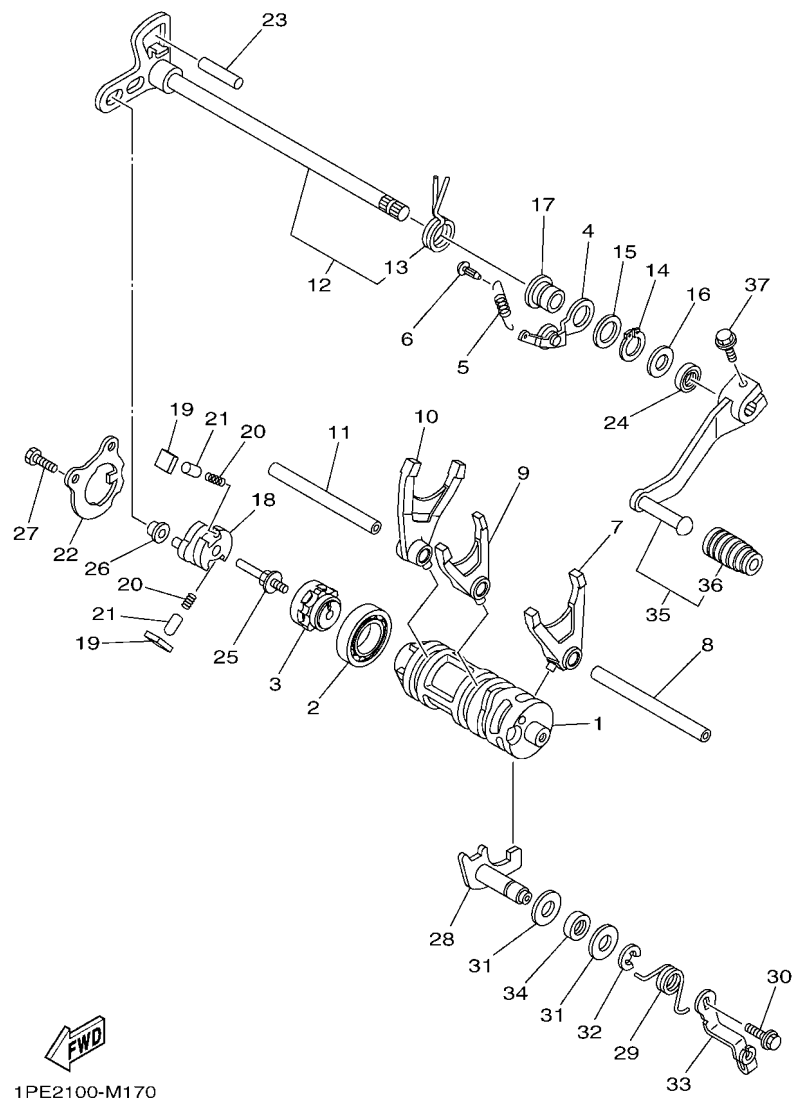


FIG. 17 SHIFT CAM & FORK

REF. NO.	PART NO.	DESCRIPTION	USA				REMARKS
1	1PE-18541-00	CAM, SHIFT	1				
2	93306-90509	BEARING	1				
3	2S2-18185-00	SEGMENT	1				
4	1S3-18140-00	STOPPER LEVER ASSY	1				
5	5JW-18144-00	HANGER, SPRING	1				
6	132-16346-00	HOOK, SPRING	1				
7	1PE-18511-00	FORK, SHIFT 1	1				
8	1PE-18531-00	BAR, SHIFT FORK GUIDE 1	1				
9	1PE-18512-00	FORK, SHIFT 2	1				
10	1PE-18513-00	FORK, SHIFT 3	1				
11	1PE-18534-00	BAR, SHIFT FORK GUIDE	1				
12	1S3-18101-10	SHIFT SHAFT ASSY	1				
13	90508-35007	.SPRING, TORSION	1				
14	99009-17400	CIRCLIP	1				
15	90201-177G4	WASHER, PLATE	1				
16	90201-12040	WASHER, PLATE	1				
17	5VK-18699-00	BOSS 1	1				
18	1S3-18122-01	LEVER, SHIFT 2	1				
19	3XJ-18182-00	PAWL, SHIFTER	2				
20	90501-052G5	SPRING, COMPRESSION	2				
21	3XJ-18184-00	PIN, PAWL	2				
22	1S3-18172-00	GUIDE, SHIFT	1				
23	93608-30002	PIN, DOWEL	1				
24	93102-12224	OIL SEAL	1				
25	3XJ-18173-10	PIN, SHIFT	1				
26	3XJ-18178-00	ROLLER, SHIFT LEVER	1				
27	90101-06664	BOLT	2				

[illegible]

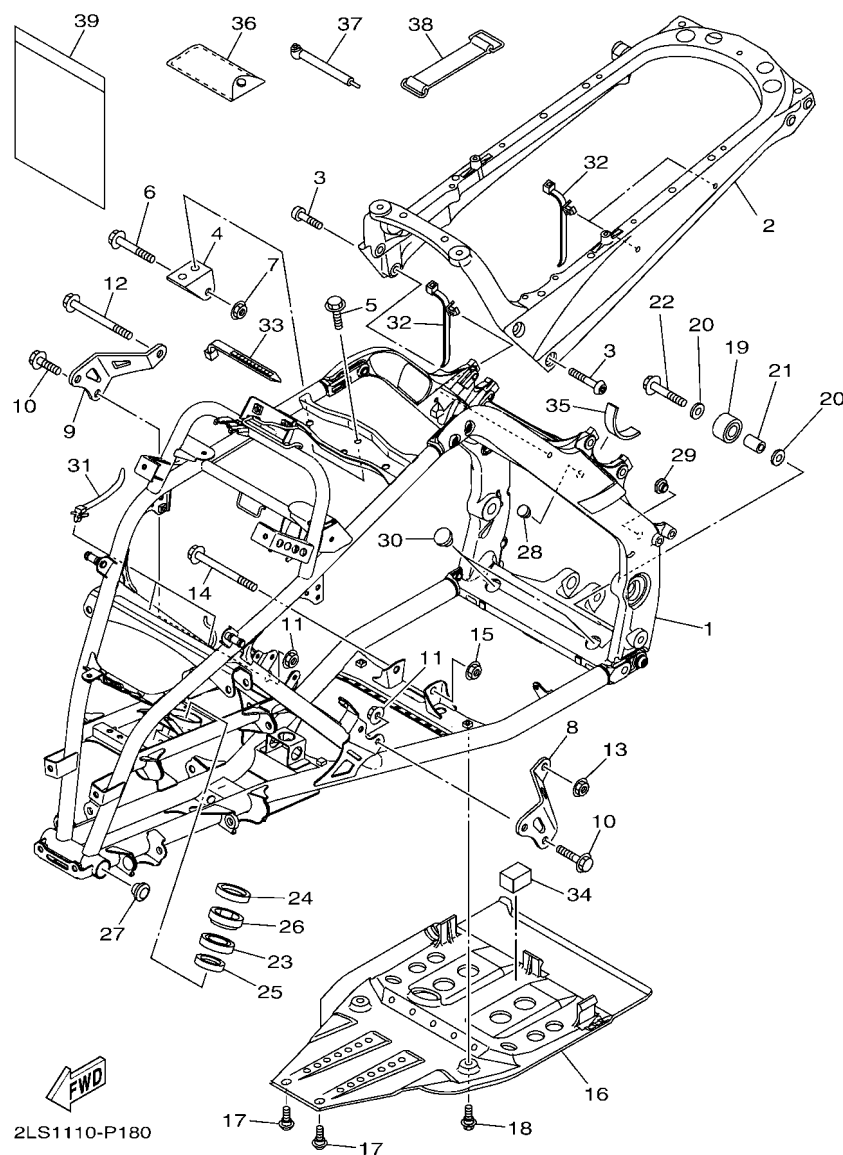


FIG. 18 FRAME

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	2LS-F1101-59	FRONT FRAME COMP.	1					
2	2LS-F1190-78	REAR FRAME COMP.	1					
3	90149-10034	SCREW	4					
4	1S3-21315-10	STAY, ENGINE 1	1					
5	90105-08142	BOLT, FLANGE	2					
6	95812-10055	BOLT, FLANGE	1					
7	90185-10011	NUT, SELF-LOCKING	1					
8	1S3-21316-10	STAY, ENGINE 2	1					
9	1S3-21317-10	STAY, ENGINE 3	1					
10	90105-08142	BOLT, FLANGE	4					
11	90179-08674	NUT	4					
12	95812-10110	BOLT, FLANGE	1					
13	90185-10011	NUT, SELF-LOCKING	1					
14	95812-10090	BOLT, FLANGE	1					
15	90185-10011	NUT, SELF-LOCKING	1					
16	1PE-F1471-00	PROTECTOR, ENGINE	1					
17	90109-06201	BOLT	2					
18	90109-06172	BOLT	2					
19	4D3-22178-00	TENSIONER	1					
20	90201-08053	WASHER, PLATE	2					
21	90380-08136	BUSH, SOLID	1					
22	95812-08045	BOLT, FLANGE	1					
23	93306-20352	BEARING	1					
24	93102-25081	OIL SEAL	1					
25	93102-25099	OIL SEAL	1					
26	5GT-23872-00	HOLDER, BEARING	1					
27	90338-26004	PLUG	2					

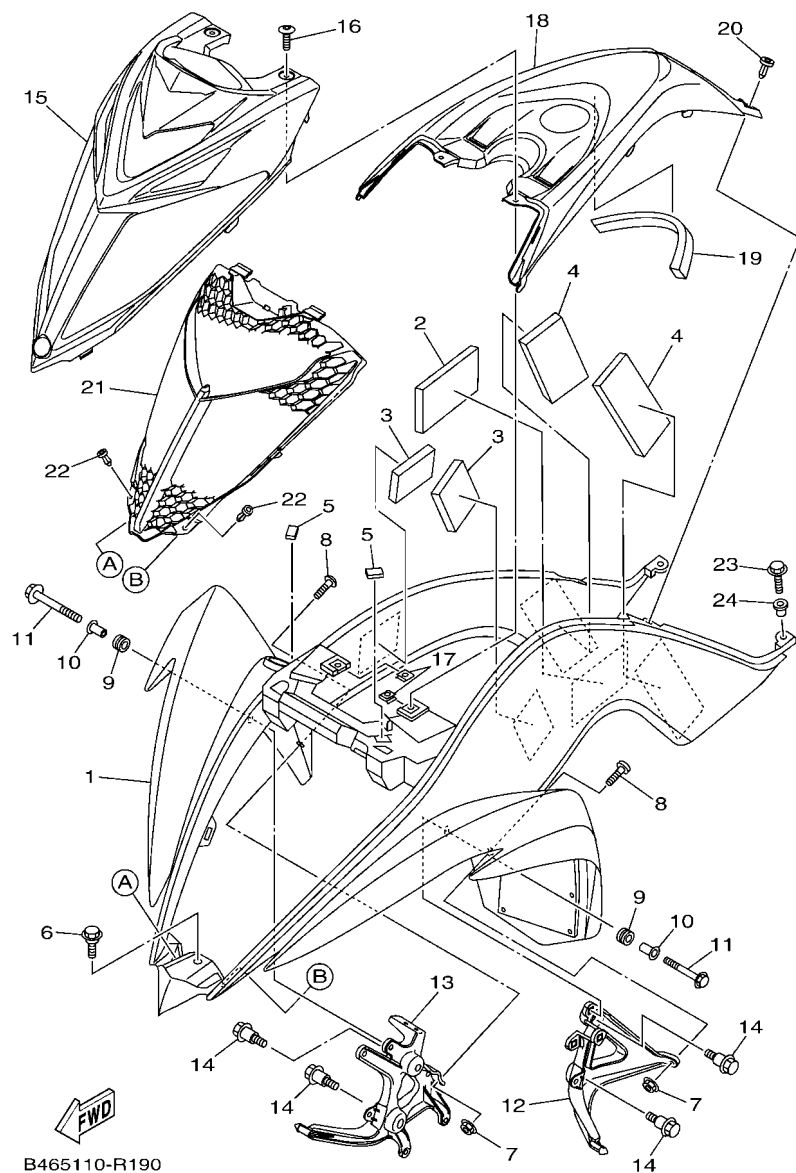


FIG. 19 FRONT FENDER

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	1PE-F1500-00	FRONT FENDER ASSY	1					
2	12R-21747-00	DAMPER	1					
3	1S3-21541-00	DAMPER 1	2					
4	3Y0-24183-00	DAMPER, LOCATING 3	2					
5	3B4-21541-00	DAMPER 1	2					
6	90109-06172	BOLT	1					
7	95602-06200	NUT, SELF-LOCKING	2					
8	90111-06137	BOLT, HEX. SOCKET BUTTON	2					
9	90480-14102	GROMMET	2					
10	90387-06136	COLLAR	2					
11	95812-06025	BOLT, FLANGE	2					
12	1PE-F1513-01	STAY, FENDER 1	1					
13	1PE-F1514-01	STAY, FENDER 2	1					
14	90109-06214	BOLT	4					
15	1PE-F3391-10	PANEL, FRONT	1					
16	90111-06814	BOLT, HEX. SOCKET BUTTON	2					
17	90183-06053	NUT, SPRING	2					
18	1PE-F171A-10	COVER, TOP	1					
19	90520-20001	DAMPER, PLATE	1					
20	90269-06002	RIVET	2					
21	1PE-E2467-00	COVER, RADIATOR	1					
22	90269-06002	RIVET	2					
23	90105-06084	BOLT, FLANGE	2					
24	90387-06146	COLLAR	2					

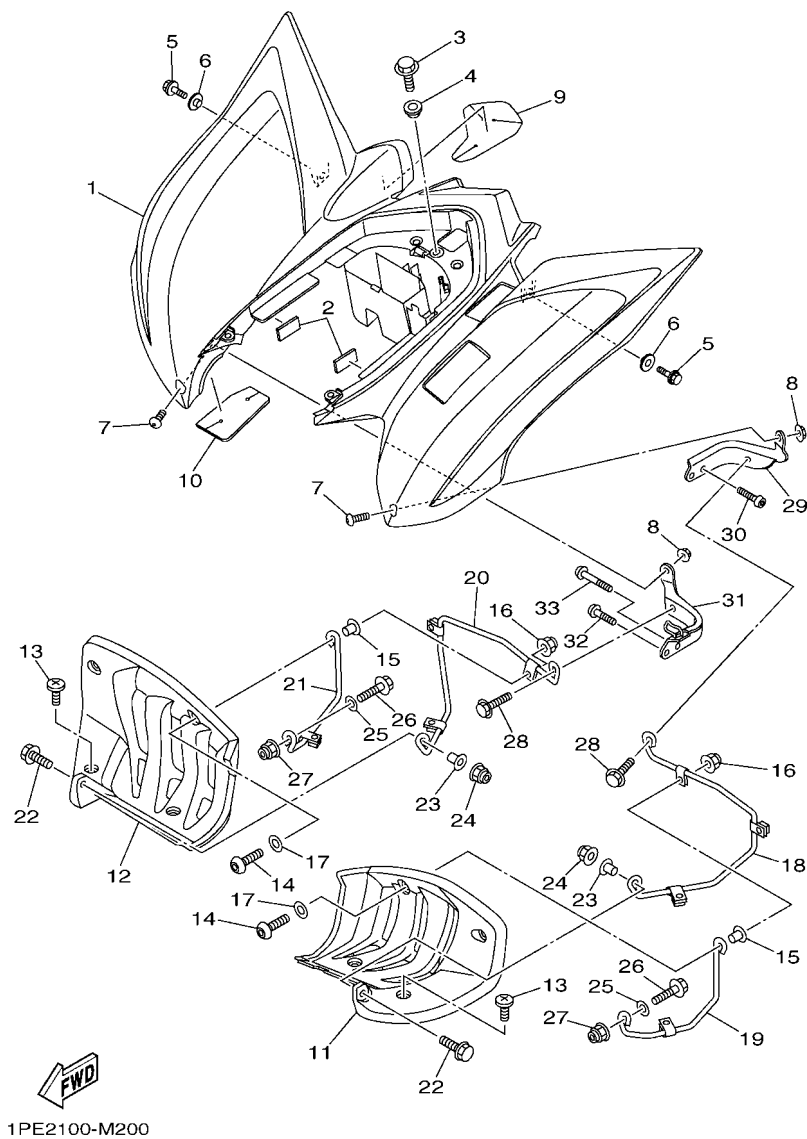


FIG. 20 REAR FENDER

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	1PE-F1600-70	REAR FENDER ASSY	1					
2	1S3-2140A-00	DAMPER, STOPPER	2					
3	90105-06084	BOLT, FLANGE	1					
4	90387-06153	COLLAR	1					
5	90105-06080	BOLT, FLANGE	2					
6	90387-06153	COLLAR	2					
7	90111-06814	BOLT, HEX. SOCKET BUTTON	2					
8	95602-06200	NUT, SELF-LOCKING	2					
9	1S3-2163A-00	COVER, REAR FENDER 1	1					
10	1S3-2163E-00	COVER, REAR FENDER 2	1					
11	1PE-F1621-00	FLAP	1					
12	1PE-F1691-00	FLAP	1					
13	90154-05043	SCREW, BINDING	6					
14	92012-06025	BOLT, BUTTON HEAD	2					
15	90560-06201	SPACER	2					
16	95602-06200	NUT, SELF-LOCKING	2					
17	90201-06076	WASHER, PLATE	2					
18	1S3-2164F-10	STAY 1	1					
19	1S3-2164H-20	STAY 3	1					
20	5TG-2164G-20	STAY 2	1					
21	1S3-2164J-20	STAY 4	1					
22	95812-06025	BOLT, FLANGE	2					
23	90387-06204	COLLAR	2					
24	95602-06200	NUT, SELF-LOCKING	2					
25	90201-08053	WASHER, PLATE	2					
26	95822-08020	BOLT, FLANGE	2					
27	95602-08200	NUT, U FLANGE	2					

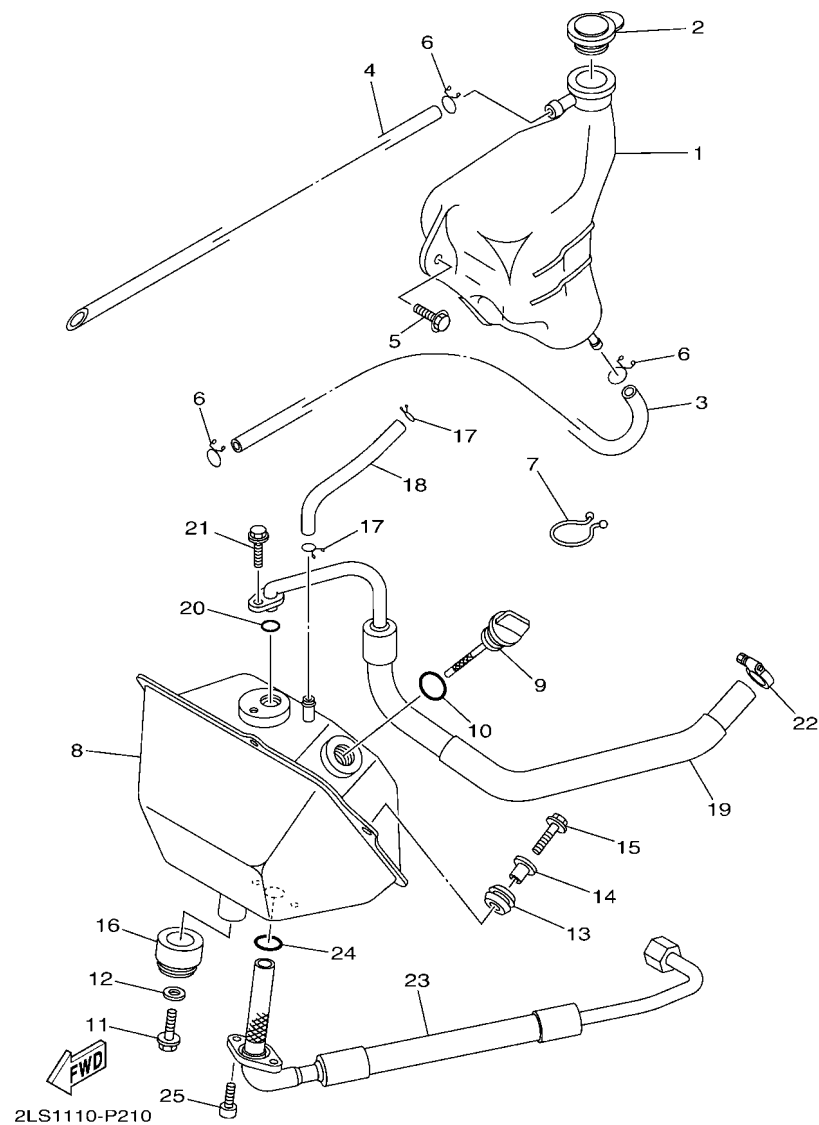


FIG. 21 OIL TANK

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	1PE-F1871-00	TANK, RECOVERY	1					
2	1S3-21875-00	CAP	1					
3	90445-09M30	HOSE (L630)	1					
4	90445-09777	HOSE (L300)	1					
5	90119-06152	BOLT, WITH WASHER	2					
6	90467-08003	CLIP	3					
7	90464-23041	CLAMP	2					
8	1S3-21750-10	OIL TANK ASSY	1					
9	5LP-21761-01	GAUGE, LEVEL	1					
10	93210-21190	O-RING	1					
11	95812-08016	BOLT, FLANGE	1					
12	90201-082A6	WASHER, PLATE	1					
13	90480-13459	GROMMET	2					
14	90387-06205	COLLAR	2					
15	95812-06020	BOLT, FLANGE	2					
16	90480-24004	GROMMET	1					
17	90467-100A1	CLIP	2					
18	90445-11034	HOSE (L147)	1					
19	2LS-13465-00	HOSE, OIL 2	1					
20	93210-10197	O-RING	1					
21	95022-06016	BOLT, FLANGE	1					
22	90450-22017	HOSE CLAMP ASSY	1					
23	1S3-13464-10	HOSE, OIL 1	1					
24	93210-16629	O-RING	1					
25	91312-06016	BOLT, HEXAGON SOCKET HEAD	2					

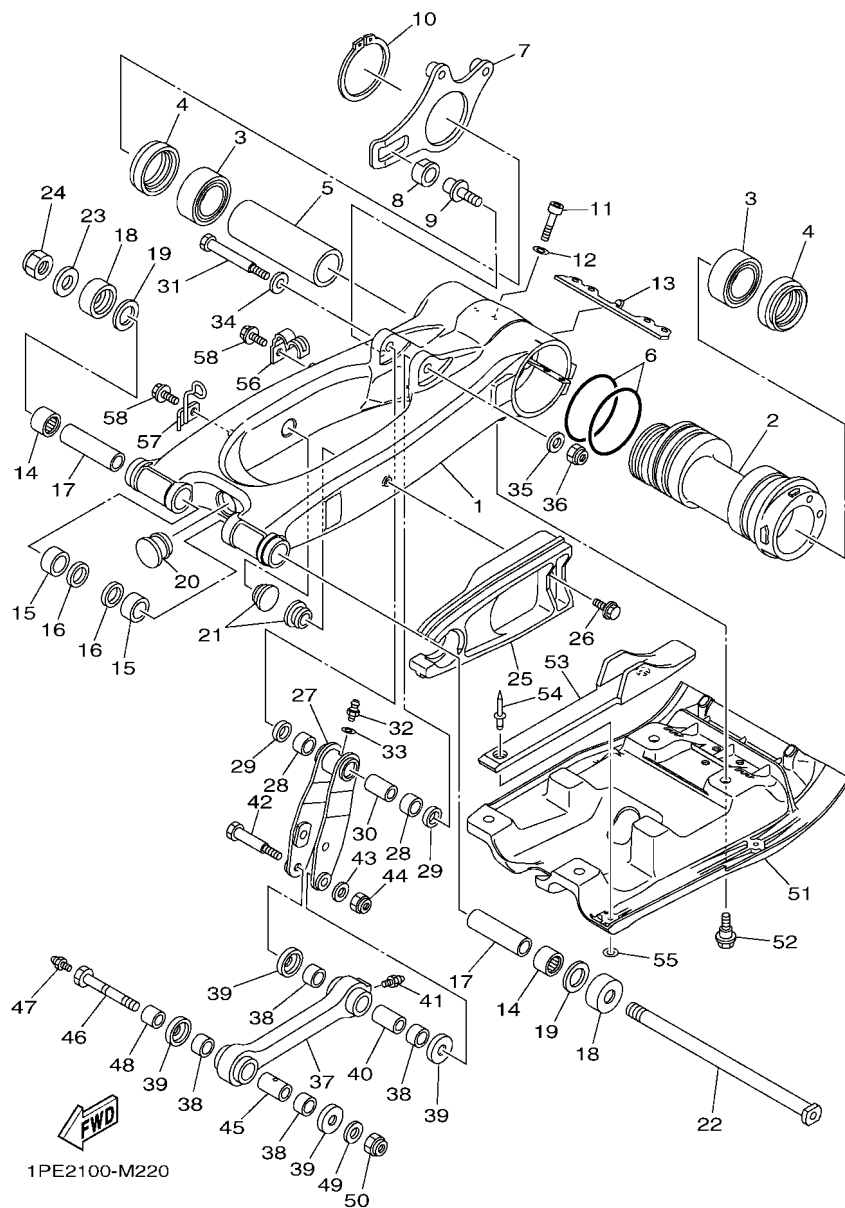


FIG. 22 REAR ARM

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	1S3-22110-00	REAR ARM COMP.	1					
2	1PE-25311-00	HUB, REAR	1					
3	93304-20812	BEARING	2					
4	93106-46003	OIL SEAL	2					
5	1PE-25317-00	SPACER, BEARING	1					
6	1S3-23147-01	O-RING	2					
7	1PE-25721-00	BRACKET, CALIPER	1					
8	90387-16014	COLLAR	1					
9	90110-12001	BOLT, HEXAGON SOCKET HEAD	1					
10	93410-67085	CIRCLIP	1					
11	91314-08040	BOLT, HEXAGON SOCKET HEAD	4					
12	92903-08600	WASHER, PLATE	4					
13	1S3-22475-00	SEAL, DUST	1					
14	93317-22237	BEARING	2					
15	90380-22111	BUSH, SOLID	2					
16	93106-22019	OIL SEAL (DC 22-28-8)	2					
17	1S3-22184-00	BUSH	2					
18	4X7-22129-00	COVER, THRUST 2	2					
19	3YF-22149-00	WASHER	2					
20	1S3-22417-00	PLUG	1					
21	90338-23004	PLUG	2					
22	1S3-22141-00	SHAFT, PIVOT	1					
23	90201-16018	WASHER, PLATE	1					
24	90185-16002	NUT, SELF-LOCKING	1					
25	1S3-22151-00	SEAL, GUARD	1					
26	90109-06172	BOLT	1					
27	1PE-F217A-00	ARM, RELAY	1					

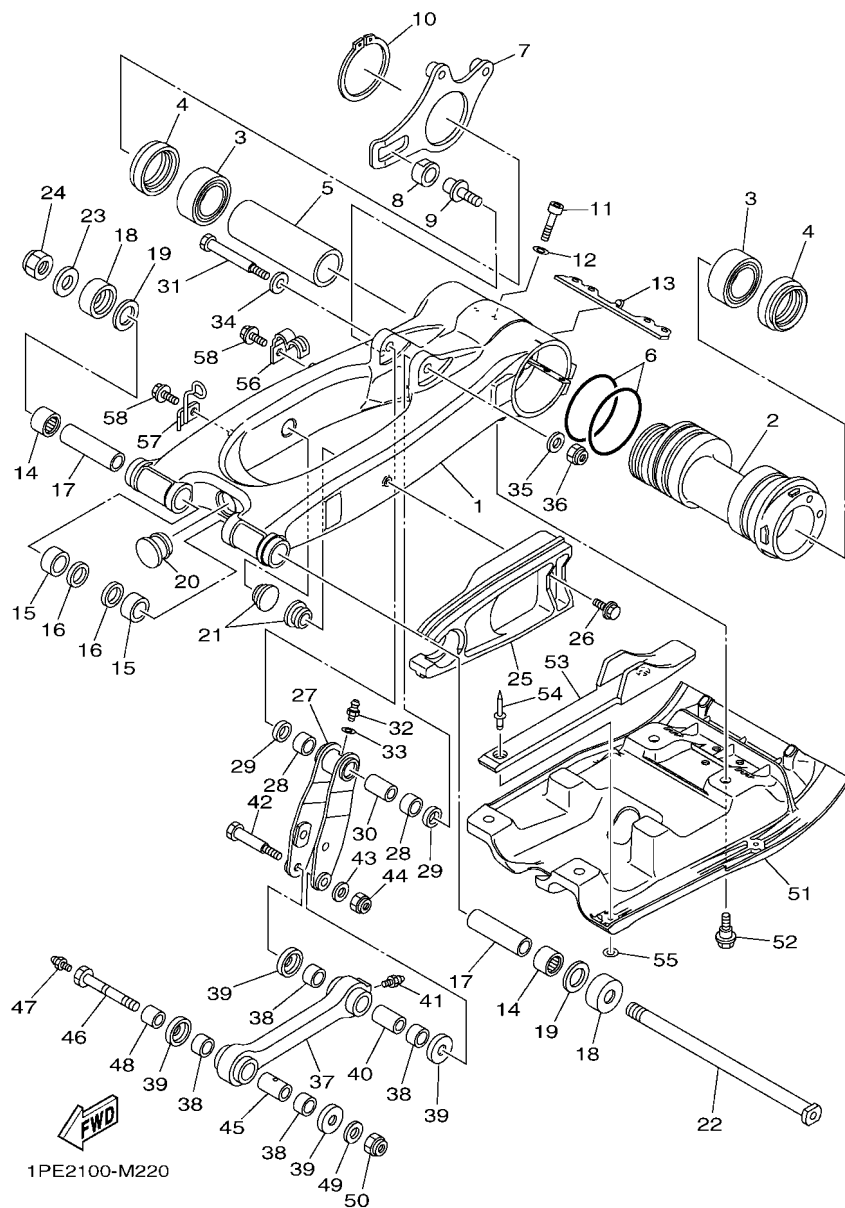


FIG. 22 REAR ARM

REF. NO.	PART NO.	DESCRIPTION	USA				REMARKS
28	90383-20032	BUSH, FORMED	2				
29	93109-20076	OIL SEAL	2				
30	90387-12021	COLLAR	1				
31	90109-10018	BOLT	1				
32	93700-06004	NIPPLE, GREASE	1				
33	90201-063F3	WASHER, PLATE	1				
34	90201-12030	WASHER, PLATE	1				
35	90201-10034	WASHER, PLATE	1				
36	90185-10012	NUT, SELF-LOCKING	1				
37	1PE-F217F-00	ROD, CONNECTING 1	1				
38	90383-20032	BUSH, FORMED	4				
39	5YT-22129-00	COVER, THRUST 2	4				
40	90387-12010	COLLAR	1				
41	93700-06004	NIPPLE, GREASE	1				
42	90109-10020	BOLT	1				
43	90201-10035	WASHER, PLATE	1				
44	90185-10012	NUT, SELF-LOCKING	1				
45	90387-12010	COLLAR	1				
46	90109-12009	BOLT	1				
47	93700-06004	NIPPLE, GREASE	1				
48	90387-12028	COLLAR	1				
49	90201-12032	WASHER, PLATE	1				
50	90185-12007	NUT, SELF-LOCKING	1				
51	1PE-F219X-00	COVER	1				
52	90109-06199	BOLT	4				
53	1S3-22153-00	GUARD, CHAIN	1				
54	90267-47187	RIVET, BLIND (4.7X16.4 BLACK)	2				


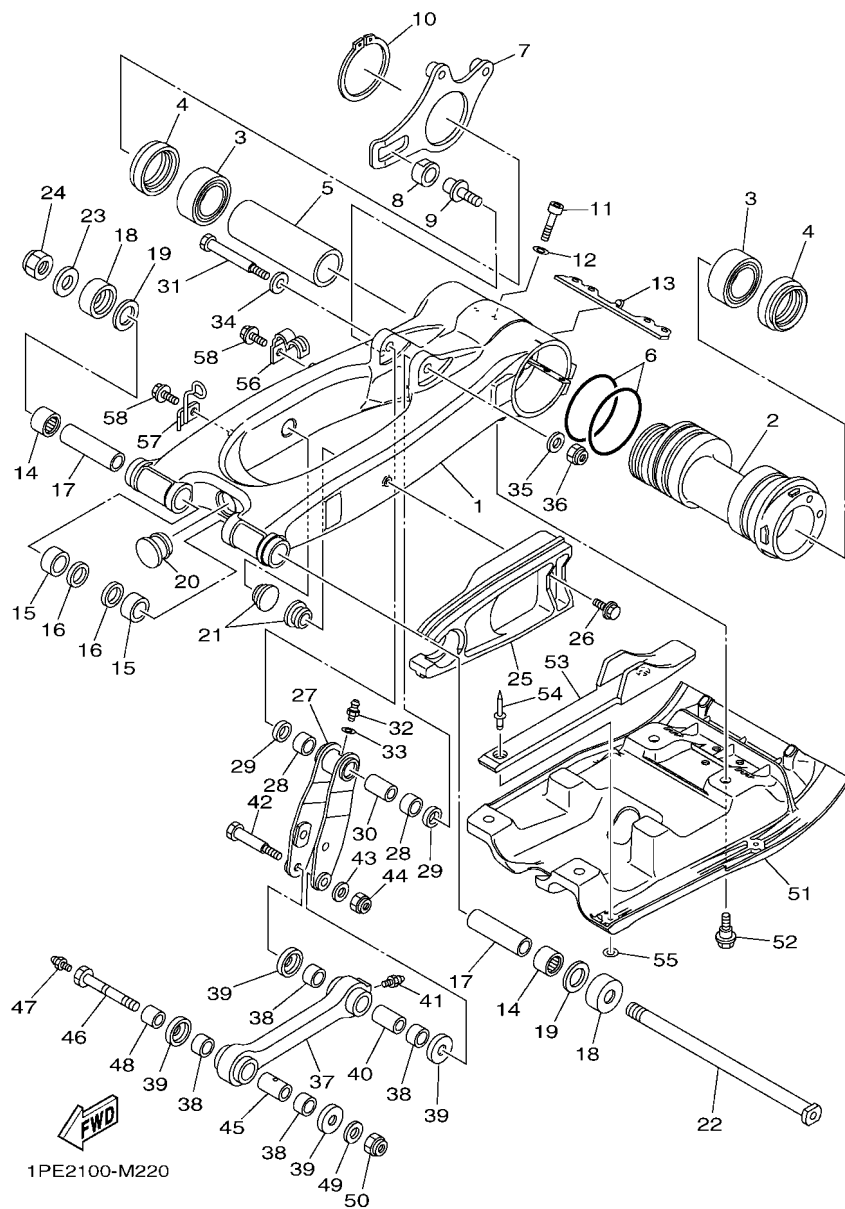


FIG. 22 REAR ARM

[illegible]



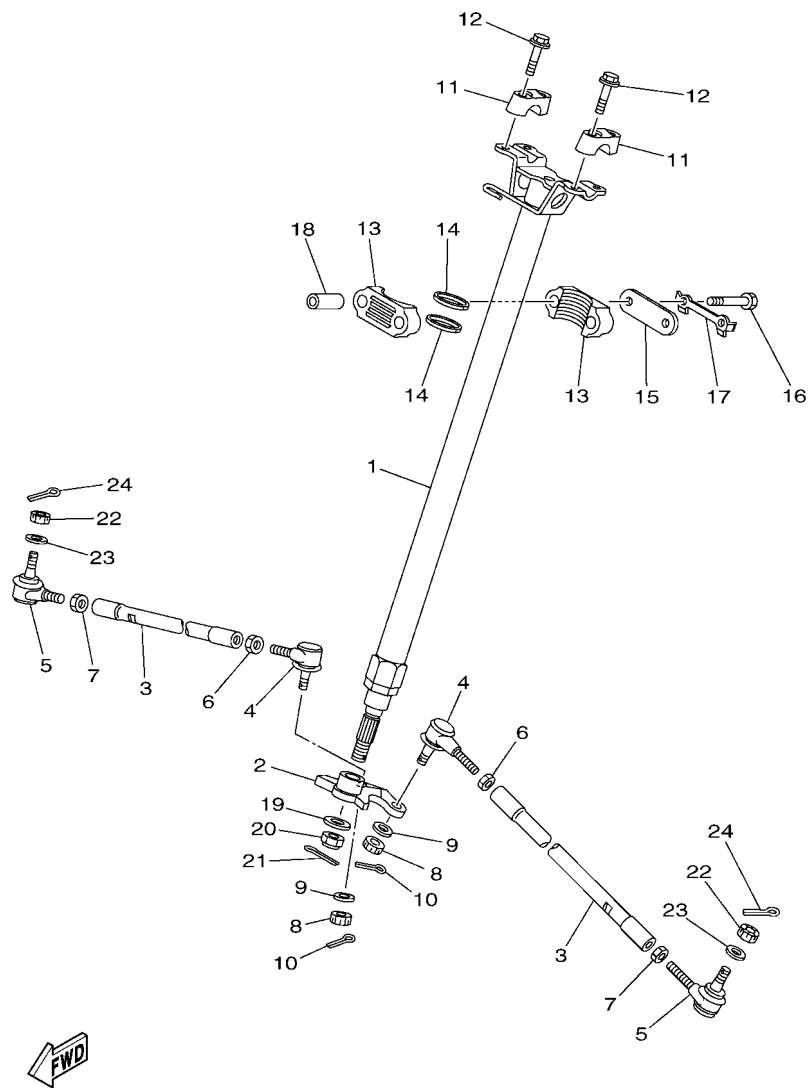

1PE2100-M240

FIG. 24 STEERING

REF. NO.	PART NO.	DESCRIPTION	USA				REMARKS
1	1PE-F3813-00	COLUMN, STEERING 2	1				
2	1PE-F3816-00	ARM, PITMAN	1				
3	1PD-23831-00	ROD, TIE	2				
4	1S3-23841-20	JOINT, UNIVERSAL 1	2				
5	1S3-23845-20	JOINT, UNIVERSAL 2	2				
6	90170-12055	NUT	2				
7	90170-12054	NUT	2				(RH. THREAD)
8	90171-10001	NUT, CASTLE	2				
9	90209-10229	WASHER	2				
10	91402-20020	PIN, COTTER	2				
11	8K1-23814-00	HOLDER, HANDLE	2				
12	95822-08030	BOLT, FLANGE	4				
13	37S-F3812-00	BEARING, STEERING	2				
14	93112-31800	OIL SEAL	2				
15	1PE-F3868-00	BRACKET, STEERING LOWER	1				
16	97022-08060	BOLT, HEXAGON	2				
17	1UY-23894-01	WASHER, LOCK 1	1				
18	90387-090R0	COLLAR	2				
19	90201-14021	WASHER, PLATE	1				
20	90185-14009	NUT, SELF-LOCKING	1				
21	91402-20025	PIN, COTTER	1				
22	90171-10001	NUT, CASTLE	2				
23	90209-10229	WASHER	2				
24	91402-20020	PIN, COTTER	2				

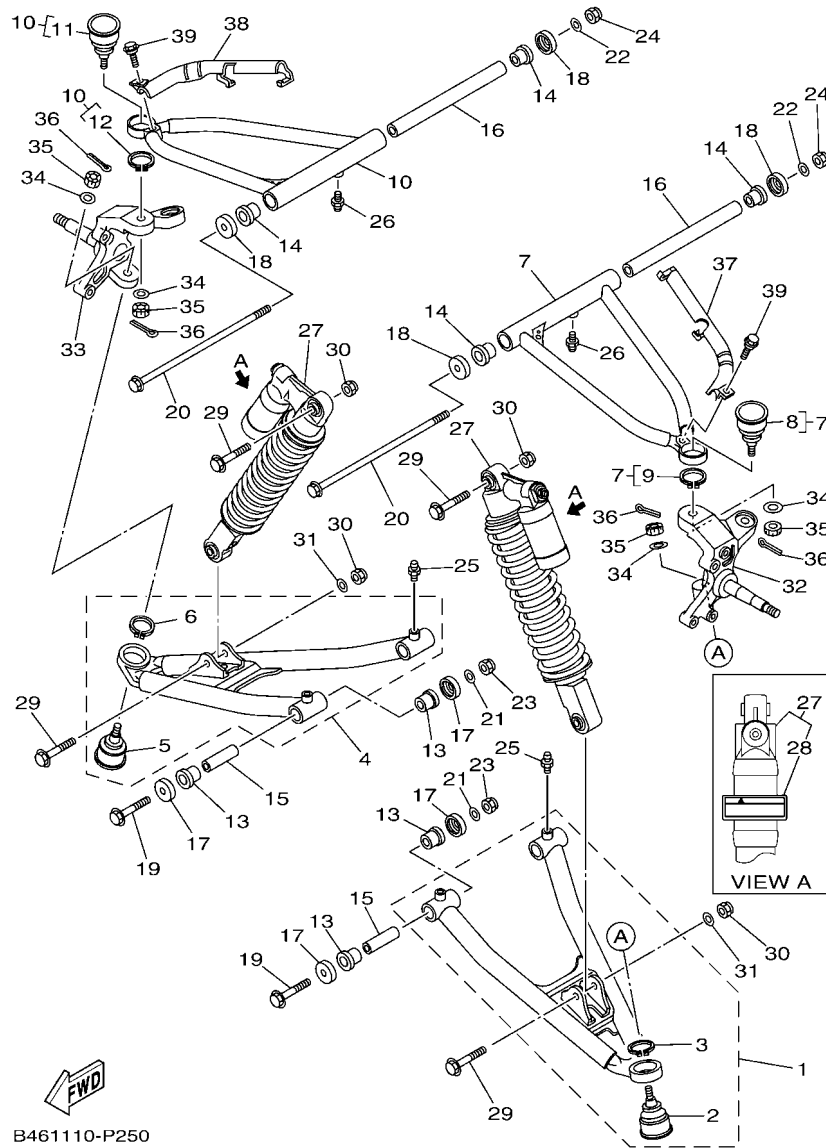


FIG. 25 FRONT SUSPENSION & WHEEL

REF. NO.	PART NO.	DESCRIPTION	USA				REMARKS
1	1PE-F3570-90	FRONT LOWER ARM COMP. (LEFT)	1				
2	5LP-23579-00	.BALL JOINT 2	1				
3	99009-30400	.CIRCLIP	1				
4	1PE-F3580-90	FRONT LOWER ARM COMP. (RIGHT)	1				
5	5LP-23579-00	.BALL JOINT 2	1				
6	99009-30400	.CIRCLIP	1				
7	2LS-F3540-30	FRONT UPPER ARM COMP. (LEFT)	1				
8	5LP-23579-00	.BALL JOINT 2	1				
9	99009-30400	.CIRCLIP	1				
10	2LS-F3550-30	FRONT UPPER ARM COMP. (RIGHT)	1				
11	5LP-23579-00	.BALL JOINT 2	1				
12	99009-30400	.CIRCLIP	1				
13	90381-15088	BUSH, SOLID	8				
14	90381-15088	BUSH, SOLID	4				
15	90387-101R3	COLLAR	4				
16	90387-100Y6	COLLAR	2				
17	5YT-23517-00	COVER, THRUST 1	8				
18	5YT-23517-00	COVER, THRUST 1	4				
19	90105-10135	BOLT, FLANGE	4				
20	90105-10132	BOLT, FLANGE	2				
21	90201-10037	WASHER, PLATE	4				
22	90201-10037	WASHER, PLATE	2				
23	90185-10012	NUT, SELF-LOCKING	4				
24	90185-10012	NUT, SELF-LOCKING	2				
25	93700-06004	NIPPLE, GREASE	4				
26	93700-06004	NIPPLE, GREASE	2				
27	B46-F3390-30	SHOCK ABSORBER ASSY 2	2				

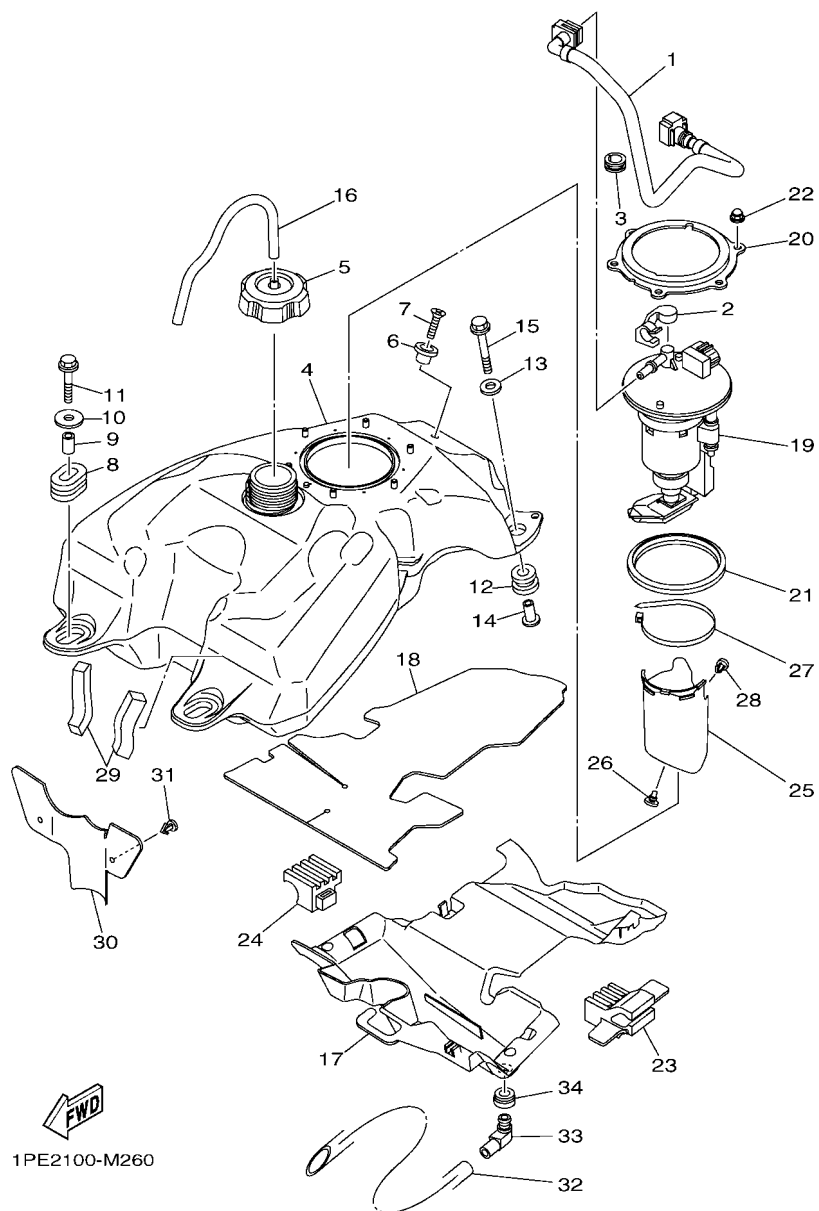


FIG. 26 FUEL TANK

REF. NO.	PART NO.	DESCRIPTION	USA				REMARKS
1	1PE-13971-00	PIPE, FUEL 1	1				
2	90464-14004	CLAMP	1				
3	90480-17011	GROMMET	1				
4	1PE-F4110-00	FUEL TANK COMP.	1				
5	2FJ-24610-10	CAP ASSY	1				
6	4EW-2412F-00	BRACKET, SEAT	1				
7	90151-06005	SCREW, COUNTERSUNK	1				
8	90480-01017	GROMMET	2				
9	90387-06M17	COLLAR	2				
10	90201-06090	WASHER, PLATE	2				
11	95802-06035	BOLT, FLANGE	2				
12	90480-18005	GROMMET	2				
13	90201-06033	WASHER, PLATE	2				
14	90387-06098	COLLAR	2				
15	95802-06035	BOLT, FLANGE	2				
16	90445-083J4	HOSE (L340)	1				
17	1S3-2414H-00	DAMPER, PLATE 1	1				
18	1PE-F416F-00	INSULATOR, FUEL TANK 1	1				
19	1S3-13907-10	FUEL PUMP COMP.	1				
20	1S3-24491-10	BRACKET, FUEL PUMP	1				
21	1S3-24486-00	O-RING	1				
22	95302-06800	NUT, CROWN	6				
23	1S3-24278-00	STOPPER 1	1				
24	1S3-24279-00	STOPPER 2	1				
25	1S3-24452-00	COVER	1				
26	90338-05008	PLUG	2				
27	90464-66001	CLAMP	1				


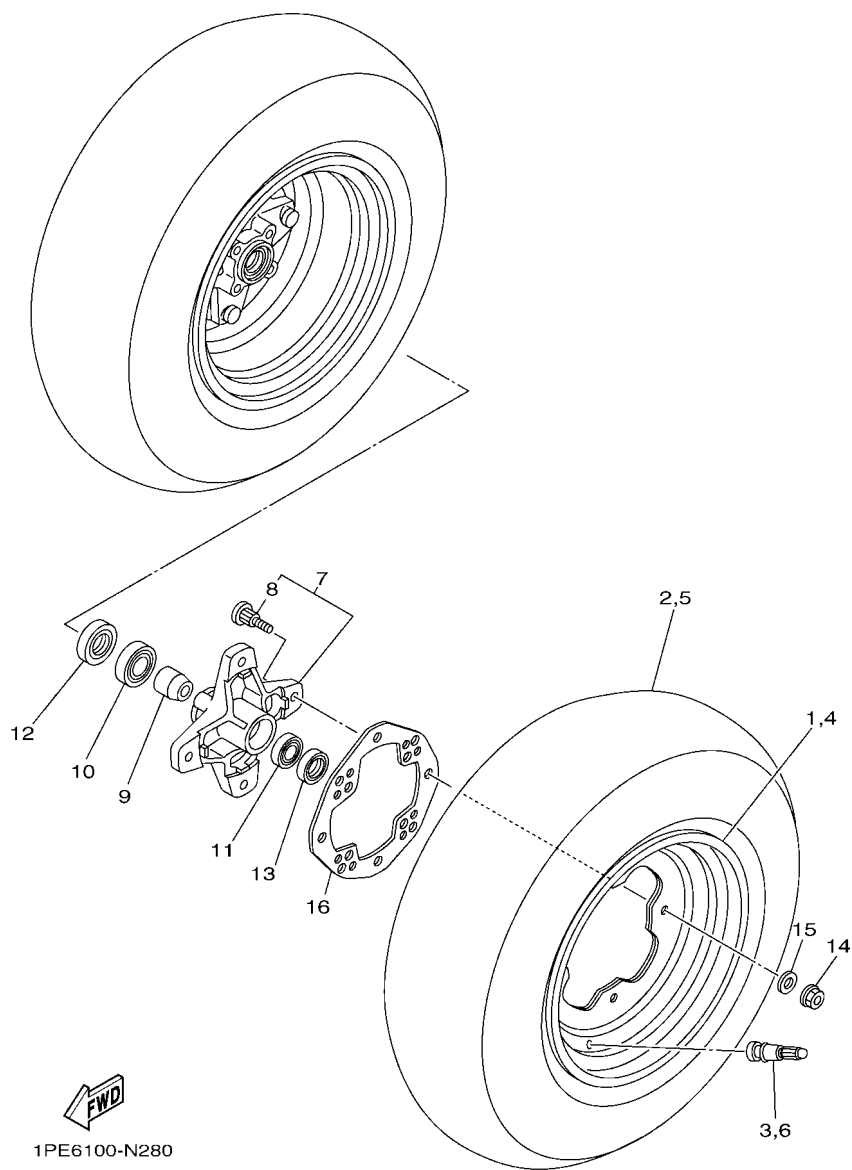



FIG. 28 FRONT WHEEL

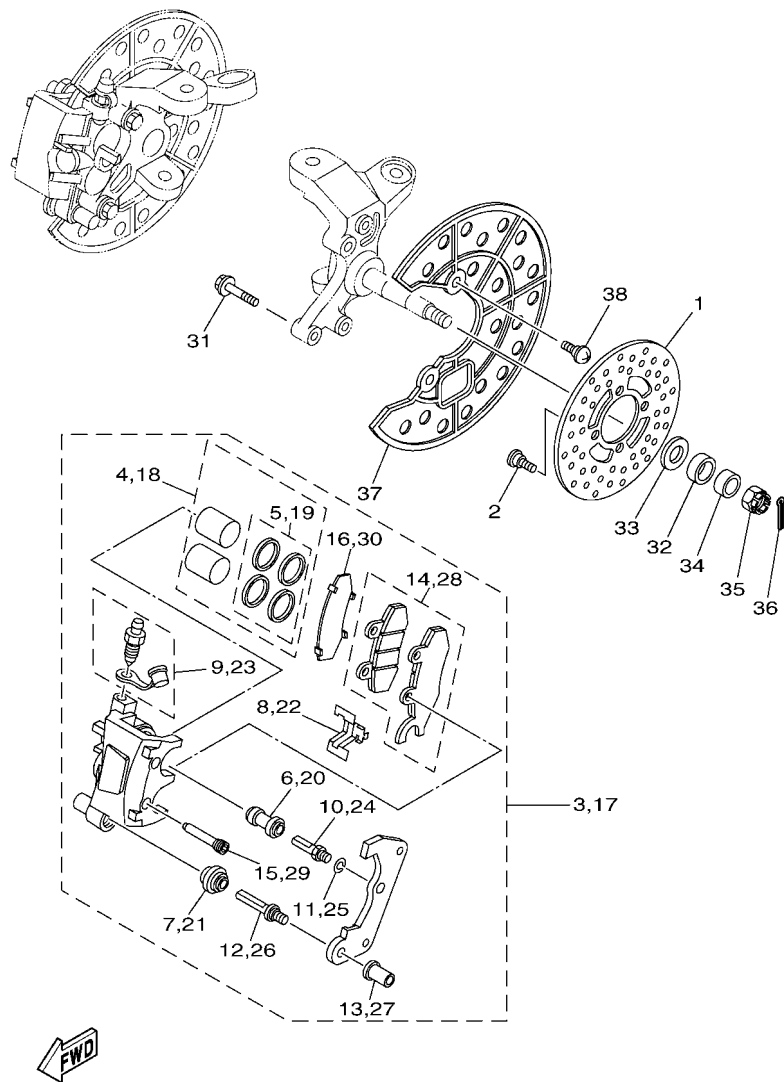

1PE2100-M290

FIG. 29 FRONT BRAKE CALIPER

REF. NO.	PART NO.	DESCRIPTION	USA				REMARKS
1	4XE-F582T-11	DISC, BRAKE (LEFT)	2				
2	90109-08082	BOLT	8				
3	1S3-2580T-01	CALIPER ASSY (LEFT)	1				
4	5TG-W0057-00	.PISTON ASSY, CALIPER	1				
5	3LC-W0047-50	..CALIPER SEAL KIT	1				
6	1UY-25937-51	.BOOT 2	1				
7	3JD-25917-00	.BOOT, CALIPER	1				
8	3JD-25919-00	.SUPPORT, PAD	1				
9	1UY-W0048-50	.BLEED SCREW KIT	1				
10	1UY-25926-51	.BOLT	1				
11	1UY-25938-51	.WASHER, SPRING	1				
12	3JD-25926-00	.BOLT	1				
13	3JD-25961-00	.NUT	1				
14	1S3-W0045-00	.BRAKE PAD KIT	1				LH
15	5TG-25924-00	.PIN, PAD	2				
16	1S3-25828-00	.SHIM, CALIPER	1				
17	1S3-2580U-01	CALIPER ASSY (RIGHT)	1				
18	5TG-W0057-00	.PISTON ASSY, CALIPER	1				
19	3LC-W0047-50	..CALIPER SEAL KIT	1				
20	1UY-25937-51	.BOOT 2	1				
21	3JD-25917-00	.BOOT, CALIPER	1				
22	3JD-25919-00	.SUPPORT, PAD	1				
23	1UY-W0048-50	.BLEED SCREW KIT	1				
24	1UY-25926-51	.BOLT	1				
25	1UY-25938-51	.WASHER, SPRING	1				
26	3JD-25926-00	.BOLT	1				
27	3JD-25961-00	.NUT	1				

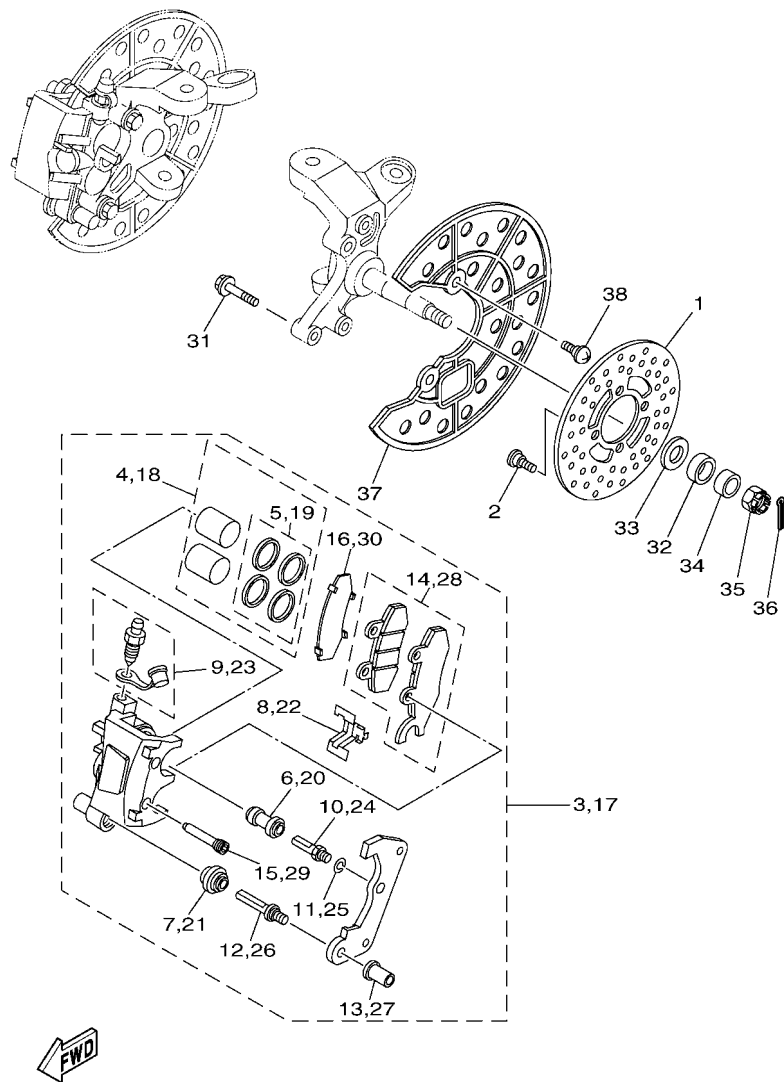

1PE2100-M290

FIG. 29 FRONT BRAKE CALIPER

REF. NO.	PART NO.	DESCRIPTION	USA				REMARKS
28	1S3-W0045-10	.BRAKE PAD KIT	1				RH
29	5TG-25924-00	.PIN, PAD	2				
30	1S3-25828-00	.SHIM, CALIPER	1				
31	90105-08184	BOLT, FLANGE	4				
32	90387-20005	COLLAR	2				
33	90201-20022	WASHER, PLATE	2				
34	90387-150R1	COLLAR	2				
35	90171-14002	NUT, CASTLE	2				
36	91402-30025	PIN, COTTER	2				
37	5TG-2514A-00	RING, WHEEL 1	2				
38	90149-06117	SCREW	4				

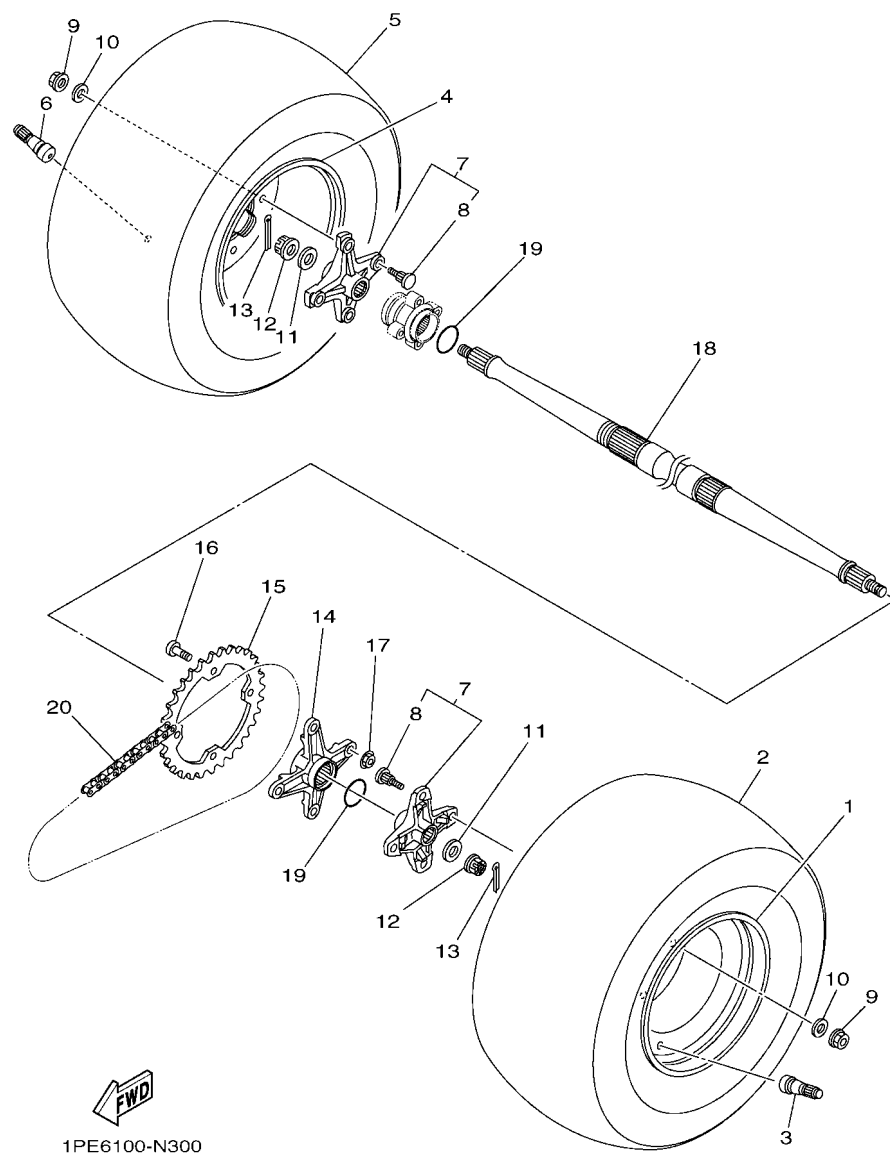


FIG. 30 REAR WHEEL

REF. NO.	PART NO.	DESCRIPTION	QTY				REMARKS
1	1TD-F5390-11	REAR WHEEL COMP.	1				
2	94110-09801	TIRE (AT20X10-9 M976Y)	1				MAXXIS
3	93900-00813	VALVE, RIM (TR413)	1				MAXXIS
4	1TD-F5390-11	REAR WHEEL COMP.	1				
5	94110-09801	TIRE (AT20X10-9 M976Y)	1				MAXXIS
6	93900-00813	VALVE, RIM (TR413)	1				MAXXIS
7	1PE-F53K0-00	WHEEL SHAFT COLLAR ASSY	2				
8	90114-10020	.BOLT, SERRATION	4				
9	95702-10500	NUT, FLANGE	8				
10	92902-10200	WASHER	8				
11	90201-16023	WASHER, PLATE	2				
12	90171-16002	NUT, CASTLE	2				
13	90252-03001	PIN, COTTER	2				
14	1PE-F5386-00	COLLAR, SPROCKET AXLE	1				
15	5TG-25438-10	SPROCKET, DRIVEN (38T)	1				
16	90109-10013	BOLT	4				
17	90185-10011	NUT, SELF-LOCKING	4				
18	1S3-25381-10	AXLE, WHEEL	1				
19	93210-36769	O-RING	2				
20	94568-H6098	CHAIN (DID520VP2-T)	1				

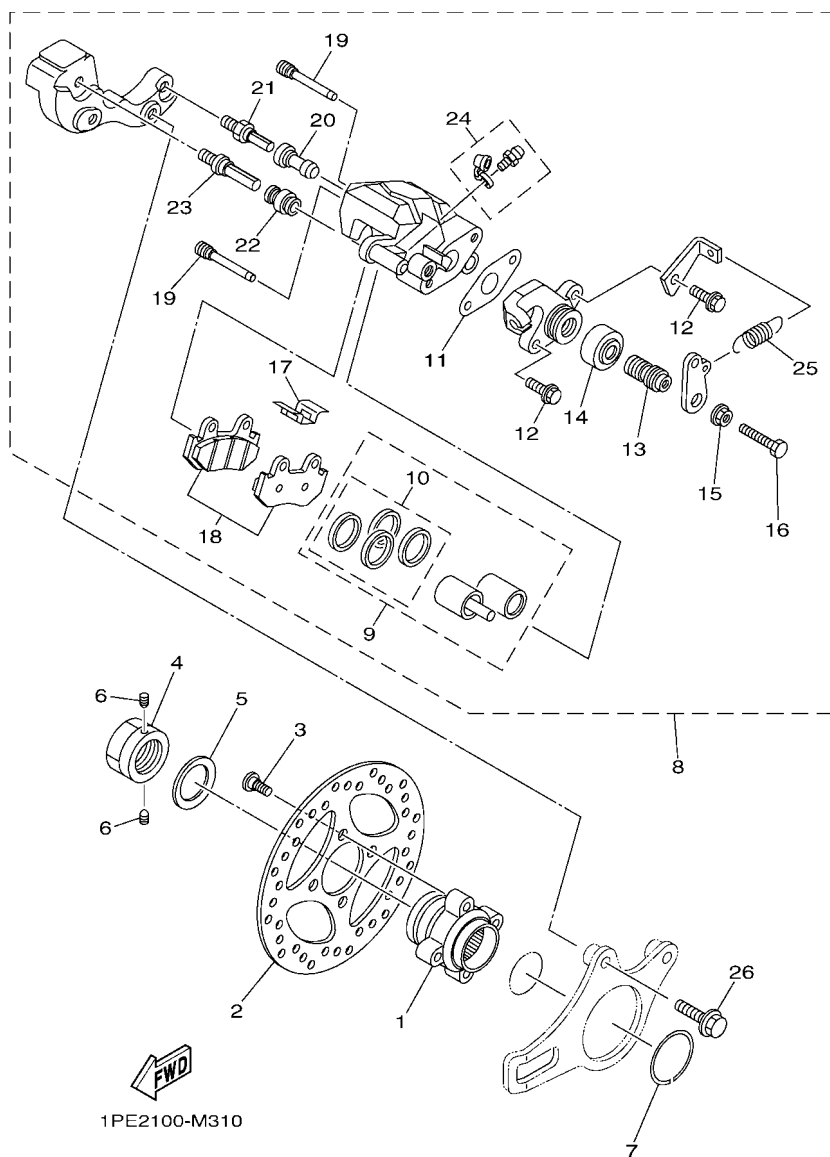


FIG. 31 REAR BRAKE CALIPER

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	1PE-F5712-00	BRACKET, DISC	1					
2	1PE-F582W-00	DISK, REAR BRAKE 2	1					
3	90109-08076	BOLT	4					
4	90179-36003	NUT	1					
5	90208-37001	WASHER, CONICAL SPRING	1					
6	90113-06055	BOLT, SET	2					
7	1S3-25415-00	CIRCLIP	1					
8	5TG-2580W-21	CALIPER ASSY, REAR 2	1					
9	5TG-W0057-10	.PISTON ASSY, CALIPER	1					
10	5TG-W0047-00	..CALIPER SEAL KIT	1					
11	5TG-25975-00	.RUBBER, BUSHING	1					
12	5UG-25833-00	.BOLT, FITTING	2					
13	5TG-25978-00	.SHAFT L	1					
14	1UY-25974-51	.BOOT	1					
15	1UY-25973-51	.NUT	1					
16	5TG-25972-00	.ADJUST BOLT	1					
17	3LD-25934-01	.SPRING, PAD	1					
18	5TG-W0046-10	.BRAKE PAD KIT 2	1					
19	5DH-25933-00	.PIN, PAD	2					
20	1UY-25937-51	.BOOT 2	1					
21	3SP-25914-51	.PIN, SLIDE	1					
22	3JD-25917-00	.BOOT, CALIPER	1					
23	3SP-25926-51	.BOLT	1					
24	1UY-W0048-50	.BLEED SCREW KIT	1					
25	5TG-25977-50	.SPRING, RETURN	1					
26	90105-10405	BOLT, FLANGE	2					

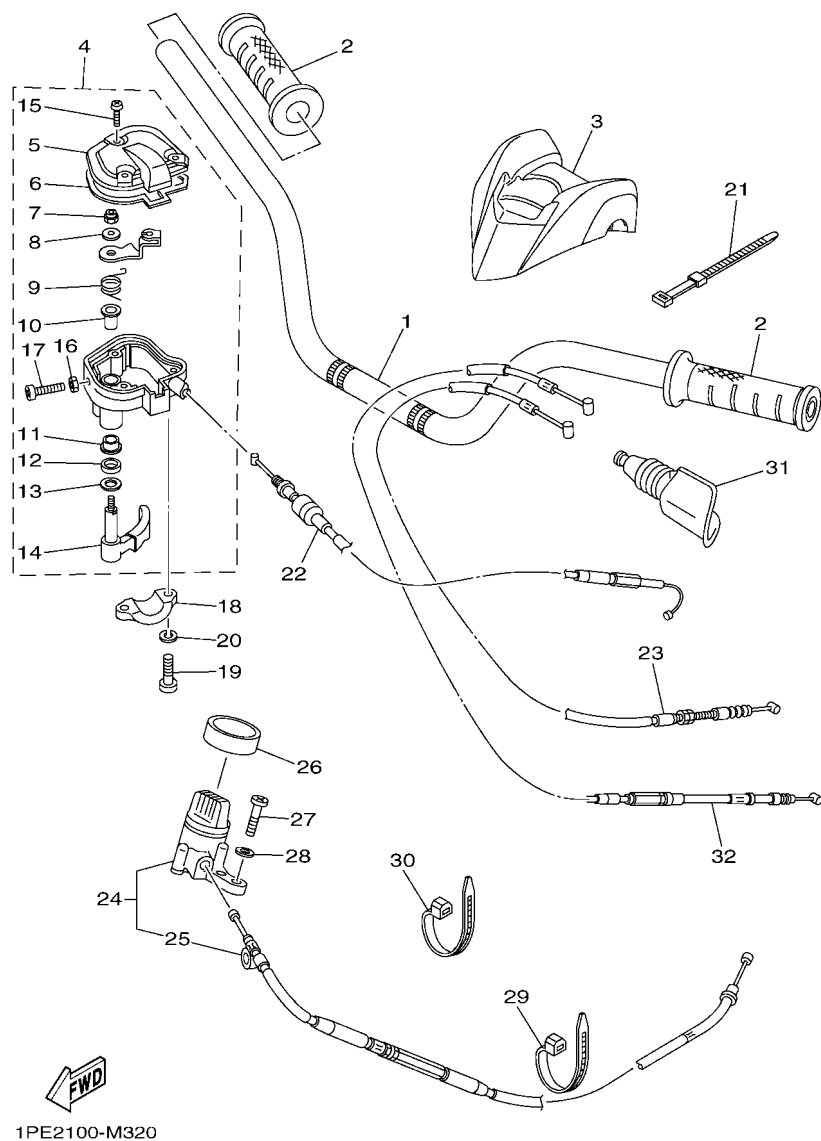


FIG. 32 STEERING HANDLE & CABLE

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	1PE-F6111-00	HANDLEBAR	1					
2	5FU-F6241-10	GRIP	2					
3	1PE-F6124-00	PROTECTOR, HANDLEBAR	1					
4	1S3-26250-00	THROTTLE LEVER ASSY	1					
5	1S3-2628F-00	.CAP, GEAR	1					
6	1S3-2628G-00	.GASKET	1					
7	95602-05100	.NUT, U	1					
8	1NV-26398-00	.WASHER	1					
9	1NV-26304-00	.SPRING	1					
10	1NV-26259-01	.COLLAR	1					
11	1NV-2625K-00	.COLLAR	1					
12	93104-09025	.OIL SEAL	1					
13	1NV-26129-00	.WASHER	1					
14	1S3-2625G-00	.LEVER, THROTTLE	1					
15	90149-04278	.SCREW	3					
16	95302-05700	.NUT, HEXAGON	1					
17	98502-05020	.SCREW, PAN HEAD	1					
18	1S3-82913-00	HOLDER, LEVER LOWER 1	1					
19	98502-05020	SCREW, PAN HEAD	2					
20	92902-05100	WASHER, SPRING	2					
21	437-83936-01	BAND, SWITCH CORD	4					
22	1S3-26311-10	CABLE, THROTTLE 1	1					
23	1S3-26335-01	CABLE, CLUTCH	1					
24	1S3-26150-10	REV. LEVER ASSY.	1					
25	1S3-2637E-10	.CABLE, CONTROL 1	1					
26	1S3-26113-00	DAMPER	1					
27	98502-05018	SCREW, PAN HEAD	2					

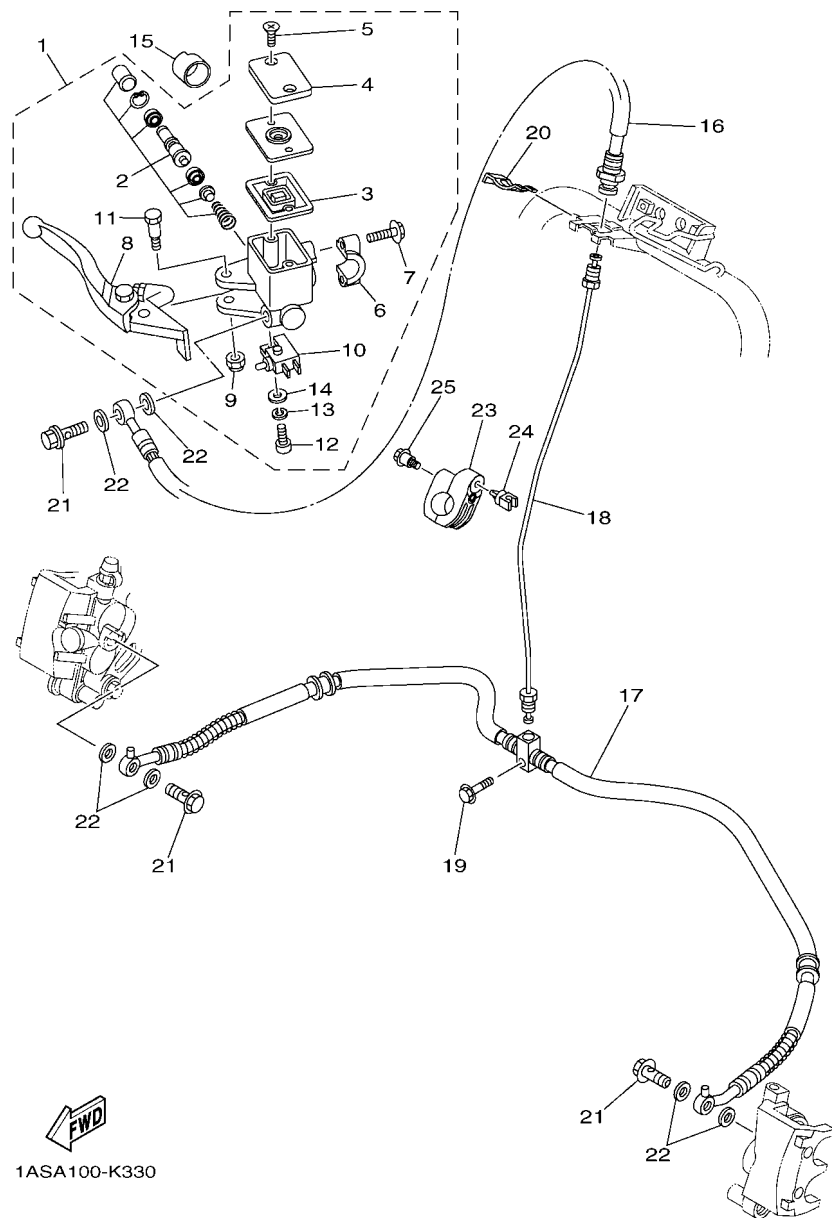


FIG. 33 FRONT MASTER CYLINDER

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	5D3-2583T-02	MASTER CYLINDER ASSY	1					
2	5D3-W0041-00	.CYLINDER KIT, MASTER	1					
3	4TT-25854-00	.DIAPHRAGM, RESERVOIR	1					
4	5YU-25852-00	.CAP, RESERVOIR	1					
5	98702-04012	.SCREW, FLAT HEAD	2					
6	5MV-25867-00	.BRACKET, MASTER CYLINDER	1					
7	5MV-25833-00	.BOLT, FITTING	2					
8	5D3-83922-01	.LEVER 2	1					
9	95701-06500	.NUT, WITH WASHER	1					
10	5D3-83980-00	.FRONT STOP SWITCH ASSY	1					
11	3B4-2589F-30	.BOLT, LEVER	1					
12	98502-04014	.SCREW, PAN HEAD	1					
13	92902-04100	.WASHER, SPRING	1					
14	92902-04600	.WASHER, PLATE	1					
15	1UY-26259-00	COLLAR	1					
16	1PE-F5872-00	HOSE, BRAKE 1	1					
17	5TG-25873-20	HOSE, BRAKE 2	1					
18	1PE-F5871-00	PIPE, BRAKE	1					
19	95822-06025	BOLT, FLANGE	1					
20	2GU-25866-00	CIRCLIP	1					
21	90401-10015	BOLT, UNION	3					
22	90201-10118	WASHER, PLATE	6					
23	1AS-25522-00	HOLDER	1					
24	5KM-81677-00	CLAMP 1	1					
25	90109-06241	BOLT	1					

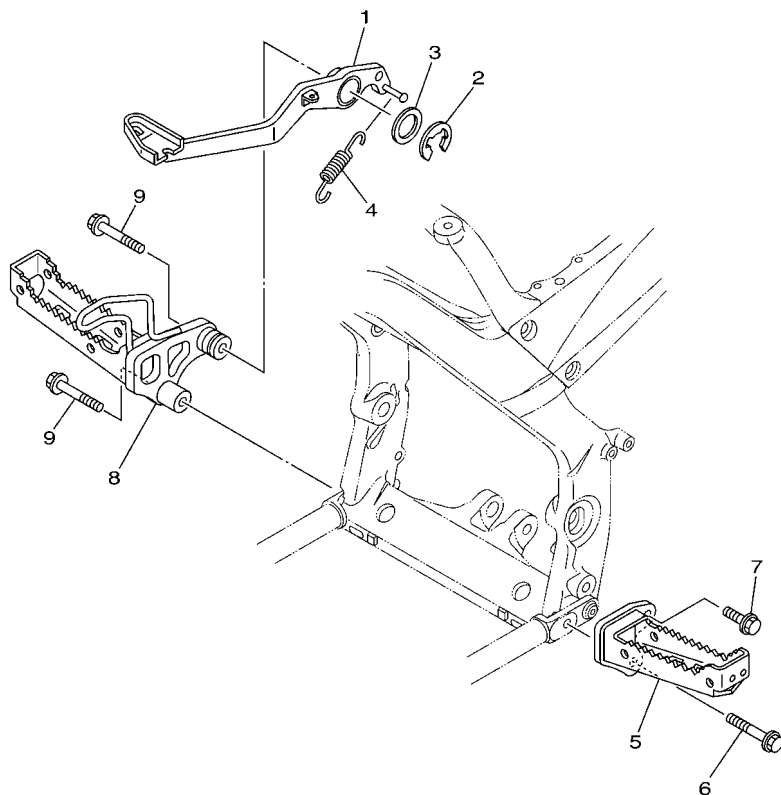


FIG. 34 STAND & FOOTREST

[illegible]

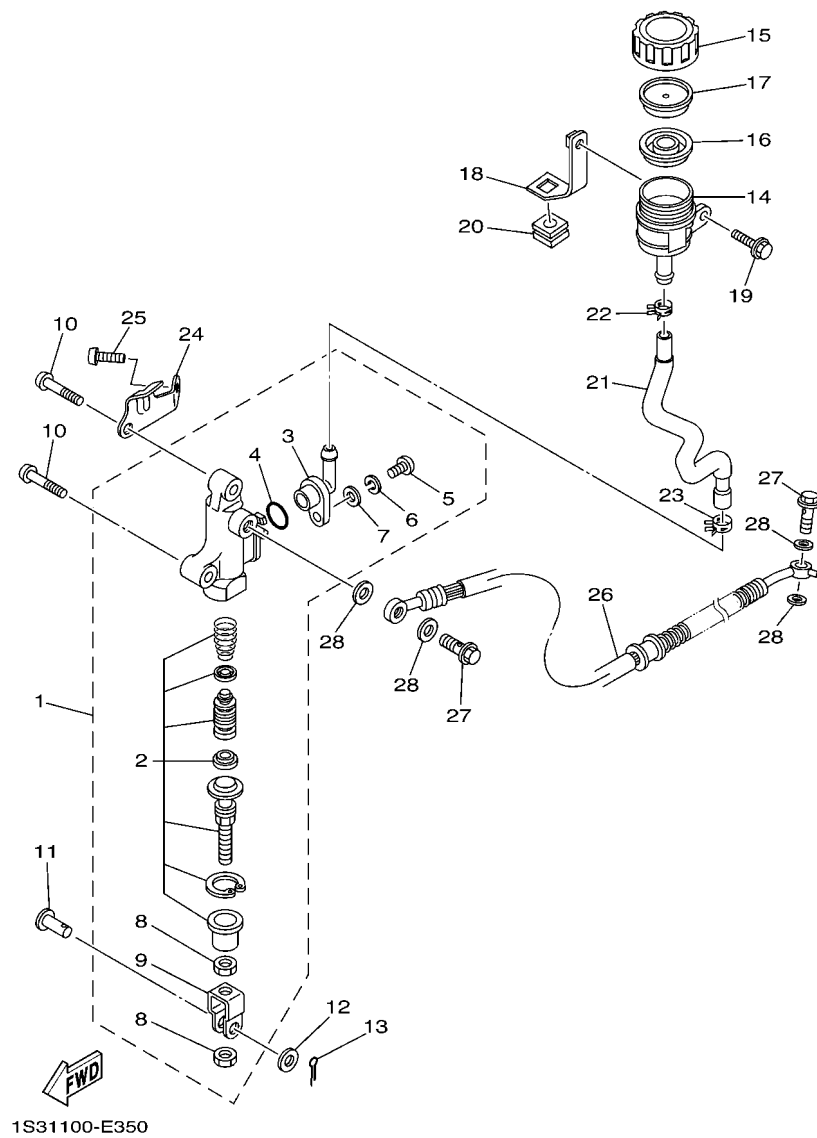


FIG. 35 REAR MASTER CYLINDER

REF. NO.	PART NO.	DESCRIPTION	USA				REMARKS
1	1S3-2580E-00	REAR MASTER CYLINDER ASSY	1				
2	1S3-W0042-50	.CYLINDER KIT, MASTER	1				
3	1AE-2582A-00	.JOINT	1				
4	93210-15620	.O-RING	1				
5	98506-04012	.SCREW, PAN HEAD	1				
6	92906-04100	.WASHER, SPRING	1				
7	92906-04600	.WASHER, PLATE	1				
8	4SS-27218-00	.NUT	2				
9	2YK-27222-00	.JOINT	1				
10	92012-08035	BOLT, BUTTON HEAD	2				
11	90240-08005	PIN, CLEVIS	1				
12	90201-08083	WASHER, PLATE	1				
13	91401-16012	PIN, COTTER	1				
14	5JJ-25894-01	TANK, RESERVOIR	1				
15	3XP-25852-50	CAP, RESERVOIR	1				
16	2VN-25854-00	DIAPHRAGM, RESERVOIR	1				
17	2VN-25855-00	BUSH,DIAPHRAGM	1				
18	1S3-26292-00	STAY	1				
19	90119-06137	BOLT, WITH WASHER	1				
20	90480-15009	GROMMET	1				
21	1PE-F5895-00	HOSE, RESERVOIR	1				
22	90467-11044	CLIP	1				
23	90467-14057	CLIP	1				
24	1S3-27453-01	COVER 1	1				
25	92012-08016	BOLT, BUTTON HEAD	1				
26	1PE-F5874-00	HOSE, BRAKE	1				
27	90401-10015	BOLT, UNION	2				

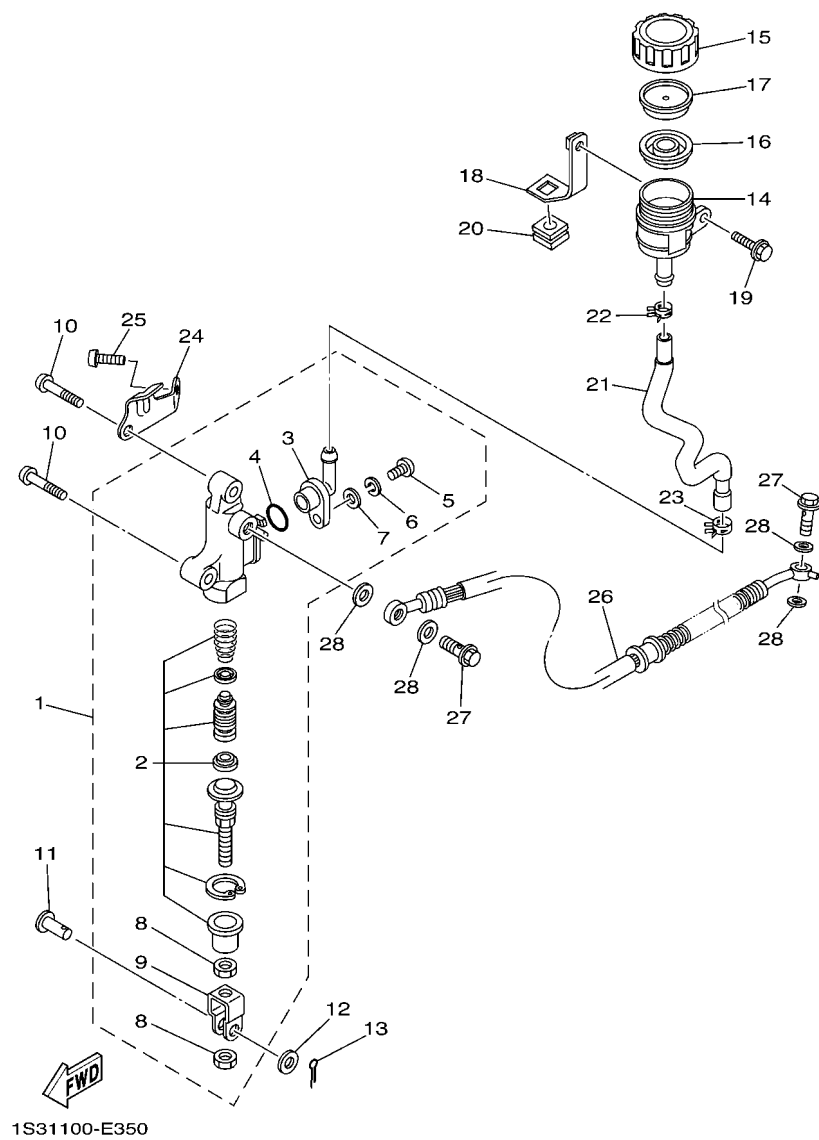


FIG. 35 REAR MASTER CYLINDER

[illegible]

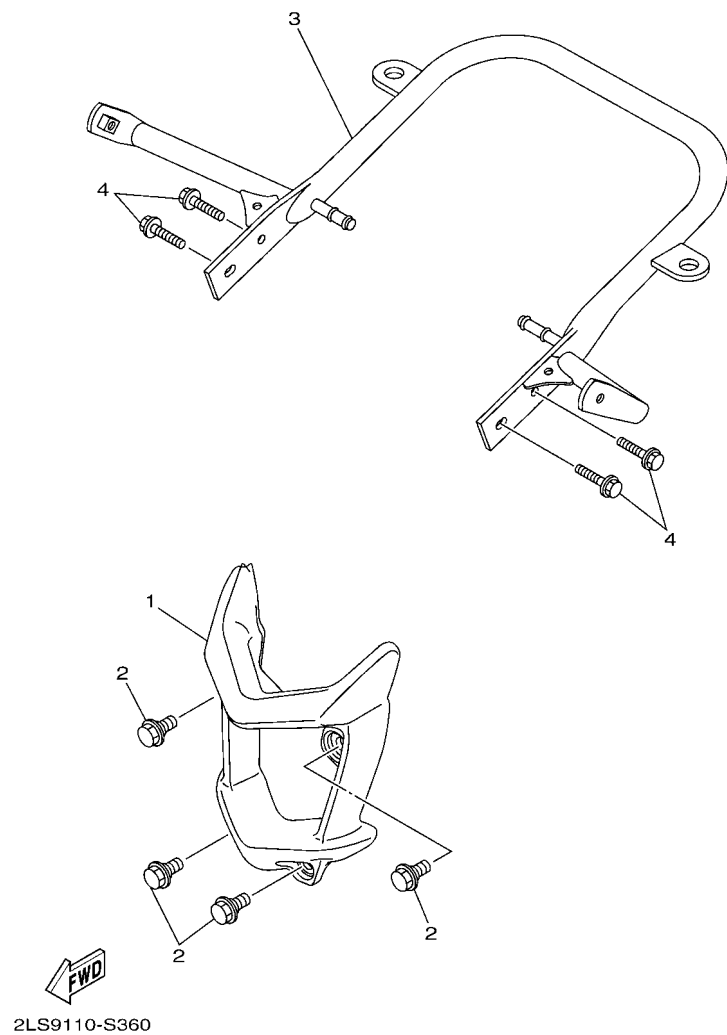


FIG. 36 GUARD

[illegible]

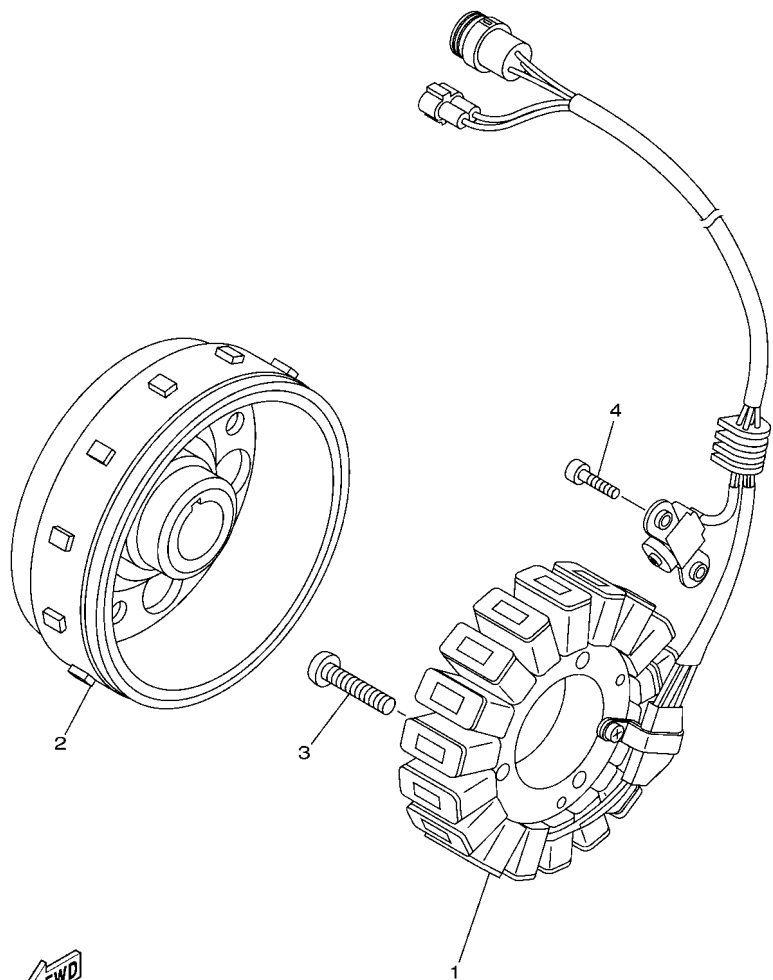


FIG. 37 GENERATOR

[illegible]

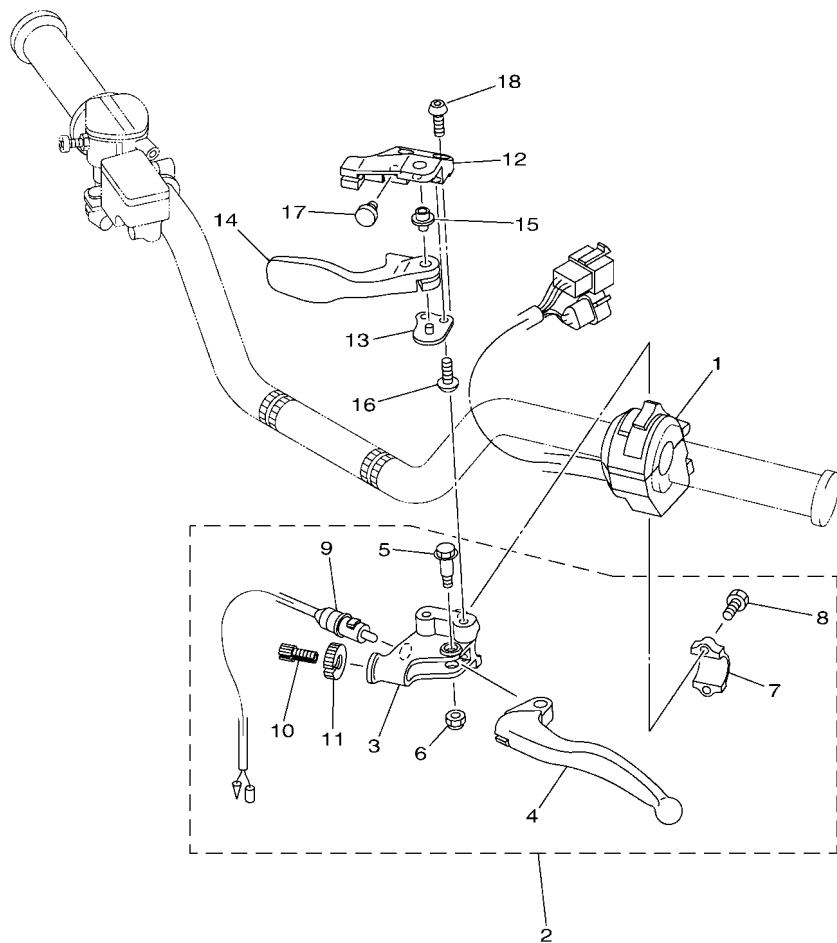


FIG. 41 HANDLE SWITCH & LEVER

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	1S3-83973-11	SWITCH, HANDLE 3	1					
2	5YT-82910-11	LEVER HOLDER ASSY (LEFT)	1					
3	5YT-82911-10	.HOLDER, LEVER 1	1					
4	2HT-83912-01	.LEVER 1	1					
5	90109-06798	.BOLT	1					
6	95602-06100	.NUT, S/L	1					
7	5TG-82913-00	.HOLDER, LEVER LOWER 1	1					
8	97002-05016	.BOLT	2					
9	5KM-82917-00	.SWITCH	1					
10	90123-08046	.BOLT	1					
11	90179-08148	.NUT	1					
12	5TG-25727-01	BRACKET, LEVER	1					
13	5D3-25689-00	PLATE, GUIDE	1					
14	5TG-25726-01	LEVER, BRAKE	1					
15	5TG-83923-00	COLLAR, LEVER 2	1					
16	92012-06014	BOLT, BUTTON HEAD	2					
17	90338-07007	PLUG	1					
18	92012-06016	BOLT, BUTTON HEAD	2					



1PE2100-M420

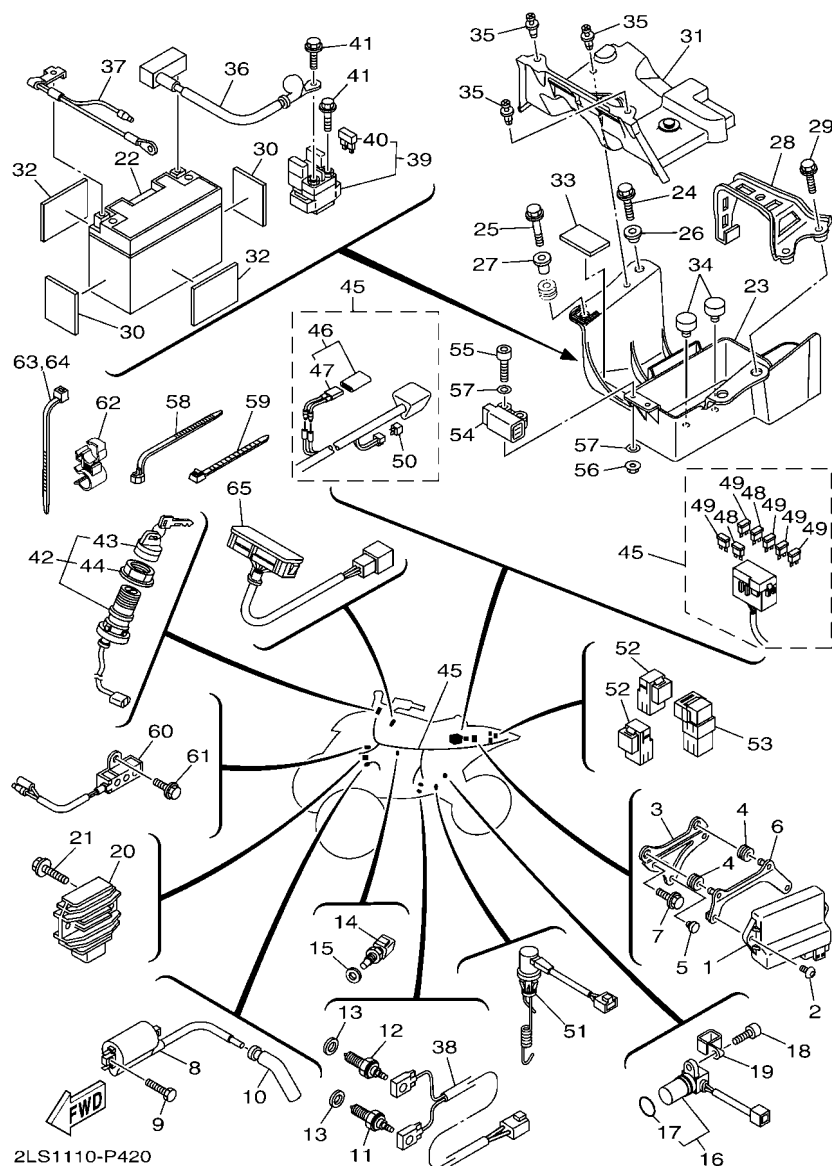


FIG. 42 ELECTRICAL 1

REF. NO.	PART NO.	DESCRIPTION	USA					REMARKS
1	2LS-8591A-00	ENGINE CONTROL UNIT ASSY	1					
2	92012-06010	BOLT, BUTTON HEAD	2					
3	2LS-F1274-00	BRACKET, C.D.I. UNIT	1					
4	90480-11224	GROMMET	2					
5	90338-07007	PLUG	1					
6	2LS-2830X-00	BRKT., CONTROL UNIT	1					
7	95812-06016	BOLT, FLANGE	2					
8	3TB-82310-00	IGNITION COIL ASSY	1					
9	97002-05020	BOLT	2					
10	5VK-82370-00	PLUG CAP ASSY	1					
11	5LP-82540-01	NEUTRAL SWITCH ASSY	1					
12	3GB-82540-01	NEUTRAL SWITCH ASSY	1					
13	90430-10148	GASKET	2					
14	5YP-85790-00	THERMOSENSOR ASSY	1					
15	90430-12202	GASKET	1					
16	1S3-83755-01	SENSOR, SPEED	1					
17	4D9-81168-00	.O-RING	1					
18	91312-06016	BOLT, HEXAGON SOCKET HEAD	1					
19	90461-10004	CLAMP	1					
20	5BN-81960-00	RECTIFIER & REGULATOR ASSY	1					
21	95812-06025	BOLT, FLANGE	2					
22	1PE-H2100-00	BATTERY ASSY (GS GT9B-4)	1					
23	1PE-H212B-00	BOX, BATTERY 1	1					
24	90105-06084	BOLT, FLANGE	1					
25	95802-06030	BOLT, FLANGE	1					
26	90387-06153	COLLAR	1					
27	90387-063E6	COLLAR	1					

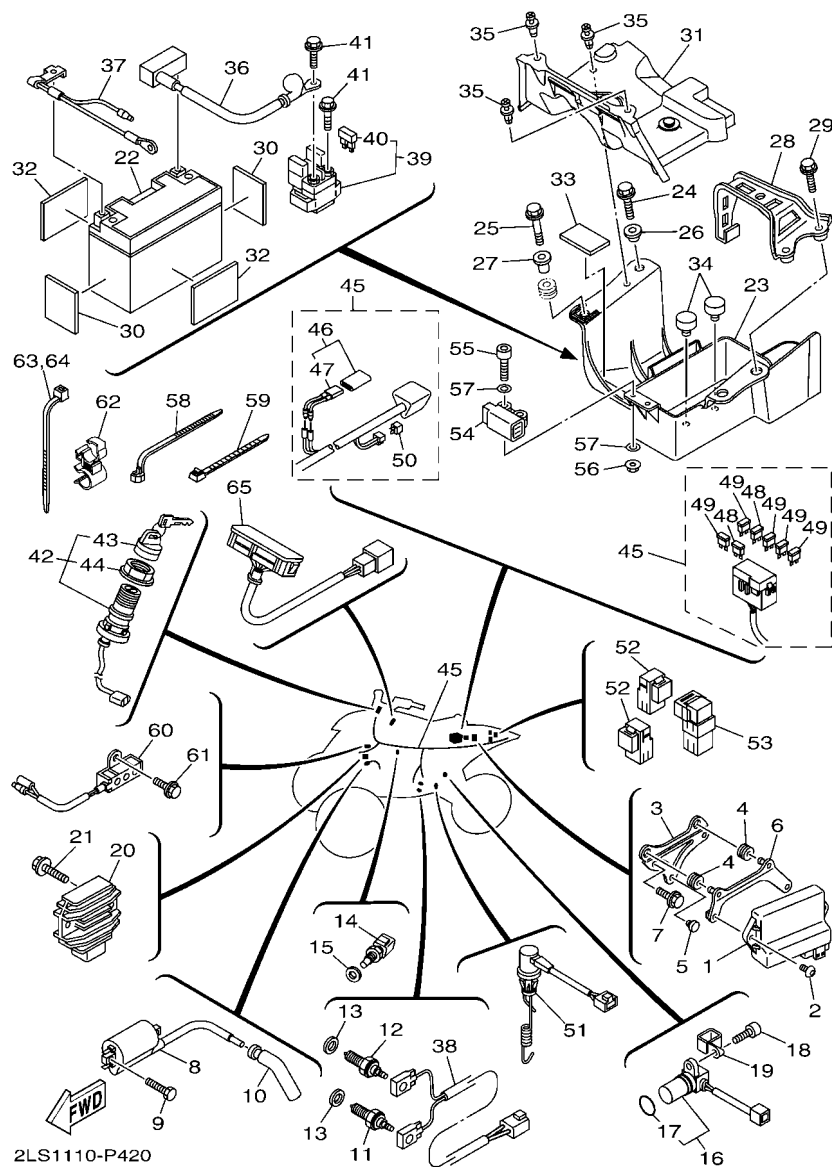


FIG. 42 ELECTRICAL 1

REF. NO.	PART NO.	DESCRIPTION	USA				REMARKS
28	1PE-H2128-00	BRACKET, BATTERY	1				
29	95802-06020	BOLT, FLANGE	2				
30	1S3-82123-00	SEAT, BATTERY	2				
31	1PE-H2129-00	COVER, BATTERY	1				
32	4HC-27415-00	PLATE, FOOTREST	2				
33	22F-2139X-00	DAMPER	1				
34	5TG-82121-10	PAD, BATTERY	2				
35	90269-06002	RIVET	3				
36	1PE-H2115-00	WIRE, PLUS LEAD	1				
37	1PE-H2116-00	WIRE, MINUS LEAD	1				
38	1S3-82541-00	WIRE, LEAD	1				
39	5UG-81940-00	STARTER RELAY ASSY (2768112-A)	1				
40	1AE-82151-00	.FUSE (30A-BL)	2				
41	95022-06008	BOLT, FLANGE	2				
42	4SH-82510-00	MAIN SWITCH ASSY	1				
43	3HN-82579-00	.CAP, KEY	1				
44	3HN-82569-00	.NUT, MAIN SWITCH	1				
45	2LS-82590-00	WIRE HARNESS ASSY	1				
46	3D5-82180-00	.CIRCUIT BREAKER ASSY	1				
47	3D5-82560-00	..THERMO SWITCH ASSY	1				
48	5JJ-82151-20	.FUSE (20A-BL)	2				
49	5JJ-82151-30	.FUSE (10A-BL)	5				
50	3WP-81980-00	.DIODE ASSY	1				
51	1S3-82530-10	STOP SWITCH ASSY	1				
52	1TP-81950-00	RELAY ASSY (1TP-00)	2				
53	5DM-81950-00	RELAY ASSY (G8HN-1C4T-DJ-Y52)	1				
54	5PS-82576-01	SENSOR, LEAN ANGLE	1				

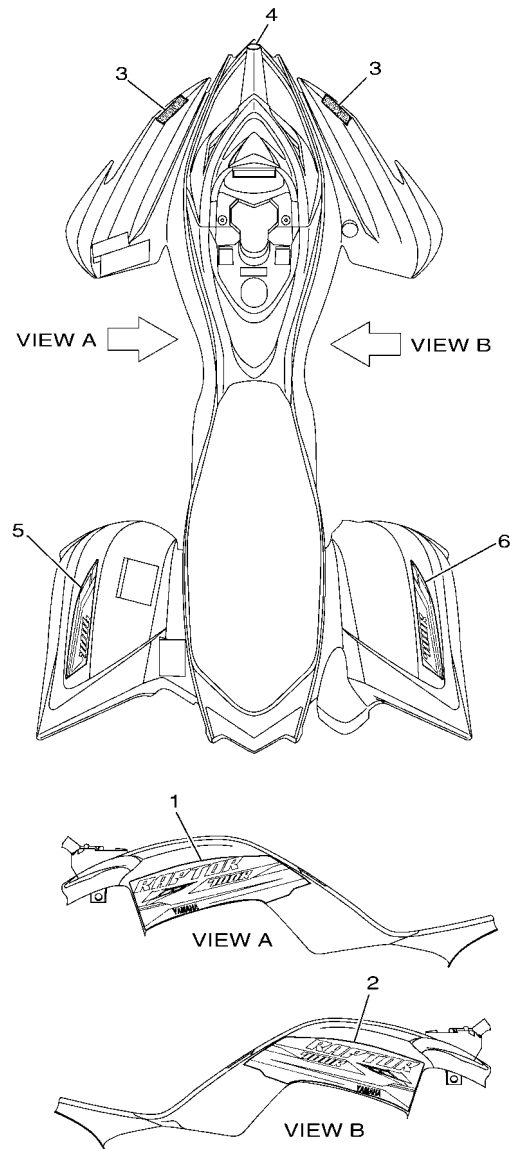


FIG. 43 GRAPHICS

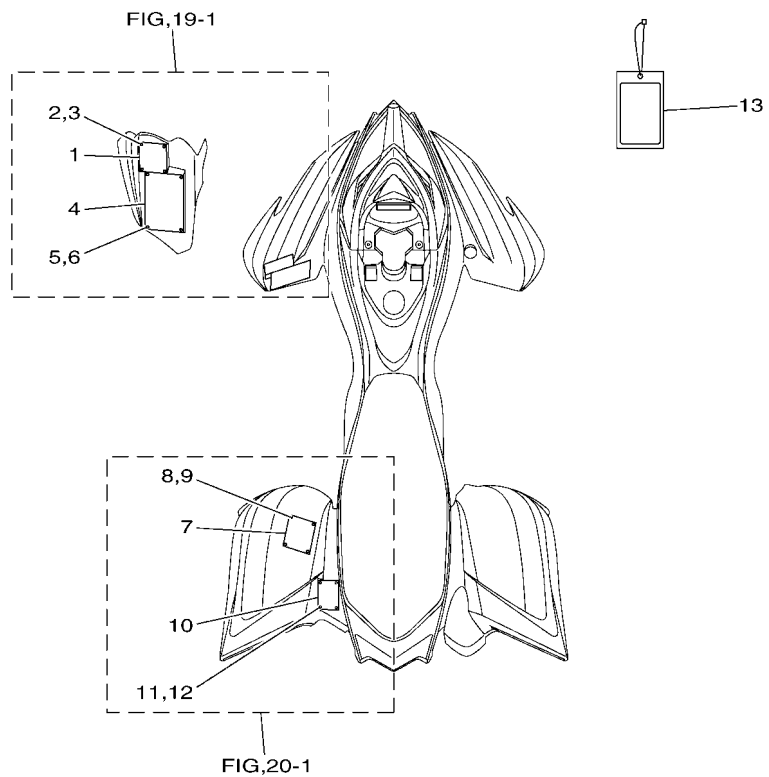


FIG. 44 EMBLEM & LABEL 1

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.
90114-10020	30 - 8	90201-04028	9 - 16	90214-22002	16 - 9	90387-06205	21 - 14	90461-10004	42 - 19	90508-35007	17 - 13
90119-06137	35 - 19	90201-04030	42 - 57	90214-22003	16 - 8	90387-063E6	42 - 27	90461-10011	13 - 22	90520-20001	19 - 19
90119-06152	21 - 5	90201-05017	11 - 15	90214-22003	16 - 21	90387-06M17	26 - 9		16 - 43	90560-06201	20 - 15
90119-10023	2 - 3	90201-05019	11 - 4	90214-26003	16 - 22	90387-08073	9 - 30	90462-08046	13 - 26	91312-04006	10 - 17
90122-06010	9 - 14	90201-05025	40 - 3	90215-16221	3 - 24	90387-090R0	24 - 18	90464-12045	18 - 33	91312-04025	42 - 55
90123-08046	41 - 10	90201-05037	11 - 5	90215-20006	15 - 3	90387-100Y6	25 - 16		32 - 30	91312-06012	8 - 25
90149-04278	32 - 15	90201-06033	26 - 13	90215-25003	16 - 46	90387-101R3	25 - 15		42 - 58	91312-06016	21 - 25
90149-05018	8 - 20	90201-06076	20 - 17	90240-08005	35 - 11	90387-12010	22 - 40	90464-13073	32 - 29		42 - 18
90149-06074	12 - 14	90201-06090	26 - 10	90252-03001	30 - 13		22 - 45	90464-14004	26 - 2	91312-06020	6 - 19
90149-06117	29 - 38	90201-063F3	22 - 33	90267-47187	22 - 54	90387-12021	22 - 30	90464-15011	42 - 62	91312-06025	5 - 17
90149-06298	11 - 12	90201-08048	11 - 19	90267-48138	9 - 15	90387-12028	22 - 48	90464-15157	40 - 8		13 - 13
90149-08049	14 - 8	90201-08053	18 - 20	90269-05055	26 - 31		23 - 4	90464-20213	18 - 32	91312-06030	1 - 8
90149-10034	18 - 3		20 - 25	90269-06002	19 - 20	90387-1504G	16 - 37	90464-23041	21 - 7	91312-06035	8 - 4
90151-06005	26 - 7	90201-08083	35 - 12		19 - 22	90387-150R1	29 - 34	90464-40825	42 - 64	91312-06040	2 - 4
90154-05043	20 - 13	90201-082A6	21 - 12		42 - 35	90387-16014	22 - 8	90464-66001	26 - 27	91312-06095	8 - 19
90159-06029	15 - 16	90201-10034	22 - 35	90269-07011	26 - 28	90387-17009	12 - 3	90465-13M11	42 - 59	91314-08035	11 - 17
90170-06128	4 - 12	90201-10035	22 - 43	90280-05001	3 - 7	90387-20005	29 - 32		42 - 63	91314-08040	22 - 11
90170-12054	24 - 7		25 - 31	90282-05005	3 - 22	90387-20021	16 - 27	90467-08003	21 - 6	91401-16012	35 - 13
90170-12055	24 - 6	90201-10036	23 - 8	90282-07003	15 - 2	90387-22006	16 - 6	90467-09006	10 - 22	91402-20020	24 - 10
90170-16326	3 - 23	90201-10037	25 - 21	90338-05008	26 - 26	90387-26004	16 - 24	90467-100A1	21 - 17		24 - 24
90170-20274	15 - 4		25 - 22	90338-07007	41 - 17	90387-26005	16 - 19	90467-11044	35 - 22		25 - 36
90171-10001	24 - 8	90201-10118	33 - 22		42 - 5	90387-28008	16 - 14	90467-11090	10 - 26	91402-20025	24 - 21
	24 - 22		35 - 28	90338-18266	9 - 20	90387-28009	16 - 41		10 - 27	91402-30025	29 - 36
	25 - 35	90201-10614	15 - 28	90338-20183	18 - 29	90401-08004	1 - 18	90467-13062	6 - 17	92012-06010	42 - 2
90171-14002	29 - 35	90201-12030	22 - 34	90338-23004	18 - 30	90401-10015	33 - 21	90467-14057	35 - 23	92012-06014	41 - 16
90171-16002	30 - 12	90201-12032	22 - 49		22 - 21		35 - 27	90467-140A4	12 - 8	92012-06016	41 - 18
90179-08148	41 - 11		23 - 5	90338-24260	18 - 28	90401-10024	8 - 23	90467-15012	9 - 6	92012-06025	20 - 14
90179-08674	18 - 11	90201-12040	17 - 16	90338-26004	18 - 27	90430-05126	8 - 21	90467-160A4	9 - 5	92012-06030	37 - 3
90179-16004	3 - 9	90201-12541	6 - 11	90340-14016	13 - 5	90430-06014	6 - 13	90467-17089	11 - 25	92012-08016	20 - 32
90179-20007	15 - 18	90201-12575	17 - 31	90340-14029	8 - 12		7 - 3	90467-220A1	9 - 25		35 - 25
90179-22011	16 - 47	90201-14021	24 - 19	90340-36004	13 - 7	90430-08119	1 - 19	90467-26189	7 - 9	92012-08020	20 - 30
90179-36003	31 - 4	90201-152P4	16 - 36	90380-08136	18 - 21	90430-10148	42 - 13	90480-01017	26 - 8	92012-08035	20 - 33
90183-06053	19 - 17	90201-16013	3 - 8	90380-10002	14 - 6	90430-10188	8 - 24	90480-11224	42 - 4		35 - 10
90185-10011	18 - 7	90201-16018	22 - 23	90380-22111	22 - 15	90430-12202	42 - 15	90480-13459	21 - 13	92902-04100	33 - 13
	18 - 13	90201-16023	30 - 11	90381-15088	25 - 13	90430-14043	8 - 34	90480-14101	40 - 7	92902-04600	33 - 14
	18 - 15	90201-177G4	17 - 15		25 - 14	90445-083J4	26 - 16	90480-14102	19 - 9	92902-05100	32 - 20
	30 - 17	90201-20022	29 - 33	90383-20032	22 - 28	90445-09777	21 - 4		39 - 5	92902-05600	32 - 28
90185-10012	22 - 36	90201-20276	16 - 29		22 - 38	90445-09M30	21 - 3		39 - 10	92902-06200	11 - 16
	22 - 44	90201-266F6	34 - 3	90387-06098	26 - 14	90445-11034	21 - 18	90480-15009	35 - 20	92902-06600	5 - 15
	23 - 9	90201-286K9	14 - 2	90387-06136	19 - 10	90445-16007	26 - 32	90480-17011	26 - 3	92902-08600	15 - 23
	25 - 23	90208-20001	15 - 17		39 - 11	90450-22017	21 - 22	90480-18005	26 - 12	92902-10200	28 - 15
	25 - 24	90208-37001	31 - 5	90387-06146	19 - 24	90450-32015	6 - 22	90480-18330	7 - 17		30 - 10
	25 - 30	90209-06096	9 - 13	90387-06153	20 - 4		6 - 25	90480-24004	21 - 16	92903-08600	22 - 12
90185-12007	22 - 50	90209-10229	24 - 9		20 - 6		7 - 16	90501-043E0	8 - 28	92906-04100	35 - 6
	23 - 6		24 - 23		40 - 6	90450-59006	9 - 28	90501-052G5	17 - 20	92906-04600	35 - 7
90185-14009	24 - 20		25 - 34		42 - 26	90450-72003	9 - 2	90501-230E4	15 - 15	93101-12173	6 - 9
90185-16002	22 - 24	90209-22008	16 - 3	90387-06166	7 - 19		9 - 3	90506-20026	34 - 4	93101-14164	13 - 19
90201-04027	22 - 55	90209-26008	16 - 16	90387-06204	20 - 23	90460-75020	9 - 26	90508-18018	15 - 21	93101-25106	3 - 21

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.
93102-12106	17 - 34	93315-31502	15 - 27	95302-05700	32 - 16	98502-05018	32 - 27				
93102-12224	17 - 24	93317-11096	15 - 25	95302-06800	26 - 22	98502-05020	32 - 17				
93102-15212	15 - 26	93317-22237	22 - 14	95302-06800	32 - 7		32 - 19				
93102-22216	28 - 13	93410-67085	22 - 10	95602-06100	41 - 6	98506-04012	35 - 5				
93102-25081	18 - 24	93430-23054	34 - 2	95602-06200	19 - 7	98507-05012	10 - 12				
93102-25099	18 - 25	93440-15012	16 - 35		20 - 8	98507-06010	10 - 8				
93102-35393	16 - 40	93440-25084	16 - 4		20 - 16	98507-06012	10 - 11				
93104-09025	32 - 12	93440-28062	16 - 17		20 - 24	98702-04012	33 - 5				
93105-26026	28 - 12	93450-24154	3 - 14	95602-08200	20 - 27	98902-06010	11 - 14				
93106-22019	22 - 16	93503-08007	8 - 27	95612-08625	1 - 3	98980-06010	11 - 3				
93106-46003	22 - 4	93603-16219	6 - 14	95701-06500	33 - 9	99001-07600	15 - 24				
93109-20076	22 - 29	93608-30002	17 - 23	95702-04500	42 - 56	99002-10600	17 - 32				
93112-31800	24 - 14	93612-16254	1 - 10	95702-08500	11 - 20	99009-10400	15 - 29				
93210-07135	8 - 17	93700-06004	22 - 32	95702-10500	28 - 14	99009-11400	8 - 6				
	12 - 16		22 - 41		30 - 9	99009-12400	6 - 16				
93210-10197	8 - 30		22 - 47	95802-06010	40 - 5	99009-17400	17 - 14				
	21 - 20		25 - 25	95802-06020	42 - 29	99009-20400	16 - 30				
93210-13361	8 - 3		25 - 26	95802-06030	7 - 20	99009-30400	25 - 3				
93210-14369	13 - 6	9383G-14231	16 - 45		42 - 25		25 - 6				
93210-15620	35 - 4	93900-00813	28 - 3	95802-06035	26 - 11		25 - 9				
93210-16629	21 - 24		28 - 6		26 - 15		25 - 12				
93210-207A0	13 - 25		30 - 3	95812-06010	42 - 61	99530-08016	12 - 15				
93210-21190	21 - 10		30 - 6	95812-06012	17 - 30	99530-10114	8 - 31				
93210-25001	16 - 39	94107-10803	28 - 2	95812-06016	42 - 7		12 - 2				
93210-33786	6 - 20		28 - 5	95812-06020	21 - 15		13 - 3				
93210-357A3	13 - 8	94110-09801	30 - 2	95812-06025	19 - 11	99530-10120	13 - 16				
93210-36769	30 - 19		30 - 5		20 - 22	99530-14016	12 - 17				
93210-41042	7 - 7	94568-H6098	30 - 20		39 - 12						
93210-61750	6 - 5	94591-57126	5 - 11		42 - 21						
93210-64297	8 - 16	94701-00330	1 - 9	95812-06030	38 - 11						
93210-78544	1 - 15	95022-06008	42 - 41	95812-08016	21 - 11						
93210-96601	1 - 12	95022-06010	7 - 4	95812-08045	18 - 22						
93304-20812	22 - 3	95022-06012	11 - 9	95812-10030	34 - 7						
93306-00106	6 - 6		22 - 58	95812-10055	18 - 6						
93306-00304	15 - 14	95022-06016	21 - 21	95812-10090	18 - 14						
93306-00415	16 - 31	95022-06020	1 - 13	95812-10110	18 - 12						
93306-00431	16 - 12		1 - 16	95822-06012	2 - 6						
93306-00446	28 - 10		7 - 5	95822-06025	33 - 19						
93306-00502	3 - 20	95022-06025	6 - 8	95822-08016	20 - 28						
93306-07209	5 - 6		8 - 32	95822-08020	20 - 26						
93306-20231	28 - 11	95022-06030	12 - 4	95822-08030	24 - 12						
93306-20352	18 - 23		13 - 4	97002-05016	41 - 8						
93306-20481	3 - 19		13 - 17	97002-05020	42 - 9						
93306-20501	16 - 11	95022-06045	7 - 6	97022-06014	16 - 44						
93306-27803	16 - 32	95022-06050	6 - 23	97022-06016	5 - 14						
93306-30810	3 - 10	95022-06070	12 - 5	97022-08060	24 - 16						
93306-90509	17 - 2	95022-06090	12 - 6	97702-50016	40 - 2						
93310-84037	3 - 5	95022-06110	6 - 24	98502-04014	33 - 12						